

Quick Start Guide



 
Step A *Connect*

Step B *Setup*


Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.




Remote Control

 

1 x MP3 link cable



 Quick Start Guide



User Manual

PHILIPS


Step A *Connect*

1 Connect the speaker cables.

2 Connect the AC power cord to the wall socket.

Tip

See the *User Manual* for how to connect other equipment to this system.

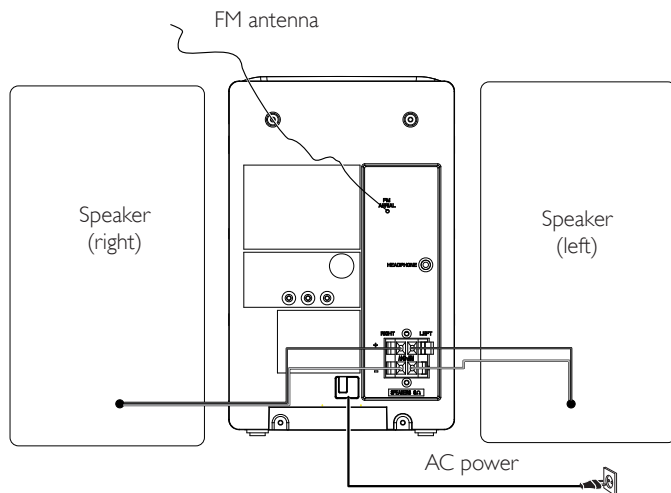

Step B *Setup*

Set clock

1 Press and hold **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to activate the clock setting mode.

2 Press **PROG** repeatedly to select 12 hour or 24 hour format.


3 Press **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to confirm.
→ The hour digits are displayed and begin to blink.

4 Press **◀/▶** (or **◀/▶** on the remote control) to set the hour.

5 Press **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to confirm.
→ The minute digits are displayed and begin to blink.

6 Press **◀/▶** (or **◀/▶** on the remote control) to set the minute.

7 Press **CLOCK** (or **CLOCK/DISPLAY** on the remote control) to confirm.

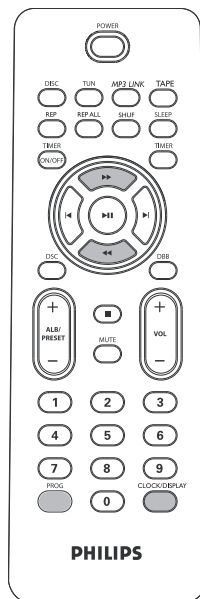

Play disc

-
- PULL TO OPEN
- STANDBY/MON
- DISC
- OVER
- SOURCE
- PROG
- CLOCK
- PRESET ALBUM
- VOLUME
- MP3/USB
- PHILIPS**

Listen to radio

-
- The diagram shows the layout of the Philips remote control with the following controls:
- POWER**: A large oval button at the top.
 - TOP ROW**: Four small oval buttons labeled **TSC**, **TUN**, **MP3 LINK**, and **TAPE**.
 - SECOND ROW**: Four small oval buttons labeled **REP**, **REP ALL**, **SKIP**, and **SLEEP**.
 - THIRD ROW**: A small oval button labeled **TIME**, a large circular **NAVIGATION PAD** with a central **HI** button and four arrow buttons (up, down, left, right), and a small oval button labeled **TIME2**.
 - FOURTH ROW**: A small oval button labeled **DISC**, a large oval **DISC** button with a plus sign and a minus sign, and a small oval button labeled **DISC**.
 - FIFTH ROW**: A small oval button labeled **ALB/ PRESET**, a small square **MUTE** button, and a large oval **VOL** button with a plus sign and a minus sign.
 - SIXTH ROW**: Three small oval buttons labeled **1**, **2**, and **3**.
 - SEVENTH ROW**: Three small oval buttons labeled **4**, **5**, and **6**.
 - EIGHTH ROW**: Three small oval buttons labeled **7**, **8**, and **9**.
 - NINTH ROW**: A small oval button labeled **PROG**, a small oval button labeled **0**, and a small oval button labeled **CLOCK/REPLAY**.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

