

Register your product
and get support at
www.philips.com/welcome

SRP1103/27



EN User Manual

PHILIPS

Table of contents

1	Your SRP1103	2
2	Getting started	3-7
2.1	Inserting the batteries	3
2.2	Setting up the universal remote control	3-7
3	Using the universal remote control	7-11
3.1	Buttons and functions	7-10
3.2	Resetting a button to its original function	11
4	Service and support	12-16
4.1	Frequently asked questions	12-14
4.2	Need help?	14
	FCC Compliancy	15
	Notice for Canada	16
	Helpline	17
	Brand list	18-31

1 Your SRP1103

Congratulations on your purchase of the Philips SRP1103 universal remote control. After setting up the remote control you can operate up to 3 different devices with it.

Simple Setup

The universal remote control comes with the innovative Simple Setup technology.

After setup, the SRP1103 can operate TV, DVD player / recorder (including Blu-ray player) and all common Cable, Satellite and other set top boxes, such as DirecTV, Comcast, AT&T, Verizon, Time Warner, Scientific Atlanta, TiVo and many more.

 
Simply follow the instructions in chapter 2.2 to set up the remote control for your devices.

To fully benefit from the support that Philips offers, register your product at: www.philips.com/welcome

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

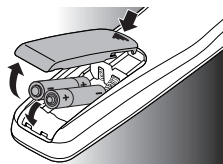

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

2.2 Setting up the universal remote control

The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (DVD player / recorder and Cable / Satellite box) which you want to operate, using the SRP1103.

The remote control can be set up to operate any 3 of the following devices:

Device name	Description
TV	Traditional TV, LCD / Plasma TV and projection TV, TV part of TV / DVD combos
DVD	DVD player / recorder (DVDR), DVD / Hard Disk Drive combination (DVDR-HDD), Blu-Ray player, High Definition DVD player (HD-DVD), DVD part of TV / DVD-combos

CBL/SAT	Cable box, satellite receiver; Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV) and TiVo
---------	--

Example: setting up the universal remote control to operate your TV:

- 1 **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.
- 2 **Press and hold** the  device selection button **for 5 seconds** until the red Setup light  blinks.
 - The remote control is now in setup mode.
- 3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.

A 4-digit code is shown for each brand. Use the digit buttons to enter the code for your brand.

 - If the red Setup light  turns off, an invalid code was entered. In this case, try again.
- 4 Aim the remote control at the TV. **Press and hold** the  button. Release it **immediately** as soon as the TV switches off.
 - This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.



- 5 **Switch ON** the TV. Try out the buttons you need for operating it. Try, for example, if the - CH + and digit buttons function properly.



- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.2.
- 6 Press the  device selection button **twice** to finish setup.
 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.



! Important

If you made a mistake:

- Press the device selection button **twice** to exit setup. The red Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Setting up the remote control for other devices (DVD player / recorder and Cable / Satellite box)

- 1 Make sure the device is switched on and operational. E.g. insert a disc in the DVD player / recorder.
- 2 Then follow steps 2 to 6 of 'Setting up the universal remote control to operate your TV'. Make sure to use the correct device selection button:  or .

2.2.2 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected. In this case you can have the remote control search for alternatives.

Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player; make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

 
After initial setup

- 1 Make sure the receiving device is able to respond.
E.g. when you try to repair the Play button for your DVD player; make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Select the device that you wish to operate (e.g. DVD). Press the **DVD** device selection button to select DVD.



- 3 Keep buttons ① and ④ **pressed simultaneously for 5 seconds**.


- The red Setup light  lights up. The remote control is now in setup mode.

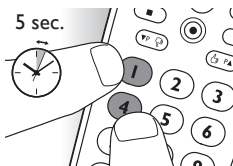

- 4 **Press and hold** the button that does not function and **immediately** release it when the device responds.
 - If the button still does not function as expected, try pressing it again for a longer period of time.

- 5 Press the **DVD** device selection button **twice** to save your settings and exit setup mode.

 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

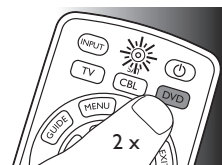


3 Using the universal remote control

3.1 Buttons and functions

The illustration on page 8 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.

Notes

 - Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP1103 (e.g. Info / Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP1103.

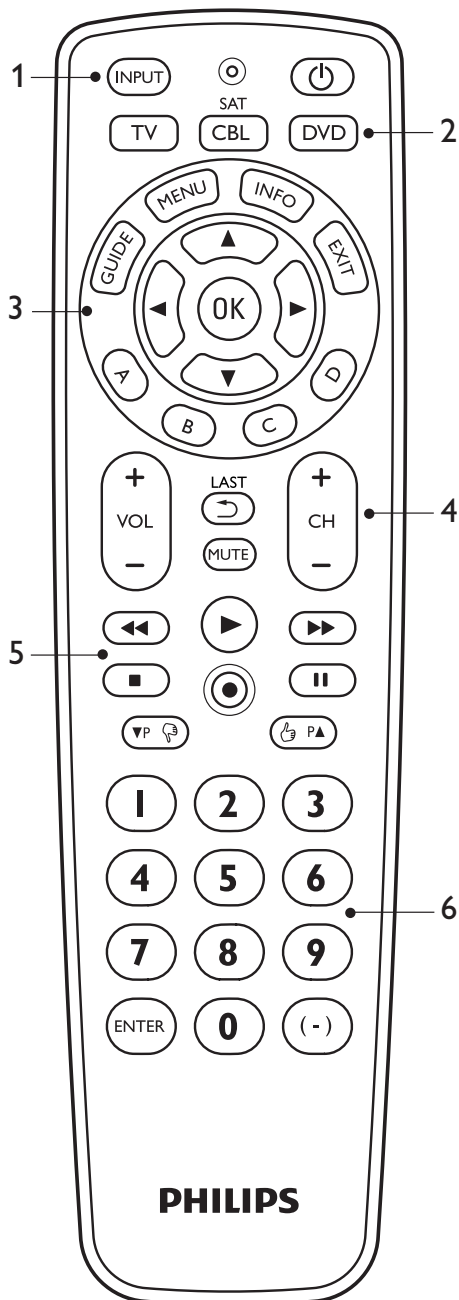


- 1 selects available source inputs (antenna, cable, etc.).
- setup light. Lights up when a remote control command is being sent, when you just selected a device and when the remote control is in setup mode.
- switches the selected device on / off.


Note

For some TV brands / types, the button will only turn off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.

 - 2 device selection buttons. Select the device to be operated.

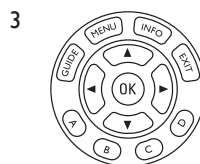

 - GUIDE** electronic program guide.
- MENU** menu on / off.
- INFO** on-screen channel information.
- EXIT** exits / clears on-screen menu displays.
- cursor up, down, left, right in a menu.
- OK** confirms your selection.
- A, B, C, D** context sensitivity buttons, ordered following the requirements for cable boxes. A - Yellow, B - Blue, C - Red, D - Green.



+ VOL - adjusts TV volume.

LAST previous program / Last / Back.

MUTE mutes TV sound.

+ CH - next / previous channel.



◀◀ rewind.

▶ play.

▶▶ fast forward.

■ stop.

● record.

|| pause.

▼P ▲P previous (▼P) / next (▲P) page / track in various modes.

👍 / 👎 set your Thumb ratings.

6 **1 2 3** digit buttons for direct channel / track selection.
4 5 6
7 8 9
0

ENTER used after direct channel selection. Some devices require **ENTER** to be pressed after channel selection.

(-) selects between one and two-figure channel numbers.

3.2 Resetting a button to its original function

If an improved button (see chapter 2.2.2) still does not function as expected, you can always reset the button to its original function.

- 1 In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light  lights up.



- The remote control is now in setup mode.

 
- 2 Press digit buttons **9**, **9** and **6**, in that order.

- After each button press the red Setup light  blinks once.



- 3 Press the button that you wish to reset **twice**. E.g. the **▶▶** button.

- After each button press the red Setup light  blinks once.
- The red Setup light  will blink one more time to confirm that the button was successfully reset to its original function.

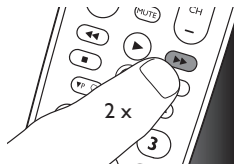

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1. After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV, DVD and CBL/SAT brands.

- You will find a complete brand list on page 18-31 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.2) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.2.

How do I set the remote control for my TV / DVD combo?

Some combo devices require you to set up two different source selection buttons to control both parts of the combo device. If you have a TV / DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV / DVD combo.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1. After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The device I want to operate does not respond at all / does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
 - Try improving buttons. See chapter 2.2.2.
- Wrong code selected during setup.
- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory for 5 minutes.



Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP1103, you can always contact us.

When calling our helpline, make sure to have the SRP1103 at hand when you call, so that our operators can help you determine whether the SRP1103 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP1103/27.

Date of purchase:

...../...../.....

(day/month/year)

For **online support** go to:

www.philips.com/welcome

- Click 'Support' and follow the on-screen instructions.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.



Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Caution

User changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice for Canada

This class B digital apparatus complies with Canadian ICES-003.



Helpline

Country

Phone number

United States of America /
Canada

001-888-744-5477



8880006 (DB1) Amphion Media
Works.....0135
Amplivision...0138
Ampro.....0139
Amstrad0140
AMTC4015 (DB1)
Amtron.....0141
AMW.....0143
Anam0146
Anam National
.....0147
Anglo0151
Anitech0154
Ansonic.....0156
Antronix.....0159
AOC.....0165
Aolinpiya.....4089 (DB1)
Apache.....0169
Apex3691
Apex Digital.0170
Apple0172
Arcam.....0179
Archer0180
Archos.....0181
Ardem.....0184
Aristona.....0192
Arrgo0197
Arris.....4931 (DB1)
Artec.....4016
Asberg.....0205
Asha.....0209
Aspire4233
Astar.....0218
Asuka.....0227
AT&T3453
Atlantic.....0233
Atori.....0237
Audio Dynamics
.....0248
Audiosonic...0264
Audioton0266
Audiovox.....0268
Autovox.....0280
Aventura.....0287
Awa0296
Axion0299

A
A.R. Systems.0012
ABC.....0013
Abex0014
ABS.....0016
Accele Vision4194
Access HD...3554
Accurian0022
Acer.....0028
Acura.....0036
ADC.....0040 (DB1)
Addison.....0043
Adelphia.....4195
Admiral.....0046
Advent.....0054
Adventura.....0055
Adyson.....0058
Agashi.....0063
Agazi.....3522 (DB1)
AGB.....0064
Aiko0069
Aim0070
Aiwa0072
Akai.....0074
Akiba.....0078
Akira.....0079 (DB1)
Akito.....0082
Akura.....0083
Alaron.....0085
Alba0086
Albatron0087
Alco0092
Alienware.....0099
Allegro.....0103
Alleron0104
Allorgan.....0105
Allstar.....0108
Alpha Digital 4014
AlphaStar.....0113
Alpine0114
America Action
.....0123
American High
.....0125
Americast.....0127

B
Baihua.....4092 (DB1)
Baird0311
Bang & Olufsen
.....0314
Baohuashi0316 (DB1)
Basic Line.....0325
Bastide.....0327
Baur0331
Bazin0335
BBT0338
Beaumark.....0340
Beijing.....0345
Beko0346
Belcor0348
BELL4376 (DB1)
Bell & Howell
.....0350
Bell ExpressVu
.....0352 (DB1)
Bell South.....0353
BenQ0359
Beon0361
Best0364
Bestar.....0368
Bestar-Daewoo
.....0369
Binatone.....0378
Black Star.....0386
Blacktron.....3526
Blackway.....0388
Blaupunkt.....0390
Blue Parade..0394
Blue Sky.....0395
Blue Star.....0396
Bondstec.....0403
Boots.....0405
BOSS.....4197
BPL.....0413
Bradford.....0414
Brandt.....0416
Brillian.....0422
Brinkmann.....0423
Brionvega.....0424
Britannia.....0425
Brockwood...0430
Broksonic.....0432

BskyB.....0436
BTC0439
Bush.....0445
Byd:sign.....0448

C
Cable Star.....0454
Cabletenna...0456
Cableview.....0458
Cablevision...4238
Caihong.....0462
Caixing.....4093 (DB1)
California Audio
Labs.....0467
Calix0468
Candle.....0480
Canon.....0481
Capsonic0486 (DB1)
Captive Works
.....0487
Carad.....0488
Carena.....0489
Carnivale.....0491
Carrefour.....0492
Carver.....0494
Cascade.....0496
Casio0499
Catha4094
Cathay.....0501
CCE.....0504
Celebrity.....0509
Celera.....0510
Centurion.....0520
Century.....0521
CGE.....0523
Changcheng..0526
Changfei.....0527
Changfeng...0528 (DB1)
Changhai.....0529
Changhong...0530
Channel Master
.....0531
Chaparral.....0533
Ching Tai.....0541
Chun Yun0545
Chunfeng.....0546
Chung Hsin...0547

Chunlan.....4097 ^(DB1)	Cytron.....0680	DVD2000.....0844	Exquisit.....0978
Chunsun.....0549		D-Vision.....0684	
Cimline.....0552	D	Dwin.....0848	F
CineVision.....0562	Daeryung.....0691	Dynatech.....0854	Fagor Life.....4102
Citizen.....0567	Daewoo.....0692	Dynatron.....0855	Feilang.....0990
City.....0569	Danichi.....3914	Dynex.....3476	Feilu.....0991
Clarion.....0575	Dansai.....0699		Feiyan.....0992 ^(DB1)
Clarivox.....0576	Dantax.....0702	E	Feiyue.....0993
Clatronic.....0581	Davidson.....4202	Eastern.....0859	Fenmenti.....4103
Clearmaster.....0583	Dawa.....0707	ECHOSPHERE	Fenner.....0994
ClearMax.....0584	Daytron.....0710	4396 ^(DB1)	Ferguson.....0996
CMS.....0590	DBX.....0712	Echostar.....0866	Fidelity.....0998
CMS Hightec 0591	Decca.....0718	Eclipse.....0867	Filsai.....1000
Coby.....0597	Deitron.....0722	Eiki.....0874	Finlandia.....1003
Colortyme.....0601	Dell.....0725	Elbe.....0880	Finlux.....1004
Colour Voice.0602	Denon.....0731	Elbe-Sharp.....3529	Firstar.....1007
Colt.....0603	Denver.....0733	Elcit.....0883	Firstline.....1008
Comcast.....3456	Desay.....0737	Electroband.....0888	Fisher.....1009
Commercial	Desmet.....0738	Electrograph.0889	Flint.....1014
Solutions.....0615	Diamant.....0746	Electrohome.0890	FNR.....1016
Comtronics...0623	Diamond.....0747	Electrophonic	Focus.....1017
Concerto.....0625	Diamond Vision	0893	Formenti.....1023
Concorde.....0626	0748	Elektra.....0896	Formenti-Phoenix
Condor.....0627	Digatron.....0751	Element.....3477	1024
Conrowa.....0634	Digi.....0754	ELG.....0900	Fraba.....1030
Contec.....0635	Digiline.....0759	Elin.....0902	Friac.....1040
Contec/Cony4199	Digital Stream	Elite.....0903	Frontech.....1042
Coolmax.....0642	3809	Elmak.....0907 ^(DB1)	Fuji.....1047
Coolsat.....0643	Dimensia.....3569	Elta.....0910	Fujitsu.....1052
Coship.....0646	Director.....0793	Emerson.....0917	Fujitsu General
Cosmel.....0647	DirecTV.....0794	Emperor.....0921	1053
COX.....4200	Dish Network	Emprex.....0922	Funai.....1056
Craig.....0650	System.....0799	Enterprise.....0931	Furi.....1057
Crosley.....0655	Dishpro.....0800	Envision.....0933	FUTEC.....3960 ^(DB1)
Crossdigital...0656	Disney.....0803	Epson.....0937	Futuretech.....1064
Crown.....0658	Dixi.....0807	Erres.....0942	
CS Electronics	Dongda.....0820	ESA.....0943	G
.....0663	Donghai.....0821	ESC.....0945	Galaxi.....1068
CTC.....0664	Drake.....0825	Ether.....0948	Galaxis.....1069
CTX.....0665	Drean.....0832	Etron.....0949	Garrard.....1075
Curtis Mathes	DSE.....0833	Eurofeel.....0954	Gateway.....1076
.....0667	DTS.....0837	EuroLine.....0955 ^(DB1)	GBC.....1078
CXC.....0670	Dual.....0838	Euroman.....0956	GC Electronics
CyberHome.0672	Dual-Tec.....3528	Europa.....0957	1080
Cybernex.....0673	Dumont.....0840	Europhon.....0959	GE.....1081
CyberPower...0674	Durabrand0842	Everquest.....0971	GEC.....1083
Cybertron.....0675	Dux.....0843	Expressvu.....0977	Gehua.....1086

Geloso.....1087
 Gemini.....1089
 General Instrument
1093
 General Technic
1095
 Genexxa1097
 GFM.....3820
 Giant.....1113
 Gibraltar.....1114
 Go Video.....1126
 GOI.....1130
 GoldHand1136
 Goldline.....1138
 GoldStar.....1140
 Goodmans.....1142
 Goodmind1143
 GPM.....1149
 Gradiente.....1151
 Graetz.....1152
 Granada.....1154
 Grandin.....1156
 Greenhill1157
 Gronic.....1160
 Grundig.....1162
 Grunpy.....1165

H

Haier1175
 Haihong.....1176
 Haiyan.....1177 (DB1)
 Halifax.....1179
 Hallmark.....1180
 Hamlin.....1182
 Hampton1183
 Hankook.....1188
 Hanseatic.....1190
 Hantarex.....1192
 Hantor.....1193
 Harley Davidson
1197
 Harman/Kardon
1198
 Harvard.....1202
 Harwood.....1204
 Hauppauge....1206
 Havermy.....1208

HCM.....1210
 Headquarter.1214
 Hello Kitty1221
 Hema.....1222
 Hemmermann
1223
 Hewlett Packard
1229
 Higashi.....1234
 Highline.....1236
 Hikona.....1237
 HiLine.....3533
 Hinari.....1243
 Hisawa.....1247
 Hisense1249
 Hitachi.....1251
 Hitachi Fujian 1252
 Hiteker.....1255
 Hitsu.....1257
 Hoeher.....1262
 Hongmei.....1272
 Hongyan.....1274 (DB1)
 Hornyphon....1277
 Hoshai.....1278
 Howard
 Computers...1281
 HP.....1283
 HTS.....1285
 Huafa.....1287
 Huanghaimei.1288
 Huanghe.....1289
 Huanglong.....1290
 Huangshan1291
 Huanyu.....1292
 Huaqiang.....1293 (DB1)
 Huari.....1294
 Hughes.....4205
 Hughes Network
 Systems.....1296
 Humax.....1298
 Hush.....1304
 Hygashi1308
 Hyper.....1309
 Hypson1312
 Hytex.....1314
 Hyundai.....1315

I

Iberia1320
 iBUYPOWER
1322
 ICE.....1324
 ICeS.....1325
 Illico.....4206
 iLo.....1341
 iLuv.....4234
 Ima.....1342
 Imperial.....1346
 Imperial Crown
1347 (DB1)
 Indiana.....1350
 Infinity1352
 InFocus.....1353
 Ingelen.....1354
 Ingersol.....1355
 Initial1356
 Inno Hit.....1358
 Innova.....1359
 Innovation1360
 Insignia.....1368
 Instant Replay
3580
 Integra1370
 Inteq.....1373
 Interbuy.....1376
 Interfunk.....1377
 Internal.....1379
 International..1380
 Intervention....1386
 IR.....4110
 Irradio.....1396
 Isukai.....1402
 iSymphony3755
 ITC.....1404
 ITS.....1405
 ITT.....1406
 ITV.....1408

J

Janeil1414
 Jasco.....1415
 JBL.....1420
 JC Penney.....4208
 JCB.....1421

JCL.....4209
 Jean1424
 Jensen1429
 Jerrold.....1431
 Jiahua.....1435 (DB1)
 JiaLiCai.....1436 (DB1)
 Jinque.....1440 (DB1)
 Jinta1441 (DB1)
 Jinxing.....1442
 Juhua.....1461 (DB1)
 JVC.....1464
 jWin.....1465

K

Kaige.....1470 (DB1)
 Kaisui1471
 Kamp.....1475
 Kanghua.....1477
 Kangli.....1478 (DB1)
 Kangyi.....1479 (DB1)
 Karcher.....1484
 Kawa.....1487
 Kawasaki.....1488
 Kawasho.....1489
 Kaypani.....1490
 KEC.....1496
 Kendo.....1500
 Kenwood.....1507
 KIC.....1512
 Kingsley1520
 Kioto.....1523
 Kiton.....1525
 KLH.....1529
 Kloss Novabeam
4210
 Kneissel1535
 Kodak.....1540
 Kolin.....1541
 Kolster.....1543
 Kongque.....1545 (DB1)
 Konig.....1547
 Konka.....1548
 Korpel.....1552
 Korting.....1554
 Kosmos.....1557
 Koss1558
 KTV.....1572

Kuaile.....1573 (DB1)	Magnadyne1702	Minutz.....1847	Nicamagic.....1994
Kunlun1578 (DB1)	Magnafon1703	Mitsubishi.....1855	Nikkai.....1998
Kyoshu.....1583	Magnasonic....1704	Mivar1857	Nikko2000
Kyoto.....1585	Magnavox.....1706	MoDeng.....4120 (DB1)	Niveus Media
	Magnin.....1708	Monivision.....1872	2012
L	Magnum1709	Montgomery	Noblex.....2013
L&S Electronic	Majestic.....1713	Ward.....4212	Nobliko.....2014
.....1588	Mandor1717 (DB1)	Morgans3970	Nokia2017
Landel.....1593	Manesth.....1718	Motorola1878	Norcent.....2020
Lasonic1600	Manhattan.....1719	Movie Time...1880	Nordic.....2021
Layco.....4117	Marantz.....1724	MTC.....1889	Nordmende..2022
Lecson.....1606	Mark.....1731	MTLogic.....1892	Nordvision....3543 (DB1)
Lenco.....1615	Marta1735	Mudan1896 (DB1)	Normerel.....2024
Lenoir.....1617	Masuda.....1744	Multistandard	Northgate2027
Lenoxx.....1618	Matsui.....1750	1904	Noshi2030
Lesas.....1622	Matsushita1751	Multisystem...4121 (DB1)	Nova Vision ..2032
Lexicon1625	Maxent.....1757	Multitec.....1906	Novaplex.....2034
Leyco1627	Media Center PC	Multitech.....1907	Novatronic....2035
LG.....1628	1777	MultiVision1909	NSC.....2042
LG/Goldstar..3536 (DB1)	Mediator1784	Murphy1911	NTC.....2045
Liesenk.....3537 (DB1)	Medion.....1787	Musikland.....1915	
Liesenk & Tter	Medison.....1788		O
.....1630	MegaCable....4211		Oak.....2059
Liesenkotter..1631	Megapower...1791	N	Okana.....4122
Life.....3538 (DB1)	Megatron1795	NAD1926	Okano2065
Lifetec.....1633	MEI1796	Naiko1930	Olevia.....2067
Linksys1640	Meile.....1797 (DB1)	Nakamichi1932	Olympus.....2071
Linsay1642	MeiShi.....4118 (DB1)	Nakimura.....1933	Onimax.....2082
Liquid Video..1644	Melectronic...3654	Nanbao.....1934 (DB1)	Onkyo2085
LiteOn.....1645	Memorex.....1800	Nansheng.....1935 (DB1)	Onwa.....2087
Lloyd's.....1648	Memphis1802	National Panasonic	Opera.....2090
Local India TV	Mercury.....1804	4661	Oppo.....2092
.....1653	Metz1810	NEC.....1950	Optimus.....2095
Loewe.....1660	MGA1811	Neckermann.1951	Optoma2097
Loewe Opta.3540	MGN Technology	NEI1952	Optonica.....2099
Logik.....1661	1812	Nesa1959	Orbit2103
Longjiang.....1664 (DB1)	MicroGEM....4024	Nesco.....1960	Orion2111
Luma1674	Micromaxx....1822	Net Brazil1962	Oritron2112
Lumatron.....1676	Microsoft.....1826	Netsat.....1966	Online.....2113
Lux May.....1680	Microstar.....1827 (DB1)	NetTV1967	Ormond.....2114 (DB1)
Luxman.....1682	Midland.....1831	Neufunk.....1970	Orsowe.....2116
Luxor1683	Minato1835	New Tech1979	Osaki.....2118
LXI.....1686	Mind1837	New World...1980	Osio.....2121
	Minerva1838	Newwave.....1981	Oso.....2122
M	Minoka1840	Next Base1983	Osume.....2123
M & S.....1687	Minolta.....1841	Next Level1984	Otto Versand2126
Madison.....1698	Mintek.....1845	Nexus.....1989	
		NexxTech.....1990	

- P**
- Pace2134
- Pacific2135
- Pael2140
- Palladium2145
- Palsonic2147
- Panama2149
- Panasonic2153
- Panavision2154
- Panda2155
- Pansat2158
- Panther2160
- Paragon2161
- Pathe Cinema
.....2168
- Pausa2171
- Paysat2173
- PCT4213
- Penney2182
- Pentax2183
- Perdio2185
- Perfekt2186
- Philco2192
- Philharmonic
.....2194
- Philips2195
- Philips Magnavox
.....3715
- Phoenix2199
- Phonola2201
- Phonotrend2202
- Pilot2207
- Pioneer2212
- Pionier2213
- Plantron2219
- Plasmsync4230
- Playsonic2224
- Polaroid2230
- Polk Audio2232
- Poppy2236
- Popular Mechanics
.....2237
- Portland2238
- Powerpoint2241
- Prandoni Prince
.....4125
- Precision2244
- Prelude2247
- Priceclub2252
- Prima2253
- Primestar2257
- Princeton2258
- Prinz2260
- Prism2261
- Proceed2267
- Profekt4126
- Profex2269
- Profilo2272 (DB1)
- Profitronic2273
- Proline2274
- Proscan2279
- Prosonic2282
- Protech2284
- Proton2288
- Protron2289
- Proview2290
- ProVision2291
- Pulsar2296
- Pye2302
- Pymi2304
- Q**
- Qingdao2308 (DB1)
- Quarter2318
- Quartz2319
- Quasar2320
- Quelle2322
- Questa2324
- Qwestar2326
- R**
- Radialva2329
- Radio4128
- Radio Shack/
Realistic4214
- Radiola2330
- Radiomarelli2331
- RadioShack2333
- Radiotone2334
- Radix2335
- Randex2343
- RCA2351
- Realistic2354
- Recor2359
- Recoton2361
- Rectiligne2362
- Redstar2366
- Reflex2368
- Regal2370
- Regency2371
- Regent2372
- Rembrandt2375
- Reoc2379
- ReplayTV2380
- Revox2383
- Rex2385
- RFT2386
- Rhapsody2387
- Ricavision2388
- Rio2393
- R-Line2327
- Roadstar2398
- Rogers4215
- Rotel2414
- Rowa2416
- Runco2423
- S**
- Saba2429
- SageTV4981 (DB1)
- Saisho2437
- Saivod2439
- Salora2443
- Sambers2445
- Sampo2446
- Samsung2448
- Sandra2454
- Sanjian2455 (DB1)
- Sanky2456
- Sansui2458
- Sanyo2462
- Sanyuan2464
- SBR2492
- Sceptre2498
- Schaub Lorenz
.....2500
- Schneider2501
- Scientific Atlanta
.....2503
- Scimitsu2505
- Scotch2506
- Scott2508
- Sears2514
- SEG2522
- SEI2524
- Sei-Sinudyne2525
- Seleco2528
- Sencora2531
- Sensory Science
.....2533
- Sentra2534
- Serino2539
- Shancha2546 (DB1)
- Shanghai2547
- Shaofeng2549
- Sharp2550
- Sharper Image
.....2551
- Shen Ying2552
- Shencai2553
- Sheng Chai3922
- Shenyang2555
- Sherwood2557
- Shinco2560
- Shinsonic2562
- Shintoshii2564
- Shivaki2567
- Shogun2568
- Siam2572
- Siarem2573
- Siemens2574
- Siera2576
- Sierra3549 (DB1)
- Sigma Designs
.....2579
- Signal2581
- Signature2582
- Silva2591
- Silva Schneider
.....2592
- Silver2594
- Simpson2598
- Sindyne4510
- Singer2599
- Sinudyne2601 (DB1)
- SKY2610
- Skygiant2618
- Skyworth2631 (DB1)

SL Marx.....2633	Superscan.....2786	Telegazi2917	Tredex.....3045
Sogera2649	SuperTech2789	Telemeister2924	Trident.....3054
Solavox.....2654	Supervision....2791	Telesonic2930	Tristar.....3057
Sonawa2663	Supra.....2792	Telestar.....2931	Triumph.....3058
Sonic Blue.....2667	Supre-Macy...2794	Teletech.....2934	TruTech.....3467
Sonicview3954	Supreme.....2795	Teleton.....2935	TS.....3063
Soniko.....2669	Sutron.....2798	Televideon.....2938	Tuntex3069
Sonitron.....2671	SVA.....2800	Televue2939	Tusa.....3073
Sonneclair.....2673	Sydney.....2808	Tennessee.....2952	TV863076
Sonoko.....2675	Sylvania.....2809	Tensai2954	TView3079
Sontec.....2677	Symphonic.....2810	Tenson.....2955	TVS3081
Sony.....2679	Synco2811	Terapin2958	
Sound & Vision	Syntax.....2814	Tevion.....2962	U
.....2680	Syntax-Brilliant	Texet2963	Uher3089
Soundesign2684	4231	Texscan2965	UltimateTV3091
Soundwave2689	Sysline.....2815	TFC.....2967	Ultravox.....3095
Sowa.....2691	Systemax.....2817	Theta Digital.2970	Unic Line.....3100
Squareview2703	Sy tong.....2820	Thomas.....2971	Uniden3101
Srypton.....4138		Thomson2972	Unika.....3102
SSS.....2708	T	Thorn.....2974	Unitech3105
Stack.....4218	Tacico.....2823	Thorn-Ferguson	United3106
Standard.....2713	Tagar Systems	2976 (DB1)	United Artists
Standard	2831	Time Warner3518	3107
Components 2714	Tai Wah.....4139 (DB1)	Timeless2985	United Cable3108
Star Choice....2716	Taishan.....2835	Tivax.....3956	Universal3113
Starcom.....2722	Tandy.....2843	Tivo.....2991	Universum3115
Stargate.....2723	Tashiko2850	TMK.....2994	Univox.....3116
Starlite.....2728	Tatung.....2852	TNCi.....2996	Urban Concepts
Starquest.....2732	TCL.....2856 (DB1)	Tobo.....2999 (DB1)	3121
StarSight2734	TCM.....2857 (DB1)	Tocom.....3000	US Digital3122
Stenway.....2739	Teac.....2860	Tokai.....3001	US Electronics
Strato.....2745	Teachimagen.4140	Tokyo.....3004	3123
STS.....2749	Tec.....2861	Tomashi3006	US Logic.....3124
STS14219	Tech Line2863	Tongguang3008 (DB1)	V
STS24220	Technema.....2866	Torx3020	V23128
STS34221	Technica.....2868	Toshiba.....3021	Vector.....3136
STS4.....4222	Technics.....2869	Totevision3024	Vector Research
Studio Experience	Technika.....2870	Touch.....3025	3137
.....2750	Techview2883	Towada3028	Venturer.....3143
Stylandia.....2752	Techwood2884	Toyoda.....3030	Verizon.....3146
Sungale.....2761	Teco.....2886	Trakton3036	Vestel3148
Sunkai2762	Tedelex2889	Trans Continens	Vexa.....3149
Sunstar2768	Teknika.....2895	3037	Victor3155
Sunwood2772	TeleCaption...2902	Trans PX3038	Video Concepts
Supercable2778	Telecor2910	Transfec4143	3157
Superla.....2782	Telefunken.....2914	Transonic3041	Videologic.....3165
Supermax.....2783	Telefusion.....2915	Transtec.....3042	Videologique3166

Videosonic.....	3171	Xinaghai.....	3304 (DB1)
VideoSystem.....	3172	Xingfu	3305
Videotechnic.....	3173	Xinghai	3306
Videotron.....	3175	XR-1000	3316
Vidikron.....	3178	Xrypton.....	3317
Vidtech.....	3179	Xuelian.....	3320 (DB1)
Viewmaster...3182			
ViewSat.....	3185		
Viewsonic.....	3186	Y	
Viewstar	3187	Yamaha	3326
Viking	3188	Yamishi.....	3328
Villain.....	3189	Yapshe.....	3329
Viore	3192	Yokan	3335
Visco.....	4232	Yoko.....	3336
Visiola.....	3197	Yorx	3340
Vision	3198	Yuhang.....	3345
Vizio.....	3211		
Vocopro	3213	Z	
Voodoo	3215	Zanussi.....	3349
Voom	3216	Zenith.....	3356
Vortec	3217	Zentech.....	4031
Vortex View..	3218	Zentek.....	3361
Voxson	3220	ZhuHai.....	3364
		ZT Group	3370


W

Waltham	3230
Wards.....	3231
Watson	3233
Watt Radio....	3234
Waycon.....	3237
Wega.....	3238
Wegavox.....	3239
Weltblick.....	3245
Westinghouse	
.....	3249
Wharfedale....	3255
White Westinghouse	
.....	3258
Windstar	3266
Winegard.....	3268

X

Xbox	3295
Xiahua	3299
Xiangyang.....	3301 (DB1)
Xiangyu.....	3302
Xihu	3303 (DB1)

 (DB1) Brands only available from version DB1 onwards. You can find the DB version on the sticker inside the battery compartment.

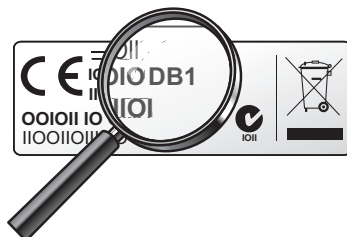



© 2011 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5304 3

November 2011

www.philips.com

RTP/4811