

Philips GoGear audio video player

SA3314 SA3315
SA3324 SA3325
SA3344 SA3345
SA3384 SA3385

Quick start guide



- 1 Install
- 2 Connect and Charge
- 3 Transfer
- 4 Enjoy

PHILIPS

Need help?

Please visit

www.philips.com/welcome

where you can access to a full set of supporting materials such as user manual, flash tutorial, the latest software upgrades and answers to frequently asked questions.

Need help?

Look up our Support Centre website

www.philips.com/welcome

Besoin d'aide ?

Visitez la page Web de notre centre
d'assistance à l'adresse

www.philips.com/welcome

¿Necesita ayuda?

Consulte nuestra página Web de Soporte técnico,
www.philips.com/welcome

Support?

Besuchen Sie unser Support Center auf
www.philips.com/welcome

Contents

EN

- 2 Is there a manual?
- 2 Register your product
- 2 Don't forget about upgrades
- 3 What's in the box
- 4 Overview of controls and connections
- 5 Install
- 5 Connect and charge
 - 5 Connect to PC
 - 6 Read the battery level indication of your player
- 6 Transfer
 - 6 Transfer music and pictures
 - 7 Transfer videos
- 8 Enjoy
 - 8 Power on and off
 - 8 Main menu
 - 8 Navigate the menu
- 9 Music mode
- 9 Radio
 - 9 Auto tune
 - 10 Play a preset radio station and tune the station
- 10 Recordings
 - 10 Make recordings
 - 10 Play back recordings
- 11 Display lyrics
- 11 Troubleshooting
 - 11 How do I reset my player?
- 12 Disposal of your old product

Is there a manual?

You have a detailed user manual and FAQ on the CD by-packed with your player. You can also download the same file from this website: www.philips.com/welcome

Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on www.philips.com/welcome so we can inform you as soon as new free upgrades become available.

Don't forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to www.philips.com/support for free upgrades of the latest software and Firmware Manager for your product. These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

What's in the box



Headphones



USB cable



CD-ROM



Quick start guide

 
What else you'll need?



Computer

A computer with:
Windows Vista, XP, ME or 2000
Pentium III 800MHz processor or higher
128MB RAM
500MB Hard Disk space
Internet connection (preferable)
Microsoft Internet Explorer 6.0 or later
CD-ROM drive
USB Port

Overview of controls and connections

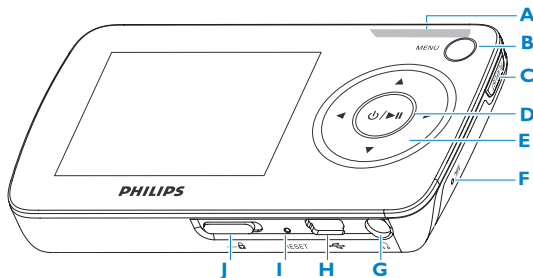

A - Vol +	Control volume
B MENU	Press to access the menu / Return to previous menu
C Playlist	Press to add the song to Playlist-on-the-go
D ⏮ / ⏭	Short press to play/pause songs/videos, long press to power on/off
E ⏮	Navigate back one menu level or exit a function During songs / videos / recording playback, press to go to previous songs / videos / recording, or press and hold to rewind

▶	Navigate forward one menu level or select a function During songs / videos / recording playback, press to go to next songs /recording, or press and hold to fast forward
▲	Scroll up in the list
▼	Scroll down in the list
F	Microphone
G 🎧	Headphones jack
H	USB connector
I	Reset
J 🔒 slider	Lock all keys except volume keys

I Install

 
EN

- 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the onscreen instructions to complete the installation of **Media Converter for Philips** and **Philips Device Manager**.

2 Connect and charge

A Connect to PC

Your player will be charged when connected to the PC.

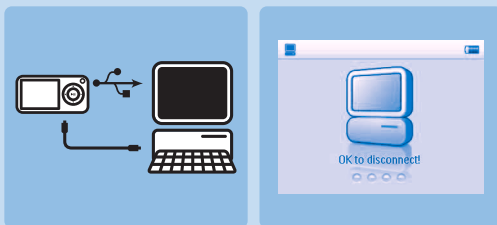

- 1 Connect the supplied USB cable to the mini USB port at the bottom of the player, the other end to your PC.
- 2 The player will start to charge as soon as it is connected to your PC.
- 3 Charge your player for at least 5 hours before using it for the first time. The battery will be fully charged (100%) in 4 hours and 80% charged in 2 hours.

B Read the battery level indication of your player

The approximate power levels of your battery are indicated as follows:



Full



Two-thirds full



Half full



Low



Empty

TIP When the batteries are almost empty, the low battery screen  blinks. Your player will power down in less than 60 seconds. Your player will save all settings and un-finished recordings before it powers down.

3 Transfer

 
- A** Your player appears as a USB mass storage in **Windows Explorer**. You can organize files, transfer music and pictures to your player during USB connection. Use **Philips Media Converter** to transfer video files. See **Media Converter** for details.
- Transfer music and pictures**

- 1 Click and highlight one or more songs to transfer between your player and your computer.
- 2 Use drag and drop actions to complete your transfer.

Tip To transfer music CDs to your player use software such as Musicmatch Jukebox or Windows Media Player, rip (convert) the songs on your music CD into MP3/WMA files. Copy the files into your digital audio player via Windows Explorer. Free versions of these programs can be downloaded from the internet.

B Transfer videos

- 1 Connect your player to the PC using the supplied USB cable.
- 2 Start **Media Converter for Philips**.

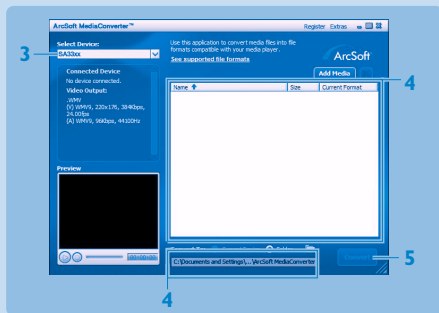

- 3 In the **Convert to:** option at the bottom of the screen, select **Current Device**, the content will be stored directly on the connected player.
- 4 Press **Add Media** to select the Video files to be transferred
OR
Drag and drop your video files from **Windows Explorer** into the white box shown.
- 5 Press **Convert**.

If needed, the files will first be converted to a format that the player can playback.
The conversion takes time and please be patient.

> All the converted files will be transferred to the player.

4 Enjoy

A Power on and off

To power on, press ► until the **PHILIPS** welcome screen appears.
To power off, press and hold ► until there is no display on the screen.

B Main menu

	Video	Watch your videos
	Picture	View your pictures
	Music	Play your digital music tracks
	Radio	Listen to FM radio
	Recording	Create or listen to recordings
	Folder view	View your folders
	Settings	Customize the settings of your player
	Now playing	Go to the play screen

C Navigate the menu

Your player has an intuitive menu navigation system to guide you through various settings and operations.

To	Do this
Return to previous menu	Press ◀ or MENU
Return to main menu	Press and hold MENU
Browse through menus	Press ◀ or ▶
Scroll through a list	Press ▲ or ▼
Selection an option	Press ▶

Music mode (also applicable to playback of recordings)

EN

You can do the following actions during music playback:

To	Do this
Play / Pause music	Press ►
Skip to next song	Press ►
Return to previous song	Press ◀
Fast forward	Press and hold ►

To	Do this
Fast rewind	Press and hold ◀
Return to browsing	Press MENU key
Increase volume	Press Vol +
Decrease volume	Press Vol -

Radio

From the main menu, select  to enter radio mode.

Connect the headphones

The supplied pair of headphones serves as a radio antenna. Make sure that it is properly connected to ensure optimal reception.

Select your FM region

From the main menu, select  > **Radio settings**.

Region	Frequency range	Tuning steps
Europe	87.5 - 108 MHz	0.05 MHz
USA	87.5 - 108 MHz	0.1 MHz
Asia	87.5 - 108 MHz	0.05 MHz

Auto tune

1 Select **Auto tune** under Radio menu .

> The player will search for the stations with the strongest signals and automatically save up to 20 preset stations.

Play a preset radio station and tune the station

- 1 From the Radio menu , select **Presets**.
- 2 Press **▲** or **▼** to browse and select the preset stations.
- 3 Once a preset station is selected, press **◀** / **▶** to change to another preset station.
- 4 The frequency of a selected preset station can be fine tuned by pressing and holding down **▲** / **▼**.
- 5 Briefly press **▲** / **▼** for single steps, press and hold to search for nearest strong signal.

Recordings

You can make voice recordings using your player.

Make recordings

- 1 From the main menu, select .
- 2 Select **Start recording** to start recording a voice.
 > *Your player will display the voice recording screen and voice recording starts automatically.*
- 3 Press **▶||** to pause.
- 4 Press **◀** to stop and save the voice recording.
 > *Your voice recording will be saved on your player. (Filename format: VOICEXXX.WAV where XXX is the recording number which will be automatically generated.)*
- 5 You can find this file under  > **Recordings Library**.

TIP You can pause and restart a recording anytime with **▶||**.

Play back recordings

From the main menu, select  > **Recordings Library**.

- 1 Select the recording you want to hear.
- 2 Press **▶||** to confirm.

Display lyrics

You can display lyrics with your songs:

Enable/disable the lyrics display by selecting "On/Off" respectively in the **Settings > Lyrics**.



Troubleshooting

How do I reset my player?

Insert a pin or other pointed tool into the reset hole located at the bottom of the player. Hold until the player shuts down.

If the above doesn't work, then you may have to use the Device Manager to recover your player:

- 1 Launch the **Philips Device Manager** at **Start > Programs > Philips Digital Audio Player > SA33XX > Philips SA33XX Device Manager** on your PC.
- 2 Press and hold the ►|| button while your player is connecting to the PC.
- 3 Keep holding the key until the **Philips Device Manager** acknowledges your player and goes into recovery mode.
- 4 Click the **Repair** button and follow the instructions given by the **Device Manager**.
- 5 After the player has been repaired, disconnect it from your PC and re-start.

Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

 Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



Be responsible
Respect copyrights

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners

© 2007 Koninklijke Philips Electronics N.V.

All rights reserved.

www.philips.com



Printed in China

wk7314