

Philips GoGear audio player

SA1915 SA1918  
SA1925 SA1926  
SA1927 SA1928  
SA1929 SA1945  
SA1946 SA1947  
SA1948 SA1949

# Quick start guide



- 1 Install
- 2 Connect and Charge
- 3 Transfer
- 4 Enjoy

**PHILIPS**

# Need help?

Please visit

[www.philips.com/welcome](http://www.philips.com/welcome)

where you can access to a full set of supporting materials such as user manual, the latest software upgrades and answers to frequently asked questions.

|    |                                                  |
|----|--------------------------------------------------|
| 2  | Is there a manual?                               |
| 2  | Register your product                            |
| 2  | Don't forget about upgrades                      |
| 3  | What's in the box                                |
| 4  | Overview of controls and connections             |
| 5  | Install                                          |
| 5  | Connect and charge                               |
| 5  | Connect to PC                                    |
| 6  | Read the battery level indication of your player |
| 6  | Transfer                                         |
| 6  | Transfer music                                   |
| 7  | Enjoy                                            |
| 7  | Turn on and play                                 |
| 7  | Main menu                                        |
| 8  | Navigate the menu                                |
| 8  | Music mode                                       |
| 9  | Radio                                            |
| 9  | Auto tune                                        |
| 9  | Play a preset radio station                      |
| 10 | Recordings                                       |
| 10 | Make recordings                                  |
| 10 | Play back recordings                             |
| 11 | Troubleshooting                                  |
| 11 | How do I reset my player?                        |
| 12 | Need help?                                       |
| 12 | Disposal of your old product                     |

# Is there a manual?

You have a detailed user manual and FAQ on the CD by-packed with your player. You can also download the same file from this website: [www.philips.com/support](http://www.philips.com/support)

## Register your product

Since it is possible for you to upgrade your product, we recommend that you register your product on [www.philips.com/welcome](http://www.philips.com/welcome) so we can inform you as soon as new free upgrades become available.

## Don't forget about upgrades

We know you will enjoy your product for a long time. For best performance, we recommend that you regularly check in to [www.philips.com/support](http://www.philips.com/support) for free updates of the latest software and Firmware Manager for your product. These downloads will help you to optimize your product's performance and to take advantage of our future support of new audio formats.

Enjoy your new music experience.

# What's in the box



Headphones



USB cable



CD-ROM



Quick start guide


What else you'll need.



Computer

A computer with:  
Windows 2000, XP or Vista  
Pentium III 800MHz processor or higher  
CD-ROM drive  
128 MB RAM  
500MB Hard Disk space  
USB Port  
Internet connection (preferable)  
Microsoft Internet Explorer 6.0 or later

# Overview of controls and connections

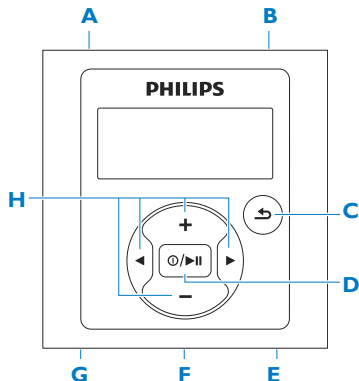

|                        |                                                                                                                                 |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b>               | Headphone jack                                                                                                                  |
| <b>B</b> <b>MIC</b>    | Microphone                                                                                                                      |
| <b>C</b>               | Back one level (hold to return to root menu)                                                                                    |
| <b>D</b>               | On / Off<br>Play/Record / Pause<br>Confirm selection                                                                            |
| <b>E</b> <b>slider</b> | Hold slider to lock/unlock all keys (except + / -)                                                                              |
| <b>F</b> <b>RESET</b>  |                                                                                                                                 |
| <b>G</b>               | USB connector                                                                                                                   |
| <b>H</b>               | Skip back (hold to quick skip)                                                                                                  |
|                        | Skip forward (hold to quick skip)                                                                                               |
| <b>+/-</b>             | In menus: scroll up/down (hold to quick scroll)<br>In playscreen: increase / decrease Volume (hold to increase / decrease fast) |


# I Install

 - 1 Insert the CD supplied with your product into the CD ROM drive of your PC.
- 2 Follow the on-screen instructions to complete the installation of **Philips Device Manager**.

## 2 Connect and charge

### A Connect to PC

When you connect the player to the PC, it automatically charges.



- 1 Before you use the player for the first time, charge it for at least 5 hours.
  - > The battery has a 100% charge after 4 hours and an 80% charge after 2 hours.
- 2 Connect the supplied USB cable to the mini USB port at the bottom of the player, the other end to your PC.
  - > The player will start to charge as soon as it is connected to your PC.

## B Read the battery level indication of your player

The approximate power levels of your battery are indicated as follows:



Full



Two-thirds full



Half full



Low



Empty

**Note** When the batteries are almost empty, the low battery screen  blinks. The player saves all settings and unfinished recordings and switches off in less than 60 seconds.

## 3 Transfer

The player appears as a USB mass storage device in **Windows Explorer**. You can organize files, and transfer music to your player during USB connection.

### A Transfer music

- 1 Click and highlight one or more songs to transfer between your player and your computer.
- 2 Use drag and drop actions to complete your transfer.

**Tip** To transfer music CDs to the player use software such as Windows Media Player; rip (convert) the songs on your music CD into MP3/WMA files. Copy the files into the digital audio player via Windows Explorer. Free versions of these programs can be downloaded from the internet.

# 4 Enjoy

## A Turn on and play

To turn on, press  until the display shows the **Philips** logo.

To turn off, press and hold  until the display shows 'bye'.

**Tip** If the player is idle and no button is pressed for 10 minutes, it switches off automatically.

## B Main menu

|                                                                                               |                                       |
|-----------------------------------------------------------------------------------------------|---------------------------------------|
|  Music       | Play your digital music tracks        |
|  Radio*      | Listen to FM radio                    |
|  Recording   | Create or listen to recordings        |
|  Folder view | View files in folders                 |
|  Settings    | Customize the settings of your player |

\* Radio: This feature is only available for some regions.

## C Navigate the menu

Your player has an intuitive menu navigation system to guide you through various settings and operations.

| Goal                    | Action           |
|-------------------------|------------------|
| Return to previous menu | Press ↩          |
| Return to main menu     | Press and hold ↩ |
| Browse through menus    | Press ►   or ↩   |
| Scroll through a list   | Press + or -     |
| Selection an option     | Press ►          |

## Music mode (also play mode for recordings)

The player offers the following music mode options:

| Goal                          | Action           |
|-------------------------------|------------------|
| Play / Pause music            | Press ►          |
| Skip to next audio file       | Press ►          |
| Return to previous audio file | Press ◀          |
| Fast forward                  | Press and hold ► |

| Goal                    | Action           |
|-------------------------|------------------|
| Fast rewind             | Press and hold ◀ |
| Return to browsing menu | Press ↩ key      |
| Increase volume         | Press +          |
| Decrease volume         | Press -          |

# Radio

From the main menu, select  to enter radio mode.

## Connect the headphones

The supplied headphones serve as a radio antenna. Ensure you connect the headphones properly for an optimal reception.

## Auto tune

- 1 From the Radio menu , select **Auto tune**.
  - > *The radio automatically tunes radio stations and saves the frequencies to presets.*  
*The radio can store up to 20 radio station to presets.*

## Play a preset radio station

- 1 From the Radio menu , select **Presets**.
- 2 Press **+/-** to select preset, **▶||** to start playing.
- 3 Press **◀/▶** to change to another preset.  
To exit radio, long press **↶**.

# Recordings

You can record audio with the player.

## Make recordings

- 1 From the main menu, select  > **Start voice recording**.



> *The player records and shows the recording display.*

- 2 Press  to pause.
- 3 Press  to stop.
- 4 Press  to save the recording or press  to cancel.  
> *Recordings will be saved on the player. (Filename format: VOICEXXX.WAV where XXX is the recording number which will be automatically generated.)*
- 5 You can find this file under  > **Recording library** > **Voice**.

**TIP** You can pause and restart a recording anytime with .

**Note** To record FM radio\*, see section **Radio**.

## Play back recordings

From the main menu, select  > **Recording library** > **Voice**.

- 1 Select the recording you want to hear.
- 2 Press  to confirm.

# Troubleshooting

## How do I reset my player?

Insert a small pin or other sharp object into the reset hole located at the bottom of the player. Hold until the player shuts down.

**If none of the above works, then you may have to use the Device Manager to recover your player:**

- 1 Launch the **Philips Device Manager** at **Start > Programs > Philips Digital Audio Player > SA19XX > Philips SA19XX Device Manager** on your PC.
- 2 Press and hold the  button while your player is connecting to the PC.
- 3 Keep holding the key until the **Philips Device Manager** acknowledges your player and goes into recovery mode.
- 4 Click the **Repair** button and follow the instructions given by the **Device Manager**.
- 5 After the player has been repaired, disconnect it from your PC and re-start.

# Need help?

## User Manual

See the user manual that came with your player.

## Online

Go to [www.philips.com/welcome](http://www.philips.com/welcome)

# Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC

■ Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

Batteries (including built-in rechargeable batteries) contain substances that may pollute the environment. Always hand the appliance in at an official collection point to remove any built-in batteries before you discard the appliance. All batteries must be disposed of at an official collection point.

# AUSTRALIA - Philips Manufacturers Warranty for Australia only

These Warranty conditions are valid for the following consumer electronics products: Colour Televisions, Projection TV, Plasma & LCD TV, Video Cassette Recorders, CD Recorders & Players, DVD Players, DVD Recorders, DVD Recorders with HDD, Audio Systems, Home Theatre systems, Digital Set Top Box & Portable Audio products.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

## 1 YEAR Free Repair Service – at Philips ASC

Colour Television, Plasma Television, LCD Television, Projection Television  
DVDR/VCr Combo, DVD Recorders with Hard Drive, LCD Projectors Wireless  
Audio Systems, Audio Systems, Home Theatre Systems & Digital Set-Top-Box.

## 1 Year Free Replacement – at your Retailer

Portable Audio, MP3 Infotainment products, Video Cassette Recorders DVD Players, DVD/VCr Combo Players, DVD Recorder without HDD & Portable DVD/LCD players.

## Conditions of Repair Warranty

1. All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided.
2. This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
3. If a replacement product is supplied under the repair policy, it is warranted for the remainder of the warranty period of the original purchased product only.
4. Home service is provided only within the normal service area of one of our recommended Authorised Service Centres (ASC). It will be provided for television receivers only with a screen size of 67cms or above (product includes CRT, LCD TV, PTV, and Plasma TV). Televisions with screen sizes less than 67 cms and all other product types are to be taken or sent by the consumer to the workshop of your nearest Authorised Service Centre, at the Consumer's expense.
5. This Manufacturers Warranty is limited to 3 months for the above listed Consumer Electronics Products if used in commercial applications.
6. Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.
7. Product accessories are covered by the same warranty period. Please contact the Philips Technology Care Centre for free replacement of faulty accessories.
8. This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

## This warranty does not cover:

- a) Mileage or travel outside the normal service area covered by selected Authorised Service Centre.
- b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.

- c) Product failures caused by misuse, neglect, accidental breakage, transit damage, inept repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.
- d) Cleaning of video or audio heads.
- e) Inadequate receiving antennae.
- f) Replacement of worn or used batteries or other consumables.
- g) Consumer products used in commercial applications (This warranty is limited to 3 months only)
- h) Second hand products.

The conditions contained in this warranty card replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

## Philips Consumer Electronics a division of Philips Electronics Australia Limited

ABN 24 008 445 743, Level 1, 65 Epping Road NORTH RYDE NSW 2113.

Service is provided through more than 100 accredited Authorised Service Centres throughout Australia. For direct contact with the nearest recommended Authorised Service Centre in capital & regional cities/towns

## Authorised Service Centre Network

### 1300 361 392

Customer support is provided in Australia by our trained call centre staff. For assistance with product features and specifications, please call

## UTechnology Care Centre

### 1300 363 391

Please record the following information for your records and keep in a safe place. We recommend retaining your purchase receipt to assist with any warranty claim

Model number: .....

Serial number: .....

Date of purchase: .....

Retailer: .....

## **NEW ZEALAND** - Guarantee and Service for New Zealand

---

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

### **Conditions**

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

### **How to claim**

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

### **The Guarantee Controller**

**Philips New Zealand Ltd.**

✉ **P.O. Box 41.021**

**Auckland**

☎ **(09) 84 94 160**

fax ☎ **(09) 84 97 858**





Be responsible  
Respect copyrights

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips Electronics N.V. or  
their respective owners

© 2008 Koninklijke Philips Electronics N.V.

All rights reserved.

[www.philips.com](http://www.philips.com)



Printed in China

wk8173