








FWM75




PHILIPS

     Use this simple and quick guide to get started listening to your favorite music.

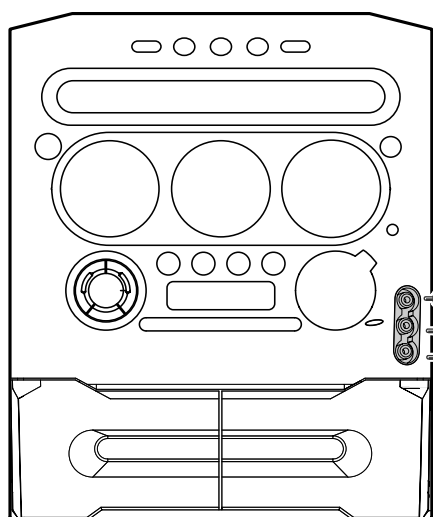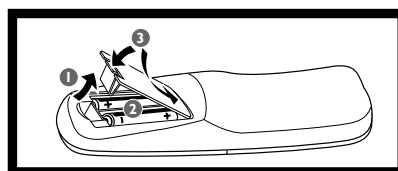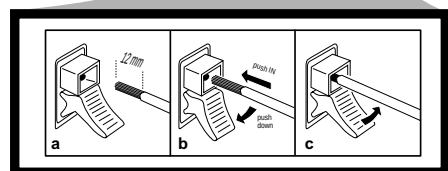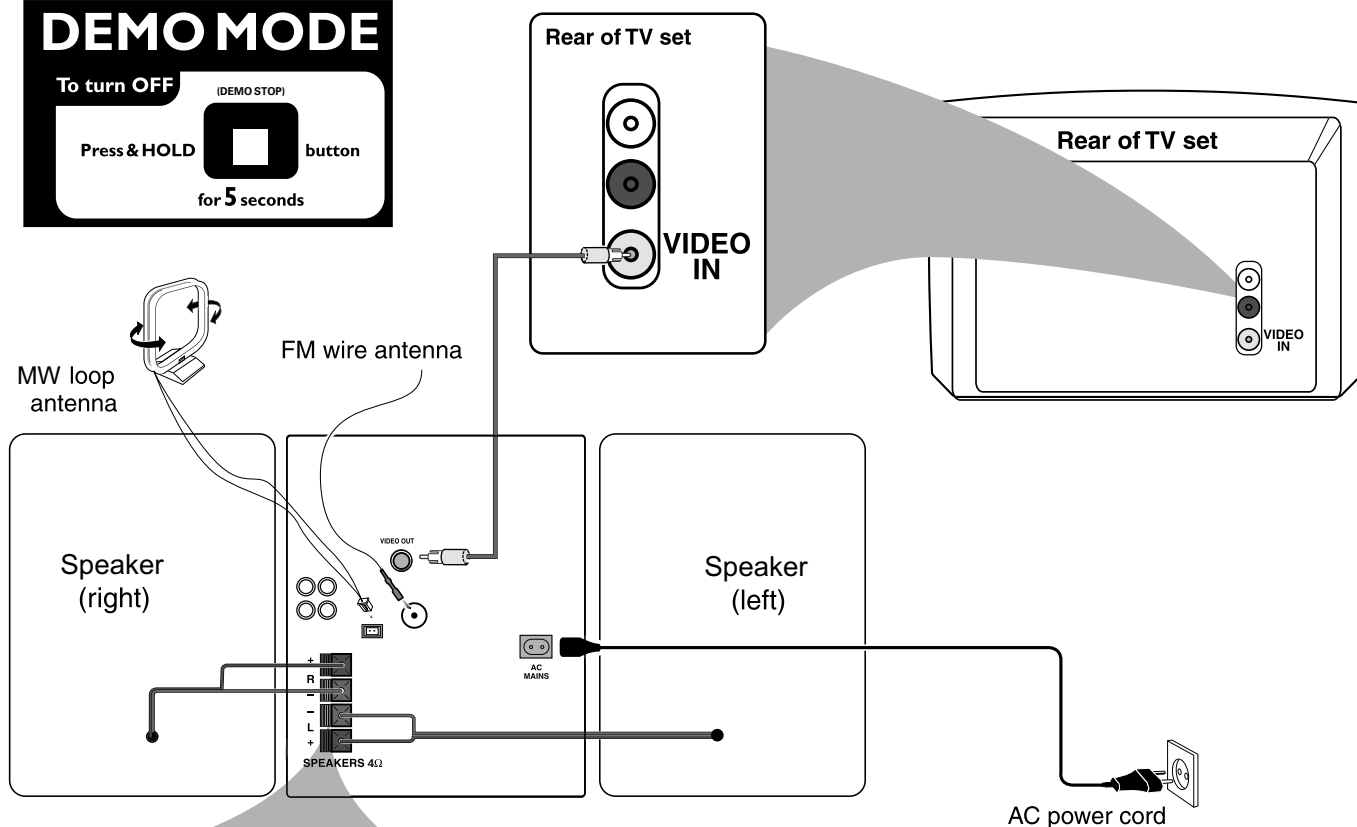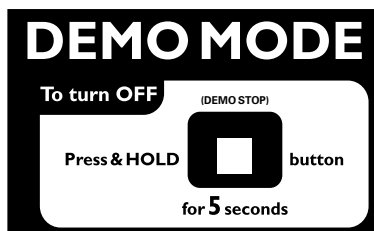

Front panel

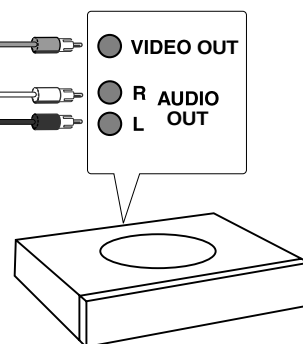 


Game console

For more detailed instructions, see the following pages in the User Guide.

Gameport Operations	13
Basic Operations	14~15
Disc Operations	16~18
Tuner Operations	19~21
Tape Operations/Recording ...	22~23
Timer Operations	24~25
Troubleshooting	27

A Plug and Play

 - 1** When you turn on the mains supply, "AUTO INSTALL - PRESS PLAY" is displayed.
- 2** Press **▶ II** on the system to start installation.
 - "INSTALL" is displayed, followed by "TUNER" and "AUTO".
 - **PROG** starts flashing.
 - When all the available radio stations are stored or the memory for 40 presets are used, the last preset radio station (or the first available RDS station) will be played.

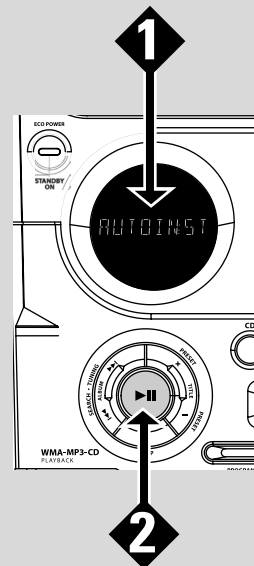


B Timer Operations

- 1** Press and hold **CLK/TIMER** (or **CLOCK•TIMER** on main unit) until "SELECT CLOCK OR TIMER" is displayed.
- 2** Press **-/+** to change the display to "TIMER" and press **CLOCK•TIMER** again to confirm.
- 3** Press **CD** or **TUNER** or **TAPE** to select the wake-up source.
- 4** Press **I◀◀** or **▶▶I** (for hours) and **-** or **+** (for minutes) repeatedly to set the wake-up time.
- 5** Press **CLOCK•TIMER** to store the setting.

To exit without storing the setting

 - Press **■** on the system.

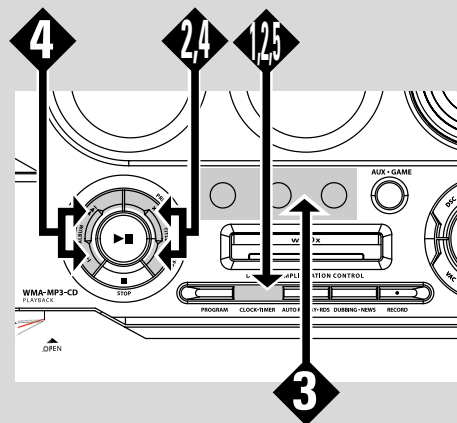

C Loading discs

- 1** Press **OPEN•CLOSE ▲** on the main unit to open the disc tray.
- 2** Load a disc with the label side facing up.
- 3** Press **OPEN•CLOSE ▲** again to close the disc tray.
- 4** Press **▶ II** to play the CD.

