

PHILIPS

NORELCO

Bodygroom



BG2030
Rechargeable
Cordless

Register your product and get support at
www.philips.com/norelco

IMPORTANT SAFEGUARDS

When using an electric appliance, basic precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a charging stand while plugged in that has fallen into water. Unplug immediately.
2. Charging stand is not for immersion or for use while bathing or in a shower.
3. Do not use an extension cord with this appliance.
4. Do not place or store charging stand where it can fall or be pulled into a tub or sink. Do not place or drop a charging stand into water or other liquid while plugged in.
5. Always unplug the charging stand from the electrical outlet immediately after use, except when groomer is (re)charging.
6. Remove power supply cord from charging stand before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this groomer/charging stand is used by, on, or near children or invalids.
2. Use this groomer/charging stand for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this groomer/charging stand if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. For assistance call 1-800-243-3050.
4. Keep the groomer, charging stand, cord and charging plug away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Never operate the groomer with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Do not charge groomer outdoors, in humid conditions or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Always check foil, cutters, and trimmers before using the groomer. Do not use the groomer if foil, cutters or trimmers are damaged, as injury may occur.
9. Always attach plug to charging stand first, then charging plug into outlet. To disconnect, remove charging plug from outlet.
10. Never put the groomer/charging stand in direct sunlight or store at a temperature above 140°F.
11. Groomer is water-safe and can be rinsed under running tap water or used in shower. Do not submerge groomer in water.
12. To prevent possible damage to the cord, do not wrap cord around the charging stand. Do not store in a damp environment.

SAVE THESE INSTRUCTIONS

IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug, as this will cause a hazardous condition.

Registration

Congratulations on your purchase and welcome to Philips Norelco!

To fully benefit from the support that Philips Norelco offers, register your product at www.philips.com/norelco

Create Your Own Look

Your new Philips Norelco Bodygroom system offers you a safe, gentle and quick way to trim and shave every body part below the neckline. This unique combination allows you to create your own look safely and with less irritation. This complete Bodygroom system consists of separate specially designed shaving and trimming attachments, which provide you with the most perfect body trim & shave. Use wet or dry, your Bodygroom system with self-sharpening blades will give you a precise trim and shave anywhere, every time.

Like many new products, your Philips Norelco Groomer may take a little getting used to. If you are shaving sensitive areas for the first time, your skin may need time to adapt. Give yourself some time to acquaint yourself with your new Groomer.


Stick with it! If you alternate trimming or shaving methods during the adjustment period it may make it more difficult to adapt to the Philips

Norelco Bodygroom system. If you are still not convinced, Philips Norelco will refund you the full purchase price as long as the request is received within 45 days of purchase.

Be certain to read the instructions and important information in this booklet to begin using your new Bodygroom.

Features

- A Extra-Large (XL) Trimming Comb
 - B Setting Indications
 - C Setting Selector
 - D Extra-Sensitive (XS) Trimming Comb
 - E Shaving Foil Unit
 - F Shaving Attachment
 - G Adaptor
 - H Small Plug
 - I Cleaning Brush
 - J Trimming Attachment
 - K Handle
 - L ON/OFF Button
 - M Charging Light
 - N Storage & Charging Stand
 - O Attachment Holder
 - P Cleaning Brush Holder
 - Q Socket for Small Plug
 - R Charger
- Full 2-Year Warranty
45-Day Money-Back Guarantee

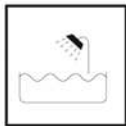

This symbol indicates that the groomer can be used in the bath or shower.

LED Charging Indicator

- ▶ The Charging Indicator Light on the adaptor will light up to indicate Groomer is (re)charging.
- ▶ When the charging light on the Groomer lights up red, the battery is running low (approx. 10 min. of operating time left) and you need to recharge the Groomer.

Before First Use

- ▶ Charge the Groomer before you start using it (see 'Charging'). Make sure the Groomer is switched off before you start charging it.
- ▶ If the Groomer is subjected to a major change in temperature, pressure or humidity, let the Groomer acclimate for 30 minutes before using.
- ▶ Charge the Groomer for at least 10 hours before you use it for the first time or if Groomer hasn't been used for a long period of time. Charging normally takes 8 hours.

Important

- ▶ Only use the adaptor charging plug provided to charge the Groomer.
- ▶ Before using, check foil, cutters and trimmers for wear or damage. If foil, cutters or trimmers show signs of wear or damage, do not use Groomer as injury may occur. Do not use Groomer until foil, cutters or trimmers have been replaced.
- ▶ Use this Groomer for its intended household use as described in this manual.

Charging










- ▶ Battery performance is best if you recharge only when the batteries are (almost) completely empty.
- ▶ Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects life time of batteries.
- ▶ Continuously recharging will reduce life of batteries.
- ▶ Discharge the battery completely twice a year by letting the motor run until it stops. Then fully recharge the battery.
- ▶ This Groomer will not charge or operate corded directly from the electrical outlet.

- 1** Connect cord to charging stand (Fig. 1); plug the adaptor charging plug into any 120V outlet. Use only the cord provided. Slide the Groomer down into the charging stand (Fig. 2). The charging indicator on the adaptor and the charging light on the handle will light up to indicate Groomer is (re)charging (Fig. 3).
- 2** Charging requires a full 8 hours. When the Groomer is fully charged, the charging light on the handle goes out. A fully charged Groomer has a cordless grooming time of up to 50 minutes.

Recharging

- 1** Recharging requires a full 8 hours.
- 2** When Groomer is fully charged, disconnect the adaptor charging plug from outlet.
- 3** Do not keep charging stand permanently plugged into outlet.

Features

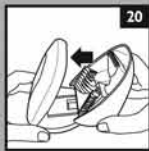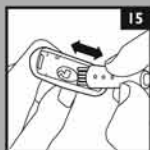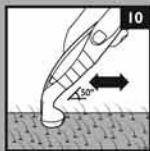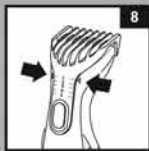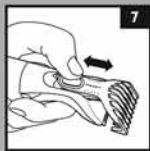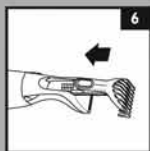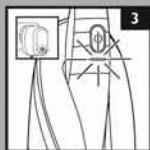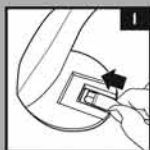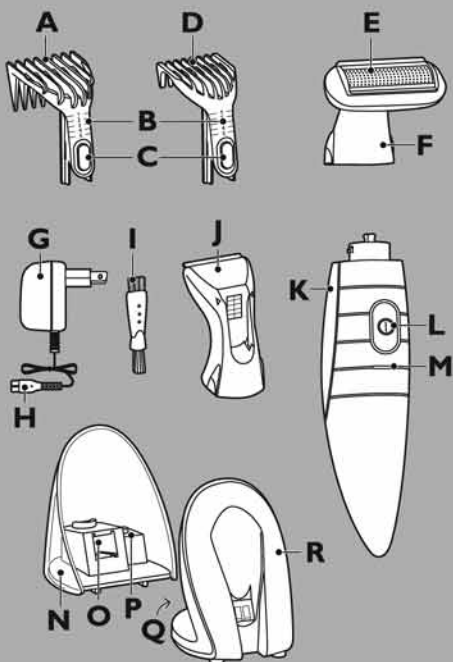

- 1** Put the trimming attachment on the handle (see section 'Attaching/Detaching Attachments' in chapter 'Using the Appliance').
- 2** Put one of the two trimming combs on the trimming attachment (Fig. 6).
 - Use the XL comb to trim hairs on extra-large areas, such as your chest, abdomen, back and legs.
 - Use the XS comb to trim hairs on extra-sensitive areas, such as your pubic area, underarms and around the nipples.
- 3** Press the setting selector upwards or downwards to set the desired setting (Fig. 7).

Settings of XL and XS Combs

- ▶ The two arrowheads on the trimming attachment show which setting you have set (Fig. 8).
- ▶ The table shows how long the hair will be after trimming at the different settings.
- ▶ When you trim for the first time, start at the highest setting (5) to familiarize yourself with the appliance.

Settings	Hair length after trimming
1	.12 in./3 mm
2	.19 in./5 mm
3	.28 in./7 mm
4	.35 in./9 mm
5	.43 in./11 mm

- 4** Press the ON/OFF button once to switch on the Groomer.
- 5** Move the Groomer through the hair slowly (Fig. 9).
- 6** Turn Groomer OFF by pressing the ON/OFF button.

Trimming Tips

- ▶ To trim in the most effective way, move the appliance against the direction of hair growth.
- ▶ Always make sure that the tips of the comb point in the direction in which you move the appliance.
- ▶ Make sure that the flat part of the comb is always fully in contact with the skin to obtain an even result.
- ▶ Since all hair does not grow in the same direction, you need to move the appliance in different directions (upward or across).
- ▶ Trimming is easier when the skin and hair are dry.

Shaving

Before you use the shaving attachment, always check for damage or wear. Do not use the shaving attachment if the shaving foil unit or the cutter is damaged, as injury may occur. If the shaving foil unit is damaged, stop using and replace it.

- ▶ Do not use this Groomer to shave or trim facial or scalp hair. The Groomer should only be used on skin below the neckline.
 - ▶ When shaving sensitive areas for the first time, you may feel some discomfort, irritation or reddening of the skin. This is normal as your skin needs time to adjust to shaving.
 - ▶ If your hair is longer than .40 inch / 10 millimeters, trim hair using a trimmer comb first for optimum shaving results.
 - ▶ For dry use, be certain that your skin is clean and dry before using the Groomer.
 - ▶ For wet use, you may prepare your skin with lathered soap or shaving foam before using the Groomer.
 - ▶ Make sure the shaving foil is in complete contact with your skin for the closest shave and minimum foil wear.
 - ▶ Pressing too hard may cause skin irritations.
 - ▶ Practice is best for optimum results.
- 1** Put the shaving attachment on the handle (see section 'Attaching/Detaching attachments' in chapter 'Using the Appliance').
 - 2** Press the ON/OFF button once to switch on the appliance.
 - 3** Place the shaving foil on the skin.
 - 4** Move the appliance against the direction of hair growth while you press it lightly onto the skin (Fig. 10).
 - 5** Turn Groomer OFF by pressing the ON/OFF button.

Shaving Tips

- ▶ Stretch the skin when you move the shaving foil across it. Move it slowly and smoothly against the direction of hair growth.
- ▶ Make sure that the shaving foil is always fully in contact with the skin. Do not press too hard. Too much pressure can distort the foil and cause skin irritation.

Cleaning and Maintenance

- ▶ Clean the Groomer after every use.
- ▶ Always switch Groomer OFF and remove cord from charging stand and charging plug from outlet before cleaning.
- ▶ Never clean, remove or replace shaving head assembly while motor is on.
- ▶ Do not apply pressure to shaving head. Do not touch foil with hard objects as this may dent or damage foil or cutters. If damage occurs, replace damaged parts.
- ▶ Do not use Groomer if foil, cutters or trimmers are damaged or broken as injury may occur.
- ▶ Only use the cleaning brush supplied. Any other brush may cause damage.
- ▶ Do not use a towel or cloth to dry shaving foil or cutters as this may cause damage; allow to air dry thoroughly.

Never use compressed air, scouring pads, abrasive cleaning agents or harsh chemicals to clean the appliance.

Note: The trimming and shaving attachments do not need any lubrication.

- 1** Always switch off the Groomer, remove the charging plug from outlet and remove cord from charging stand before cleaning.
- 2** Remove any comb and/or attachment from the Groomer.
- 3** Blow and/or shake out any hair that has accumulated in the trimming attachment and/or trimming combs.
- 4** To clean the trimming and shaving attachments, see the sections 'Trimming attachment' and 'Shaving attachment' below.
- 5** Clean the adaptor with the cleaning brush or a dry cloth.

Make sure the adaptor does not get wet.

- 6** After rinsing, gently shake excess water from Groomer or attachments. Wipe the Groomer body dry with a clean towel or cloth.

Trimming Attachment

- 1** Put your thumb under the tab to remove the cover off the trimming attachment (Fig. 11).
- 2** Rinse the trimming attachment with lukewarm water.
- 3** Remove hairs from the inside of the trimming attachment with the cleaning brush and/or with lukewarm water (Fig. 12).
- 4** After cleaning, snap the cover back into the trimming attachment ('click') (Fig. 13).

Shaving Attachment

- 1** Pull the shaving foil unit out of the shaving attachment (Fig. 14).

Note: The shaving foil unit is very delicate. Handle it carefully. Replace the shaving foil unit if it is damaged.

- 2** Rinse the shaving foil unit with lukewarm water. Make sure that you also remove any hairs that have collected under the trimmers.

Do not clean the shaving foil unit with the cleaning brush, as this may cause damage.

- 3** Remove hairs from the inside of the shaving attachment with the cleaning brush and/or with lukewarm water (Fig. 15).
- 4** After cleaning, snap the shaving foil unit back into the shaving attachment ('click') (Fig. 16).

Replacing the Shaving Foil Head

- ▮ If the shaving foil and cutters are worn or damaged, do not continue using the Groomer. Replace the shaving foil and cutters immediately.
- ▮ It is recommended that you replace your shaving foil and cutters once a year.
- ▮ A worn or damaged shaving foil or cutters should only be replaced with an original Philips Norelco shaving foil, model BG2000, which is available on the Philips Norelco website, www.philips.com/norelco or call 1-800-243-3050 for assistance.
- ▮ The foil is a precision part. Handle with care.

- 1** Always switch Groomer OFF and remove Groomer from the charging stand before replacing shaving foils.
- 2** Remove the shaving foil head by pulling it off the appliance (Fig. 15).
- 3** Place the new shaving foil head on the Groomer by snapping it into place (Fig. 17). You will hear a "click".

After replacing the shaving foil head, check that the shaving head is firmly attached before using Groomer.

This Groomer has no other user-serviceable parts. For assistance call 1-800-243-3050.

Storage

The charger has a special storage unit in which you can store the trimming or shaving attachment, the cleaning brush and the two combs.

- 1** Place the cleaning brush in the brush holder (Fig. 17).
 - 2** Place the trimming or shaving attachment on top of the attachment holder (Fig. 18).
 - 3** Slide the two trimming combs sideways into the guiding grooves of the attachment holder. The tips of the combs must point forwards (Fig. 19).
 - 4** Slide the storage unit onto the back of the charger (Fig. 20).
 - 5** To remove the storage unit, pull it off the back of the charger (Fig. 20).
- ▶ The Groomer can be placed in the charging stand for safe storage. If storing Groomer in stand, remove the plug from the outlet as soon as the Groomer is fully charged.
 - ▶ Be sure Groomer is turned off. Remove cord from outlet and charging stand before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
 - ▶ Do not wrap cord around Groomer/charging stand when storing.
 - ▶ Store cord in a safe location where it will not be cut or damaged.
 - ▶ Do not place or store Groomer/charging stand where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.

Assistance

For assistance, call toll free:

1-800-243-3050

or visit our website:

www.philips.com/norelco

Information is available 24 hours a day, 7 days a week.

Accessories

- ▶ For maximum Groomer performance replace shaving foil head once a year.
- ▶ Replacement Shaving Foil Head
Model BG2000–Philips Norelco Replacement Shaving Foil Head
- ▶ Replacement Parts may be purchased on our website www.philips.com/norelco

PHILIPS**NORELCO****45-DAY MONEY-BACK GUARANTEE**

If you are not fully satisfied with your Philips Norelco Product, Philips Norelco will refund you the full purchase price.

The product must be shipped prepaid by insured mail, insurance prepaid, and have the original sales receipt, indicating purchase price and the date of purchase, enclosed. We cannot be responsible for lost mail. The product must be postmarked no later than 45 days after the date of purchase. Philips Norelco reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

To obtain money-back guarantee return authorization form, call 1-800-243-3050 for assistance. Please allow 4-6 weeks for delivery of check.

Full Two-Year Warranty

Philips Electronics North America Corporation warrants each new Philips Norelco Product, Model BG2030 (except foil and cutters) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge. **IMPORTANT:** This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.* Use of unauthorized replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE. NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com/norelco or call 1-800-243-3050 for assistance. It is suggested that, for your protection, you return shipments of product by insured mail, insurance prepaid.

Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

* Read enclosed instructions carefully.

Manufactured for:

Philips Consumer Lifestyle

A Division of Philips Electronics North America Corporation

1600 Summer Street - 5th Floor

Stamford, CT 06905-5125



This symbol on the product's nameplate means it is listed by Underwriters Laboratories, Inc.

Norelco is a Registered Trademark of Philips Electronics North America Corporation.

Bodygroom is a Trademark of Koninklijke Philips Electronics N.V.

PHILIPS is a Registered Trademark of Koninklijke Philips Electronics N.V.

© 2009 Philips Electronics North America Corporation. All Rights Reserved.