


Register your product
and get support at
www.philips.com/welcome

SRC2063WM/17




EN User Manual

PHILIPS

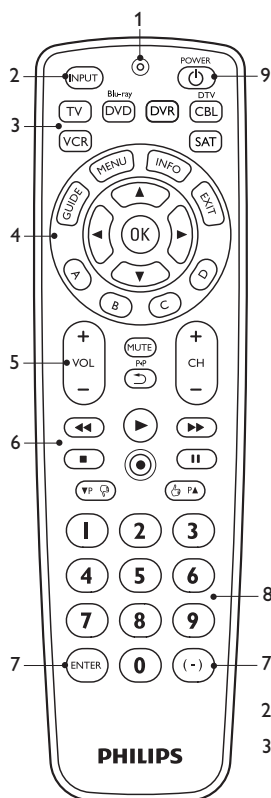

SRP2006/27

For an overview of the buttons and their functions refer to chapter 3.1.

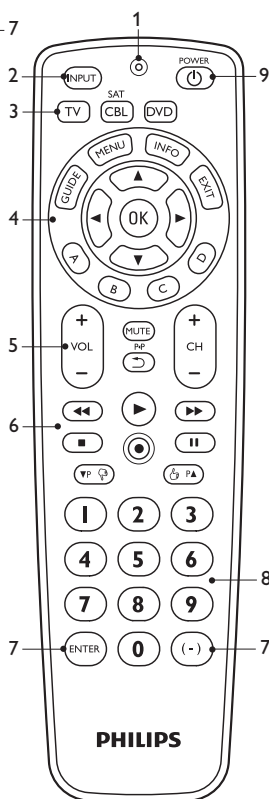

SRP2003/27

Table of contents

1	Your SRC2063WM.....	3-4
2	Getting started.....	4-8
2.1	Inserting the batteries.....	4
2.2	Setting up the universal remote controls.....	4-8
3	Using the universal remote controls...9-11	
3.1	Buttons and functions.....	9-10
3.2	Resetting a button to its original function.....	11
4	Service and support.....12-15	
4.1	Frequently asked questions.....	12-14
4.2	Need help?	14
	FCC Compliancy.....	15
	Notice for Canada	16
	Helpline.....	17
	Brand list.....	18-30
	Information to the consumer.....31	
	Compliance with EMF.....	31
	Recycling and disposal.....	

1 Your SRC2063WM

Congratulations on your purchase of the Philips SRC2063WM universal remote control twinpack. The pack contains the 3-device remote control SRP2003 and the 6-device remote control SRP2006. After setting up the remote controls you can operate up to 3 different devices with the SRP2003 and up to 6 different devices with the SRP2006.

Simple Setup

Both universal remote controls come with the innovative Simple Setup technology. After setup, the remote controls can operate TV, DVD player / recorder (including Blu-ray player) and all common Cable, Satellite, DTV and other set top boxes, such as DirecTV, Comcast, AT&T, Verizon, Time Warner, Scientific Atlanta, Tivo and many more.

The SRP2006 can also be set up for VCR, and DVR.

Simply follow the instructions in chapter 2.2 to set up the remote controls for your devices.

Glow buttons (SRP2006 only)


The SRP2006 glow buttons: (ENTER, (-) and the numeric buttons) glow in the dark, enabling easy use of the remote control, even in a dimly lit room.

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2 Getting started

2.1 Inserting the batteries

- Insert 2 AAA type batteries, noting the + and - configuration in the battery compartment.

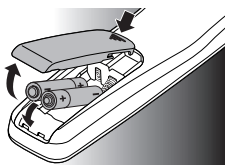

Note

When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

2.2 Setting up the universal remote controls

The example below instructs you how to set up your universal remote controls for your TV. You can repeat the same steps for other devices (DVD player / recorder; DTV, Cable / Satellite box, DVR and VCR) which you want to operate, using the universal remote controls.

Note

The setup procedure is the same for both remote controls.

The remote controls can be set up to operate any 3 or 6 of the following devices:

Device name	Description
TV	Traditional TV, LCD / Plasma TV and projection TV, TV part of TV / VCR, TV / VCR / DVD and TV / DVD combos
DVD	DVD player / recorder (DVDR), DVD / Hard Disk Drive combination (DVDR-HDD), Blu-Ray player; High Definition DVD player (HD-DVD), DVD part of TV / DVD, TV / VCR / DVD and VCR / DVD combos
CBL/SAT	Cable box, satellite receiver; Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV), Digital Television (DTV) and Tivo
VCR (SRP2006 only)	Video cassette player / recorder; VCR part of TV / VCR, TV / VCR / DVD and VCR / DVD combos
DVR (SRP2006 only)	Digital / Personal Video Recorder (DVR / PVR), Tivo

Example: setting up the universal remote controls to operate your TV:

- Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.
- Press and hold** the  device selection button **for 5 seconds** until the red Setup light  blinks. The remote control is now in setup mode.



- 3 Look up the 4-digit code for your brand in the brand list at the back of this user manual.




A 4-digit code is shown for each brand.

Use the digit buttons to enter the code for your brand.

- If the red Setup light  turns off, an invalid code was entered. In this case, try again.




- 4 Aim the remote control at the TV. **Press and hold** the  button. Release it **immediately** as soon as the TV switches off.

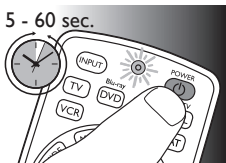

- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

- 5 **Switch ON** the TV. Try out the buttons that you need for operating it. Try, for example, if the - CH + and digit buttons function properly.

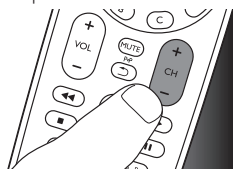

- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.2.

- 6 Press the  device selection button **twice** to finish setup.



- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

! Important

If you made a mistake:

- Press the device selection button **twice** to exit setup. The red Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

2.2.1 Setting up the remote controls for other devices (DVD player / recorder; DTV, Cable / Satellite box, DVR and VCR)

- 1 Make sure the device is switched on and operational. E.g. insert a disc in the DVD player / recorder or a video cassette in the VCR (SRP2006 only).
- 2 Then follow steps 2 to 6 of 'Setting up the universal remote controls to operate your TV'. Make sure to use the correct device selection button:
 - for SRP2003:  or .
 - for SRP2006: , , ,  or .

2.2.2 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected. In this case you can have the remote control search for alternatives.

≡ Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

During initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player; make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
 - If the button still does not function as expected, try pressing it again for a longer period of time.


After initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player; make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.

- 2 Select the device that you wish to operate (e.g. DVD). Press the **DVD** or **DVD** device selection button to select DVD.



- 3 Keep buttons ① and ④ pressed simultaneously for 5 seconds.

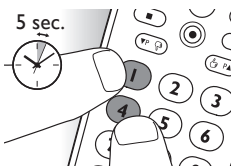

- The red Setup light  lights up. The remote control is now in setup mode.

- 4 Press and hold the button that does not function and **immediately** release it when the device responds.

- If the button still does not function as expected, try pressing it again for a longer period of time.

- 5 Press the **DVD** or **DVD** selection button **twice** to save your settings and exit setup mode.



- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

3 Using the universal remote controls


3.1 Buttons and functions

The illustrations on page 2 gives an overview of all buttons on the remote controls. Try out the buttons you need for operating your devices.

Notes


- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP2003 / SRP2006 (e.g. Info / Display).
- Only functions that are available on your original remote control can be used for operating your devices with the universal remote controls.

- 1  Setup light. Lights up when a remote control command is being sent, when you just selected a device and when the remote control is in setup mode.
- 2 **INPUT** selects available source inputs (antenna, cable, etc.).
- 3 **TV** **DVD** **DVR** **DTV** **CBL** **SAT** device selection buttons. Select the device to be operated.

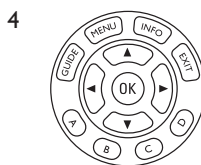

- GUIDE** electronic program guide.
MENU menu on / off.
INFO on-screen channel information.
EXIT exits / clears on-screen menu displays.
▲ ▼ ◀ ▶ cursor up, down, left, right in a menu.
OK confirms your selection.

A, B, C, D..... Context sensitive buttons, ordered following the requirements for cable boxes.
A - Yellow, B - Blue, C - Red, D - Green.



+ VOL adjusts TV volume.
MUTE mutes TV sound.
⏮ previous program / Last / Back.
+ CH next / previous channel.



⏮ rewind.
⏪ play.
⏩ fast forward.
■ stop.
● record.
⏹ pause.
▼P ▲P previous (▼P) / next (▲P) page / track in various modes.
👍 / 👎 set your Thumb ratings.

7 **ENTER** used after direct channel selection. some devices require ENTER to be pressed after channel selection.
(-) selects between one and two-figure channel numbers.


8 **1 2 3 4 5 6 7 8 9 0** digit buttons for direct channel / track selection.

9 **POWER** **⏻** switches the selected device on / off.

3.2 Resetting a button to its original function

If an improved button (see chapter 2.2.2) still does not function as expected, you can always reset the button to its original function.

- In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light lights up.
 - The remote control is now in setup mode.
- Press digit buttons **9**, **9**, and **6**, in that order.
 - After each button press the red Setup light blinks once.
- Press the button that you wish to reset **twice**. E.g. the **▶▶** button.
 - After each button press the red Setup light blinks once.
 - The red Setup light will blink one more time to confirm that the button was successfully reset to its original function.

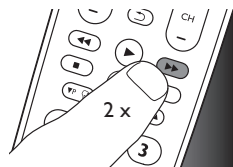

Note

For some TV brands / types, the **POWER** **⏻** button will only turn off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.

4 Service and support

4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote controls.

4.1.1 Setup

I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV, DVD, CBL/SAT, DVR and VCR brands.

- You will find a complete brand list on page 18-30 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list.
Note that using '9999' may result in a long setup (up to 15 minutes).

My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.2) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

After setup, not all buttons work as expected.

- Try improving the button(s).
See chapter 2.2.2.

How do I set up the remote control for combo devices (TV / VCR, TV / DVD, DVD / VCR, etc)?

Some combo devices require you to set up two different device selection buttons to control both parts of the combo device. For example, if you have a TV / DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV / DVD combo.

4.1.2 Operation

The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.
After replacing the batteries, test if the remote control still operates your devices. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

The device I want to operate does not respond at all / does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.2.2.

Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

4.1.3 Batteries

Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory for 5 minutes.



Warning

The batteries should not be exposed to excessive heat such as sunshine, fire or the like.

4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the universal remote controls, you can always contact us.

When calling our helpline, make sure to have the SRP2003 and / or SRP2006 at hand when you call, so that our operators can help you determine whether the universal remote control(s) is / are working properly.

You will find our contact details at the end of this user manual.

The model numbers of your Philips universal remote controls are SRP2003/17 and SRP2006/17. The model number of the twinpack is SRC2063WM/17.

Date of purchase:

...../...../.....

(day/month/year)

For **online support** go to:

www.philips.com/welcome.

- Click 'Support' and follow the on-screen instructions.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.



Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Caution

User changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice for Canada

This class B digital apparatus complies with Canadian ICES-003.



Helpline

Country

Phone number

United States of America
Canada

001-888-744-5477

8880006 (DB1) Amplivision...0138
 Ampro.....0139
 Amstrad0140
 AMTC4015 (DB1)
A Amtron.....0141
 ABC.....0013 AMWV.....0143
 Abex0014 Anam0146
 ABS.....0016 Anam National
 Accele Vision 41940147
 Access HD... 35540151
 Accurian0022 Anglo0151
 Acer.....0028 Anitech0154
 Acura0036 Ansonic.....0156
 ADC.....0040 (DB1) Antronix.....0159
 Addison.....0043 AOC.....0165
 Adelpia4195 Aolinpiya4089 (DB1)
 Admiral.....0046 Apache.....0169
 Advent0054 Apex3691
 Adventura0055 Apex Digital.0170
 Adyson.....0058 Apple0172
 Agashi.....0063 Arcam.....0179
 Agazi.....3522 (DB1) Archer0180
 AGB.....0064 Archos.....0181
 Aiko0069 Ardem.....0184
 Aim0070 Aristona.....0192
 Aiwa0072 Arrgo0197
 Akai.....0074 Arris.....4931 (DB1)
 Akiba.....0078 Artec.....4016
 Akira.....0079 (DB1) Asberg.....0205
 Akito.....0082 Asha.....0209
 Akura0083 Aspire4233
 Alaron.....0085 Astar.....0218
 Alba0086 Asuka0227
 Albatron.....0087 AT&T3453
 Alco0092 Atlantic.....0233
 Alienware.....0099 Atori.....0237
 Allegro.....0103 Audio Dynamics
 Alleron01040248
 Allorgan.....0105 Audiosonic...0264
 Allstar.....0108 Audioton0266
 Alpha Digital 40140268
 AlphaStar.....0113 Audiovox.....0268
 Alpine0114 Autovox0280
 America Action0287
0123 Awa0296
 American High Axion0299
0125
 Americast.....0127
 Amphion Media
 Works.....0135

B Bush.....0445
 Baihua.....4092 (DB1) Byd:sign.....0448
 Baird0311
 Bang & Olufsen
0314
 Baohuashi0316 (DB1)
 Basic Line.....0325
 Bastide.....0327
 Baur0331
 Bazin0335
 BBT0338
 Beaumark.....0340
 Beijing0345
 Beko0346
 Belcor0348
 BELL4376 (DB1)
 Bell & Howell
0350
 Bell ExpressVu
0352 (DB1)
 Bell South0353
 BenQ0359
 Beon0361
 Best0364
 Bestar.....0368
 Bestar-Daewoo
0369
 Binatone0378
 Black Star0386
 Blacktron3526
 Blackway.....0388
 Blaupunkt.....0390
 Blue Parade..0394
 Blue Sky.....0395
 Blue Star.....0396
 Bondstec.....0403
 Boots.....0405
 BOSS.....4197
 BPL0413
 Bradford0414
 Brandt.....0416
 Brilliant.....0422
 Brinkmann....0423
 Brionvega.....0424
 Britannia0425
 Brockwood...0430
 Broksonic.....0432
 BskyB.....0436
 BTC0439
 Cable Star.....0454
 Cabletenna ...0456
 Cableview.....0458
 Cablevision ...4238
 Caihong.....0462
 Caixing4093 (DB1)
 California Audio
 Labs.....0467
 Calix0468
 Candle.....0480
 Canon.....0481
 Capsonic.....0486 (DB1)
 Captive Works
0487
 Carad.....0488
 Carena.....0489
 Carnivale.....0491
 Carrefour.....0492
 Carver0494
 Cascade.....0496
 Casio0499
 Catha4094
 Cathay0501
 CCE.....0504
 Celebrity0509
 Celera.....0510
 Centurion.....0520
 Century.....0521
 CGE.....0523
 Changcheng..0526
 Changfei0527
 Changfeng.....0528 (DB1)
 Changhai0529
 Changhong...0530
 Channel Master
0531
 Chaparral.....0533
 Ching Tai.....0541
 Chun Yun0545
 Chunfeng.....0546
 Chung Hsin...0547
 Chunlan.....4097 (DB1)
 Chunsun.....0549
 Cimline.....0552
 CineVision.....0562

Citizen0567
 City0569
 Clarion0575
 Clarivox0576
 Clatronic0581
 Clearmaster0583
 ClearMax0584
 CMS0590
 CMS Hightec0591
 Coby0597
 Colortyme0601
 Colour Voice0602
 Colt0603
 Comcast3456
 Commercial
 Solutions0615
 Comtronics0623
 Concerto0625
 Concorde0626
 Condor0627
 Conrowa0634
 Contec0635
 Contec/Cony4199
 Coolmax0642
 Coolsat0643
 Coship0646
 Cosmel0647
 COX4200
 Craig0650
 Crosley0655
 Crossdigital0656
 Crown0658
 CS Electronics
0663
 CTC0664
 CTX0665
 Curtis Mathes
0667
 CXC0670
 CyberHome0672
 Cybernex0673
 CyberPower0674
 Cybertron0675
 Cytron0680

D

Daeryung0691
 Daewoo0692
 Danichi3914

Dansai0699
 Dantax0702
 Davidson4202
 Dawa0707
 Daytron0710
 DBX0712
 Decca0718
 Deitron0722
 Dell0725
 Denon0731
 Denver0733
 Desay0737
 Desmet0738
 Diamant0746
 Diamond0747
 Diamond Vision
0748
 Digatron0751
 Digi0754
 Digiline0759
 Digital Stream
3809
 Dimensia3569
 Director0793
 DirecTV0794
 Dish Network
 System0799
 Dishpro0800
 Disney0803
 Dixi0807
 Dongda0820
 Donghai0821
 Drake0825
 Drean0832
 DSE0833
 DTS0837
 Dual0838
 Dual-Tec3528
 Dumont0840
 Durabrand0842
 Dux0843
 DVD20000844
 D-Vision0684
 Dwin0848
 Dynatech0854
 Dynatron0855
 Dynex3476

E

Eastern0859
 ECHOSPHERE
4396 (DB1)
 Echostar0866
 Eclipse0867
 Eiki0874
 Elbe0880
 Elbe-Sharp3529
 Elcit0883
 Electroband0888
 Electrograph0889
 Electrohome0890
 Electroponic
0893
 Elektra0896
 Element3477
 ELG0900
 Elin0902
 Elite0903
 Elmak0907 (DB1)
 Elta0910
 Emerson0917
 Emperor0921
 Emprex0922
 Enterprise0931
 Envision0933
 Epson0937
 Erres0942
 ESA0943
 ESC0945
 Ether0948
 Etron0949
 Eurofeel0954
 EuroLine0955 (DB1)
 Euroman0956
 Europa0957
 Europhon0959
 Everquest0971
 Expressvu0977
 Exquisit0978

F

Fagor Life4102
 Feilang0990
 Feilu0991
 Feiyan0992 (DB1)
 Feiyue0993
 Fenmenti4103

Fenner0994
 Ferguson0996
 Fidelity0998
 Filsai1000
 Finlandia1003
 Finlux1004
 Firststar1007
 Firstline1008
 Fisher1009
 Flint1014
 FNR1016
 Focus1017
 Formenti1023
 Formenti-Phoenix
1024
 Fraba1030
 Friac1040
 Frontech1042
 Fuji1047
 Fujitsu1052
 Fujitsu General
1053
 Funai1056
 Furi1057
 FUTEC3960 (DB1)
 Futuretech1064

G

Galaxi1068
 Galaxis1069
 Garrard1075
 Gateway1076
 GBC1078
 GC Electronics
1080
 GE1081
 GEC1083
 Gehua1086
 Geloso1087
 Gemini1089
 General Instrument
1093
 General Technic
1095
 Genexxa1097
 GFM3820
 Giant1113
 Gibraltar1114
 Go Video1126

GOI.....1130
 GoldHand1136
 Goldline.....1138
 GoldStar.....1140
 Goodmans.....1142
 Goodmind1143
 GPM.....1149
 Gradiente.....1151
 Graetz1152
 Granada.....1154
 Grandin.....1156
 Greenhill1157
 Gronic.....1160
 Grundig.....1162
 Grunpy.....1165

H

Haier1175
 Haihong.....1176
 Haiyan.....1177 (DB1)
 Halifax.....1179
 Hallmark.....1180
 Hamlin.....1182
 Hampton.....1183
 Hankook.....1188
 Hanseatic.....1190
 Hantarex.....1192
 Hantor.....1193
 Harley Davidson
1197
 Harman/Kardon
1198
 Harvard.....1202
 Harwood.....1204
 Hauppauge....1206
 Havermy.....1208
 HCM.....1210
 Headquarter.1214
 Hello Kitty1221
 Hema.....1222
 Hemmermann
1223
 Hewlett Packard
1229
 Higashi.....1234
 Highline.....1236
 Hikona.....1237
 HiLine.....3533
 Hinari.....1243

Hisawa.....1247
 Hisense.....1249
 Hitachi.....1251
 Hitachi Fujian 1252
 Hiteker.....1255
 Hitsu.....1257
 Hoeher.....1262
 Hongmei.....1272
 Hongyan.....1274 (DB1)
 Hornyphon....1277
 Hoshai.....1278
 Howard
 Computers....1281
 HP.....1283
 HTS.....1285
 Huafa.....1287
 Huanghaimei.1288
 Huanghe.....1289
 Huanglong.....1290
 Huangshan1291
 Huanyu1292
 Huaqiang.....1293 (DB1)
 Huari.....1294
 Hughes.....4205
 Hughes Network
 Systems.....1296
 Humax.....1298
 Hush.....1304
 Hygashi1308
 Hyper.....1309
 Hypson1312
 Hytex.....1314
 Hyundai.....1315

I

Iberia1320
 iBUYPOWER
1322
 ICE.....1324
 ICeS.....1325
 Illico.....4206
 iLo.....1341
 iLuv.....4234
 Ima.....1342
 Imperial.....1346
 Imperial Crown
1347 (DB1)
 Indiana.....1350
 Infinity1352

InFocus.....1353
 Ingelen.....1354
 Ingersol.....1355
 Initial1356
 Inno Hit.....1358
 Innova.....1359
 Innovation1360
 Insignia.....1368
 Instant Replay
3580
 Integra1370
 Inteq.....1373
 Interbuy.....1376
 Interfunk.....1377
 Internal.....1379
 International..1380
 Intervision.....1386
 IR.....4110
 Irradio.....1396
 Isukai.....1402
 iSymphony3755
 ITC.....1404
 ITS.....1405
 ITT.....1406
 ITV.....1408

J

Janeil1414
 Jasco.....1415
 JBL.....1420
 JC Penney.....4208
 JCB.....1421
 JCL.....4209
 Jean1424
 Jensen1429
 Jerrold.....1431
 Jiahua.....1435 (DB1)
 JiaLiCai.....1436 (DB1)
 Jinque.....1440 (DB1)
 Jinta.....1441 (DB1)
 Jinxing.....1442
 Juhua.....1461 (DB1)
 JVC.....1464
 jWin.....1465

K

Kaige.....1470 (DB1)
 Kaisui1471
 Kamp.....1475

Kanghua.....1477
 Kangli.....1478 (DB1)
 Kangyi.....1479 (DB1)
 Karcher.....1484
 Kawa.....1487
 Kawasaki.....1488
 Kawasho.....1489
 Kaypani.....1490
 KEC.....1496
 Kendo.....1500
 Kenwood.....1507
 KIC.....1512
 Kingsley1520
 Kioto.....1523
 Kiton.....1525
 KLH.....1529
 Kloss Novabeam
4210
 Kneissel1535
 Kodak.....1540
 Kolin.....1541
 Kolster.....1543
 Kongque.....1545 (DB1)
 Konig.....1547
 Konka.....1548
 Korpel.....1552
 Korting.....1554
 Kosmos.....1557
 Koss1558
 KTV.....1572
 Kuaile.....1573 (DB1)
 Kunlun.....1578 (DB1)
 Kyoshu.....1583
 Kyoto.....1585

L

L&S Electronic
1588
 Landel.....1593
 Lasonic.....1600
 Layco.....4117
 Lecson.....1606
 Lenco.....1615
 Lenoir1617
 Lenoxx.....1618
 Lesa.....1622
 Lexicon1625
 Leyco.....1627
 LG.....1628

LG/Goldstar...3536 (DB1)
 Liesenk3537 (DB1)
 Liesenk & Tter
1630
 Liesenkotter...1631
 Life.....3538 (DB1)
 Lifetec.....1633
 Linksys1640
 Linsay1642
 Liquid Video ..1644
 LiteOn.....1645
 Lloyd's.....1648
 Local India TV
1653
 Loewe.....1660
 Loewe Opta.3540
 Logik.....1661
 Longjiang.....1664 (DB1)
 Luma1674
 Lumatron.....1676
 Lux May.....1680
 Luxman.....1682
 Luxor1683
 LXI.....1686

M

M & S.....1687
 Madison.....1698
 Magnadyne1702
 Magnafon.....1703
 Magnasonic...1704
 Magnavox.....1706
 Magnin.....1708
 Magnum1709
 Majestic.....1713
 Mandor.....1717 (DB1)
 Manesth.....1718
 Manhattan.....1719
 Marantz.....1724
 Mark.....1731
 Marta1735
 Masuda.....1744
 Matsui.....1750
 Matsushita1751
 Maxent.....1757
 Media Center PC
1777
 Mediator1784
 Medion.....1787

Medison.....1788
 MegaCable....4211
 Megapower...1791
 Megatron.....1795
 MEI1796
 Meile.....1797 (DB1)
 MeiShi.....4118 (DB1)
 Meletronic...3654
 Memorex.....1800
 Memphis1802
 Mercury.....1804
 Metz1810
 MGA1811
 MGN Technology
1812
 MicroGEM....4024
 Micromaxx...1822
 Microsoft.....1826
 Microstar.....1827 (DB1)
 Midland.....1831
 Minato1835
 Mind1837
 Minerva1838
 Minoka1840
 Minolta1841
 Mintek1845
 Minutz.....1847
 Mitsubishi.....1855
 Mivar1857
 MoDeng.....4120 (DB1)
 Monivision.....1872
 Montgomery
 Ward.....4212
 Morgans3970
 Motorola.....1878
 Movie Time...1880
 MTC.....1889
 MTLogic.....1892
 Mudan1896 (DB1)
 Multistandard
1904
 Multisystem...4121 (DB1)
 Multitec.....1906
 Multitech.....1907
 MultiVision1909
 Murphy1911
 Musikland.....1915

N

NAD1926
 Naiko1930
 Nakamichi1932
 Nakimura.....1933
 Nanbao.....1934 (DB1)
 Nansheng.....1935 (DB1)
 National Panasonic
4661
 NEC.....1950
 Neckermann.1951
 NEI1952
 Nesa1959
 Nesco.....1960
 Net Brazil1962
 Netsat.....1966
 NetTV1967
 Neufunk1970
 New Tech.....1979
 New World...1980
 Newave.....1981
 Next Base1983
 Next Level....1984
 Nexus.....1989
 NexxTech.....1990
 Nicamagic.....1994
 Nikkai.....1998
 Nikko2000
 Niveus Media
2012
 Noblex.....2013
 Nobliko.....2014
 Nokia2017
 Norcent.....2020
 Nordic.....2021
 Nordmende...2022
 Nordvision...3543 (DB1)
 Normerel.....2024
 Northgate.....2027
 Noshi2030
 Nova Vision...2032
 Novaplex.....2034
 Novatronic...2035
 NSC.....2042
 NTC.....2045

O

Oak2059
 Okana.....4122
 Okano2065
 Olevia2067
 Olympus.....2071
 Onimax.....2082
 Onkyo2085
 Onwa.....2087
 Opera.....2090
 Oppo2092
 Optimus.....2095
 Optoma2097
 Optonica.....2099
 Orbit2103
 Orion2111
 Oritron2112
 Online.....2113
 Ormond.....2114 (DB1)
 Orsowe.....2116
 Osaki2118
 Osio.....2121
 Oso2122
 Osume.....2123
 Otto Versand2126

P

Pace2134
 Pacific2135
 Pael.....2140
 Palladium.....2145
 Palsonic2147
 Panama2149
 Panasonic.....2153
 Panavision.....2154
 Panda2155
 Pansat.....2158
 Panther.....2160
 Paragon.....2161
 Pathe Cinema
2168
 Pausa2171
 Paysat.....2173
 PCT4213
 Penney.....2182
 Pentax.....2183
 Perdio2185
 Perfekt2186
 Philco2192

Philharmonic2194
 Philips.....2195
 Philips Magnavox
3715
 Phoenix.....2199
 Phonola.....2201
 Phonotrend...2202
 Pilot.....2207
 Pioneer2212
 Pionier.....2213
 Plantron.....2219
 Plasmsync.....4230
 Playsonic.....2224
 Polaroid.....2230
 Polk Audio.....2232
 Poppy.....2236
 Popular Mechanics
2237
 Portland.....2238
 Powerpoint...2241
 Prandoni Prince
4125
 Precision.....2244
 Prelude.....2247
 Priceclub2252
 Prima.....2253
 Primestar.....2257
 Princeton.....2258
 Prinz.....2260
 Prism2261
 Proceed.....2267
 Profekt.....4126
 Profex.....2269
 Profilo2272 (DB1)
 Profitronic.....2273
 Proline.....2274
 Proscan.....2279
 Prosonic.....2282
 Protech.....2284
 Proton.....2288
 Protron.....2289
 Provview.....2290
 ProVision.....2291
 Pulsar.....2296
 Pye.....2302
 Pymi.....2304

Q
 Qingdao2308 (DB1)
 Quarter.....2318
 Quartz2319
 Quasar2320
 Quelle.....2322
 Questa2324
 Qwestar.....2326

R
 Radialva.....2329
 Radio4128
 Radio Shack/
 Realistic.....4214
 Radiola2330
 Radiomarelli...2331
 RadioShack....2333
 Radiotone.....2334
 Radix2335
 Randex.....2343
 RCA2351
 Realistic.....2354
 Recor2359
 Recoton.....2361
 Rectiligne.....2362
 Redstar.....2366
 Reflex.....2368
 Regal.....2370
 Regency.....2371
 Regent.....2372
 Rembrandt....2375
 Reoc.....2379
 ReplayTV2380
 Revox.....2383
 Rex.....2385
 RFT2386
 Rhapsody.....2387
 Ricavision.....2388
 Rio.....2393
 R-Line.....2327
 Roadstar.....2398
 Rogers.....4215
 Rotel.....2414
 Rowa.....2416
 Runco2423

S
 Saba.....2429
 SageTV4981 (DB1)
 Saisho.....2437
 Saivod.....2439
 Salora.....2443
 Sambers2445
 Sampo2446
 Samsung.....2448
 Sandra2454
 Sanjian2455 (DB1)
 Sanky2456
 Sansui.....2458
 Sanyo2462
 Sanyuan2464
 SBR.....2492
 Sceptre.....2498
 Schaub Lorenz
2500
 Schneider.....2501
 Scientific Atlanta
2503
 Scimitsu.....2505
 Scotch.....2506
 Scott.....2508
 Sears.....2514
 SEG.....2522
 SEI.....2524
 Sei-Sinudyne..2525
 Seleco.....2528
 Sencora.....2531
 Sensory Science
2533
 Sentra2534
 Serino2539
 Shancha2546 (DB1)
 Shanghai.....2547
 Shaofeng.....2549
 Sharp.....2550
 Sharper Image
2551
 Shen Ying.....2552
 Shencai.....2553
 Sheng Chai....3922
 Shenyang.....2555
 Sherwood.....2557
 Shinco.....2560
 Shinsonic.....2562
 Shintoshii.....2564
 Shivaki.....2567
 Shogun2568
 Siam.....2572
 Siarem2573
 Siemens.....2574
 Siera.....2576
 Sierra.....3549 (DB1)
 Sigma Designs
2579
 Signal2581
 Signature.....2582
 Silva.....2591
 Silva Schneider
2592
 Silver.....2594
 Simpson.....2598
 Sindyne4510
 Singer2599
 Sinudyne.....2601 (DB1)
 SKY.....2610
 Skygiant.....2618
 Skyworth.....2631 (DB1)
 SL Marx.....2633
 Sogera.....2649
 Solavox.....2654
 Sonawa.....2663
 Sonic Blue.....2667
 Sonicview3954
 Soniko.....2669
 Sonitron.....2671
 Sonneclair.....2673
 Sonoko.....2675
 Sontec2677
 Sony.....2679
 Sound & Vision
2680
 Soundesign....2684
 Soundwave....2689
 Sowa.....2691
 Squareview....2703
 Srypton.....4138
 SSS.....2708
 Stack.....4218
 Standard.....2713
 Standard
 Components 2714
 Star Choice....2716
 Starcom.....2722
 Stargate.....2723

Starlite.....2728	TCM.....2857 (DB1)	Tokyo.....3004	V
Starquest.....2732	Teac.....2860	Tomashi.....3006	V2.....3128
StarSight.....2734	Teachimagen.4140	Tongguang.....3008 (DB1)	Vector.....3136
Stenway.....2739	Tec.....2861	Torx.....3020	Vector Research
Strato.....2745	Tech Line.....2863	Toshiba.....3021	3137
STS.....2749	Technema.....2866	Totevision.....3024	Venturer.....3143
STS1.....4219	Technica.....2868	Touch.....3025	Verizon.....3146
STS2.....4220	Technics.....2869	Towada.....3028	Vestel.....3148
STS3.....4221	Technika.....2870	Toyoda.....3030	Vexa.....3149
STS4.....4222	Techview.....2883	Trakton.....3036	Victor.....3155
Studio Experience	Techwood.....2884	Trans Continens	Video Concepts
.....2750	Teco.....2886	3037	3157
Stylandia.....2752	Tedelex.....2889	Trans PX.....3038	Videologic.....3165
Sungale.....2761	Teknika.....2895	Transfec.....4143	Videologique 3166
Sunkai.....2762	TeleCaption...2902	Transonic.....3041	Videosonic3171
Sunstar.....2768	Telecor.....2910	Transtec.....3042	VideoSystem.3172
Sunwood.....2772	Telefunken.....2914	Tredex.....3045	Videotechnic.3173
Supercable2778	Telefusion.....2915	Trident.....3054	Videotron.....3175
Superla.....2782	Telegazi.....2917	Tristar.....3057	Vidikron.....3178
Supermax.....2783	Telemeister ...2924	Triumph.....3058	Vidtech.....3179
Superscan.....2786	Telesonic.....2930	TruTech.....3467	Viewmaster ...3182
SuperTech.....2789	Telestar.....2931	TS.....3063	ViewSat.....3185
Supervision...2791	Teletech.....2934	Tuntex.....3069	Viewsonic.....3186
Supra.....2792	Teleton.....2935	Tusa.....3073	Viewstar.....3187
Supre-Macy..2794	Televideon.....2938	TV86.....3076	Viking.....3188
Supreme.....2795	Televue.....2939	TView.....3079	Villain.....3189
Sutron.....2798	Tennessee.....2952	TVS.....3081	Viore.....3192
SVA.....2800	Tensai.....2954		Visco.....4232
Sydney.....2808	Tenson.....2955	U	Visiola.....3197
Sylvania.....2809	Terapin.....2958	Uher.....3089	Vision.....3198
Symphonic.....2810	Tevion.....2962	UltimateTV...3091	Vizio.....3211
Synco.....2811	Texet.....2963	Ultravox.....3095	Vocopro.....3213
Syntax.....2814	Texscan.....2965	Unic Line.....3100	Voodoo.....3215
Syntax-Brillian	TFC.....2967	Uniden.....3101	Voom.....3216
.....4231	Theta Digital.2970	Unika.....3102	Vortec.....3217
Sysline.....2815	Thomas.....2971	Unitech.....3105	Vortex View..3218
Systemax.....2817	Thomson.....2972	United.....3106	Voxson.....3220
Sytong.....2820	Thorn.....2974	United Artists	
T	Thorn-Ferguson	3107	W
Tacico.....2823	2976 (DB1)	United Cable 3108	Waltham.....3230
Tagar Systems	Time Warner 3518	Universal.....3113	Wards.....3231
.....2831	Timeless.....2985	Universum3115	Watson.....3233
Tai Wah.....4139 (DB1)	Tivax.....3956	Univox.....3116	Watt Radio...3234
Taishan.....2835	Tivo.....2991	Urban Concepts	Waycon.....3237
Tandy.....2843	TMK.....2994	3121	Wega.....3238
Tashiko.....2850	TNCi.....2996	US Digital.....3122	Wegavox.....3239
Tatung.....2852	Tobo.....2999 (DB1)	US Electronics	Weltblick.....3245
TCL.....2856 (DB1)	Tocom.....3000	3123	Westinghouse
	Tokai.....3001	US Logic.....3124	3249


Wharfedale.....3255
 White Westinghouse
3258
 Windstar.....3266
 Winegard.....3268

X
 Xbox3295
 Xiahua3299
 Xiangyang.....3301 (DB1)
 Xiangyu.....3302
 Xihu.....3303 (DB1)
 Xinaghai.....3304 (DB1)
 Xingfu3305
 Xinghai3306
 XR-10003316
 Xrypton.....3317
 Xuelian.....3320 (DB1)

Y
 Yamaha3326
 Yamishi3328
 Yapshe.....3329
 Yokan3335
 Yoko.....3336
 Yorx3340
 Yuhang.....3345

Z
 Zanussi.....3349
 Zenith.....3356
 Zentech.....4031
 Zentek.....3361
 ZhuHai.....3364
 ZT Group.....3370

(DB1) Brands only available from version DB1 onwards. You can find the DB version on the sticker inside the battery compartment.

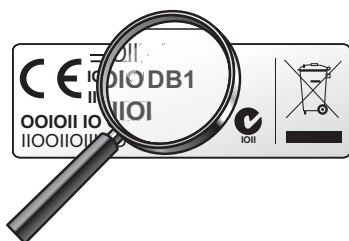

EN Information to the consumer

Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



© 2011 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5279 4

November 2011

www.philips.com

RTP/4811