



**Built-in oven HBA21B2.2J**



**BOSCH**

[en] Instruction manual



|                                                       |           |
|-------------------------------------------------------|-----------|
| <b>Safety advice and information .....</b>            | <b>4</b>  |
| Before installation .....                             | 4         |
| Safety advice and information .....                   | 4         |
| Items that may damage the appliance .....             | 4         |
| <b>Your new oven .....</b>                            | <b>5</b>  |
| Control panel .....                                   | 5         |
| Function selector.....                                | 5         |
| Timer with automatic shut-off function .....          | 5         |
| Temperature selector.....                             | 6         |
| Inside the oven.....                                  | 6         |
| Accessories .....                                     | 6         |
| <b>Before using the oven for the first time .....</b> | <b>8</b>  |
| Heating the oven.....                                 | 8         |
| Cleaning the accessories.....                         | 8         |
| <b>Setting the oven.....</b>                          | <b>8</b>  |
| Type of heating and temperature .....                 | 8         |
| Cooking time .....                                    | 8         |
| Rapid heating .....                                   | 9         |
| <b>Care and cleaning .....</b>                        | <b>9</b>  |
| Cleaning agents .....                                 | 9         |
| Detaching and refitting the rails .....               | 10        |
| Detaching and attaching the oven door.....            | 10        |
| Removing and installing the door panels .....         | 10        |
| <b>Troubleshooting .....</b>                          | <b>11</b> |
| Troubleshooting table .....                           | 11        |
| Changing the oven bulb.....                           | 11        |
| Protective glass panels.....                          | 11        |
| <b>After-sales service .....</b>                      | <b>11</b> |
| E number and FD number .....                          | 11        |
| <b>Energy and environment tips.....</b>               | <b>12</b> |
| Saving energy.....                                    | 12        |
| Environmentally-friendly disposal of waste .....      | 12        |
| <b>Tested for you in our cooking studio .....</b>     | <b>12</b> |
| Cakes and pastries .....                              | 12        |
| Baking tips .....                                     | 14        |
| Meat, poultry, fish.....                              | 15        |
| Tips for roasting and grilling.....                   | 17        |
| Bakes, gratins, toast with toppings .....             | 18        |
| Convenience products.....                             | 18        |
| Special dishes .....                                  | 19        |
| Defrost.....                                          | 19        |
| Drying .....                                          | 19        |
| Preserving .....                                      | 19        |
| <b>Acrylamide in foodstuffs .....</b>                 | <b>20</b> |
| <b>Test dishes .....</b>                              | <b>21</b> |
| Baking.....                                           | 21        |
| Grilling .....                                        | 21        |

---

Additional information on products, accessories, replacement parts and services can be found at **[www.bosch-home.com](http://www.bosch-home.com)** and in the online shop **[www.bosch-eshop.com](http://www.bosch-eshop.com)**

# Safety advice and information

Read the instructions in this manual carefully. Keep the operation and installation instructions. The corresponding manual must be passed on to any subsequent owner.

This instruction manual is for use with both stand-alone ovens and oven-hob combinations. Read the instruction manual supplied with the hobs of oven-hob combinations to find out how their hob controls work.

## Before installation

### Transport damage

Check the appliance after removing it from its packaging. If the appliance has been damaged in transit, do not connect it to the mains; contact the technical support service and note the damage in writing, otherwise you may lose your rights to compensation.

### Electrical connection

Only an authorised technician may connect the appliance. The warranty is void if any damage is caused by incorrect connection.

Before using the appliance for the first time, ensure that your domestic electrical system is earthed and meets all the current safety regulations. An authorised technician should install and connect your appliance. Use of this appliance without an earth connection or incorrectly installed can cause serious injuries (personal injuries or electrocution), although this is very rare. The manufacturer accepts no responsibility for any malfunction or damage which is caused by improper electrical installations.

## Safety advice and information

This appliance has been designed exclusively for domestic use. Only use the appliance for preparing food.

Children and young adults should not use the appliance without supervision

- because they may suffer either physical or mentally injuries, or
- may not have the knowledge and experience to use it correctly

Never allow children to play with the appliance.

### Oven door.

The oven door must remain closed when the oven is switched on. For safety reasons, we recommend keeping the oven door closed, even when the oven is not being used.

Do not lean on, sit on or play with the oven door, even when it is closed.

### Hot oven interior

#### Risk of burns.!

- Never touch the oven's inner surfaces or heater elements when they are hot. Always carefully open the oven door. The oven may let out steam. Keep children away from the oven.
- Do not pour water into a hot oven. This can produce extremely hot water vapour.
- Do not use the oven to prepare dishes with large quantities of strong alcoholic liquor. Alcohol vapour can ignite inside the oven. Only use strong alcoholic liquors in small doses and take care opening the oven door.

#### Risk of fire!!

- Never put flammable objects into the oven. Never open the door if smoke is coming from the appliance. Turn it off. Remove the plug from the mains or disconnect the fuse/circuit breaker in the fuse box.
- Ensure that the greaseproof paper is securely fixed to the accessories when pre-heating the appliance. An air current occurs when the appliance door is opened. The greaseproof paper could touch the heating elements and burn. Always secure the greaseproof paper with a pan or baking tin. Only cover the required surface with greaseproof paper. The greaseproof paper must fit the accessory perfectly.

#### Danger of short-circuits!

Never put the electric cables of electric appliances around the door of the oven. The cable insulation could be damaged.

### Hot accessories and pans/dishes

#### Risk of burns.!

Never remove accessories or hot dishes from the oven without using grippers.

### Inappropriate repairs

#### Risk of electrical discharge and the resulting shock.!

Incorrect repairs can be dangerous. Repairs can only be carried out by qualified personnel from the Technical Assistance Service. If the appliance is faulty, unplug from the mains or remove the fuse/turn off the trip switch of the fuse box. Notify the Technical Assistance Service.

## Items that may damage the appliance

### Caution!

- Accessories, pans, film, greaseproof paper or aluminium foil on the oven floor: Do not place any accessory on the oven floor. Do not cover the oven floor with any type of film or paper. Do not place any cookware on the oven floor if the temperature is set at more than 50 °C. It will get too hot. Oven and cooking times will be inaccurate and the enamel will be damaged.
- Water in a hot oven Do not pour hot water into a hot oven. Steam will be produced. The resulting changes in temperature may damage the enamel and/or accessories.
- Liquid foods: Do not keep liquid foods for too long inside the oven with the door closed. This would damage the enamel.
- Fruit juices: Do not overfill the tray when baking pies containing juicy fruits. Fruit juice spilling from the tray will cause stains that will be impossible to remove. Use the deep enamel tray whenever possible.
- Leaving the door open when the oven is cooling down The oven must only be left to cool with the door closed. Even if the oven door is left only slightly open, the fronts of nearby kitchen units may be damaged over time.
- Dirty oven seal A very dirty oven seal will prevent the oven door from remaining properly closed during operation. The fronts of nearby kitchen units may be damaged. Keep the oven door seal clean at all times.
- The oven door as a support surface: Do not rest or sit on the oven door when it is open. Do not place any cookware or accessory on the oven door.

- Transporting the appliance: Do not use the door handle to move or secure the appliance. The handle cannot take the weight of the appliance and may break. The glass panel of the oven door might move, causing misalignment between the front panel and the glass panel.
- Grilling: When grilling, do not place the universal deep tray or the flat oven tray at a height of more than 3. Due to the extreme heat, it could be deformed and cause damage to the enamel when it is removed. Use level 4 and 5 only for direct grilling.


# Your new oven

We will now describe your new oven. This chapter explains the functions of the control panel and its individual elements.

Information is also provided about the oven's accessories and internal components.

## Control panel

Below is a general overview of the control panel. Elements may vary according to the model.

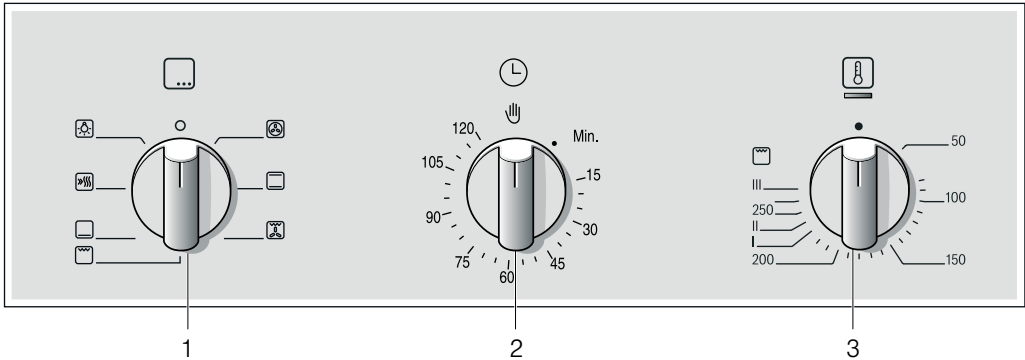

| Explanations |                          |
|--------------|--------------------------|
| 1            | Function control knob    |
| 2            | Timer                    |
| 3            | Temperature control knob |

When you make settings, the oven light in the cooking compartment switches on.

## Timer with automatic shut-off function

With the timer, you can set a time of up 120 minutes and schedule the oven to turn off automatically.

## Function selector

Use the function selector to set the type of heating.

| Setting            | Use                                                                                                                                                              |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Off position       | The oven switches off.                                                                                                                                           |
| 3D hot air*        | For cakes and pastries on one to three levels. The fan distributes the heat from the heating ring in the back panel evenly around the cooking compartment.       |
| Top/bottom heating | For cakes, bakes and lean joints of meat (e.g. beef or game) on one level. Heat is emitted evenly from the top and bottom.                                       |
| Hot air grilling   | For roasting meat, poultry and whole fish. The grill element and the fan switch on and off alternately. The fan causes the hot air to circulate around the dish. |
| Grill, large area  | For grilling steaks, sausages, bread and pieces of fish. The whole area below the grill heating element becomes hot.                                             |
| Bottom heating     | For preserving, browning and final baking stage. The heat is emitted from below.                                                                                 |
| Rapid heating      | For rapid preheating of the oven without accessories.                                                                                                            |
| Oven light         | Switches on the oven light.                                                                                                                                      |

| Setting      | Meaning                |                                                                       |
|--------------|------------------------|-----------------------------------------------------------------------|
| Zero setting |                        | The timer is off.                                                     |
| ● Min.       | End of programmed time | Light that appears when the time programmed on the timer has elapsed. |
| 15 - 120     | Scale in minutes       | Time ranges                                                           |

## The equipment is programmed as follows

Turn the timer to the right until the desired time is reached. A limit stop is located after 120 min. Do not turn the knob any further.

## Once the time has elapsed

A beep will sound and the oven will be turned off. Turn the control knob to the setting.

**Note:** If the cooking time to be set is less than 30 minutes, first turn the knob to the 30 setting and then back up to the desired time.

\* Type of heating used to determine the energy efficiency class in accordance with EN50304.

## Temperature selector

The temperature selector is used to set the temperature or grill setting.

| Setting    |                   | Meaning                                                                                                                                                                                               |
|------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ●          | Off position      | The oven does not heat up.                                                                                                                                                                            |
| 50-270     | Temperature range | The temperature in the cooking compartment in °C.                                                                                                                                                     |
| I, II, III | Grill settings    | The grill settings for "Grill, large area" <br>I = setting 1, low<br>II = setting 2, medium<br>III = setting 3, high |

When the oven is heating, the indicator lamp above the temperature selector lights up. It goes out during heating pauses.

## Inside the oven

There is a light inside the oven. A fan prevents the oven from overheating.

### Light

The oven light remains on while the oven is working.

However, the light can be turned on without the oven being on by setting the function control knob to .


### Fan

The fan can be turned on and off as necessary. The hot air escapes through the top of the door. Warning! Do not cover the vent. The oven could overheat.

## Accessories

The accessories can be inserted into the oven at 5 different levels.

You can pull out the accessories two thirds of the way without them tipping. This allows dishes to be removed easily.

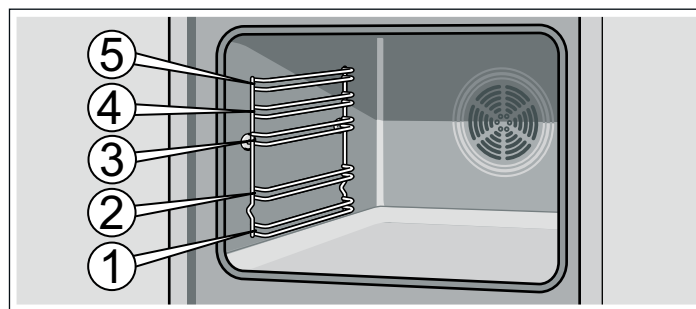

The accessories can become deformed when they get hot. As soon as they have cooled down, the deformation disappears with no effect on the function.


You can buy accessories from the after-sales service, from specialist retailers or online. Please specify the HEZ number.



### Wire rack

For ovenware, cake tins, joints, grilled items and frozen meals.

Insert the wire rack with the curvature pointing downward .



### Universal pan

For moist cakes, pastries, frozen meals and large joints. It can also be used to catch dripping fat when grilling directly on the wire rack.

Slide the universal pan into the oven with the sloping edge facing the oven door.

## Special accessories

You can purchase special accessories from the after-sales service or specialist retailers. You will find a comprehensive range of products for your oven in our brochures and on the Internet. The availability of special accessories and whether it is possible to order them online may vary depending on your country. Please see the sales brochures for more details.

Not all optional accessories are suitable for every appliance. When purchasing, please always quote the exact designation (E-no.) of your appliance.

| Special accessories | HEZ number | Use                                                                                                                                                                                                                                                                                                                                             |
|---------------------|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Wire rack           | HEZ334000  | For ovenware, cake tins, joints, grilled items and frozen meals.                                                                                                                                                                                                                                                                                |
| Enamel baking tray  | HEZ331000  | For cakes and biscuits.<br>Slide the baking tray into the oven with the sloping edge facing towards the oven door.                                                                                                                                                                                                                              |
| Universal pan       | HEZ332000  | For moist cakes, pastries, frozen meals and large joints. It can also be used to catch dripping fat when you are grilling directly on the wire rack.<br>Slide the universal pan into the oven with the sloping edge facing the oven door.                                                                                                       |
| Wire insert         | HEZ324000  | For roasting. Always place the wire rack in the universal pan. This ensures that dripping fat and meat juices are collected.                                                                                                                                                                                                                    |
| Grill tray          | HEZ325000  | Use for grilling instead of the wire rack or as a splatter guard, so that the oven does not become very dirty. Only use the grill tray in the universal pan.<br>Grilling on the grill tray: only use at shelf height 1, 2 and 3.<br>Using the grill tray as a splatter guard: insert the universal pan with the grill tray under the wire rack. |
| Glass pan           | HEZ336000  | A deep baking tray made of glass. Can also be used as a serving dish.                                                                                                                                                                                                                                                                           |

| <b>Special accessories</b>                                                     | <b>HEZ number</b> | <b>Use</b>                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Pizza tray                                                                     | HEZ317000         | Ideal for pizza, frozen products or large round cakes. You can use the pizza tray instead of the universal pan. Place the baking tray on the wire rack and proceed according to the details in the tables.                                                                                             |
| Bakestone                                                                      | HEZ327000         | The bakestone is perfect for preparing home-made bread, bread rolls and pizzas which require a crispy base. The bakestone must always be preheated to the recommended temperature.                                                                                                                     |
| Enamel baking tray with non-stick coating                                      | HEZ331010         | Cakes and biscuits can be removed more easily from the baking tray. Slide the baking tray into the oven with the sloping edge facing towards the oven door.                                                                                                                                            |
| Universal pan with non-stick coating                                           | HEZ332010         | Moist cakes, pastries, frozen meals and large joints can be removed more easily from the universal pan. Slide the universal pan into the oven with the sloping edge facing the oven door.                                                                                                              |
| Profi extra-deep pan with wire insert                                          | HEZ333000         | Ideally suited for preparing large amounts.                                                                                                                                                                                                                                                            |
| Lid for the Profi extra-deep pan                                               | HEZ333001         | The lid converts the Profi extra-deep pan into the Profi roasting dish.                                                                                                                                                                                                                                |
| Glass roasting dish                                                            | HEZ915001         | The glass roasting dish is suitable for stews and bakes that are cooked in the oven. It is ideally suited to automatic programmes or automatic roasting.                                                                                                                                               |
| Telescopic shelves                                                             |                   |                                                                                                                                                                                                                                                                                                        |
| 2-level                                                                        | HEZ338250         | The pull-out rails at levels 2 and 3 allow you to pull accessories out further without them tipping.                                                                                                                                                                                                   |
| 3-level                                                                        | HEZ338352         | The pull-out rails at levels 1, 2 and 3 allow you to pull accessories out further without them tipping.<br>The 3-level pull-out is not suitable for appliances that have a rotary spit.                                                                                                                |
| 3-level complete pull-out                                                      | HEZ338356         | The pull-out rails at levels 1, 2 and 3 allow you to pull accessories out fully without them tipping.<br>The 3-level complete pull-out is not suitable for appliances that have a rotary spit.                                                                                                         |
| 3-level complete pull-out with stop function                                   | HEZ338357         | The pull-out rails at levels 1, 2 and 3 allow you to pull accessories out fully without them tipping. The pull-out rails lock in position allowing accessories to be easily placed on top.<br>The 3-level complete pull-out with stop function is not suitable for appliances that have a rotary spit. |
| Self-cleaning side walls                                                       |                   |                                                                                                                                                                                                                                                                                                        |
| Appliance with one oven light                                                  | HEZ339020         | You can retrofit side walls so that the cooking compartment automatically cleans itself during operation.                                                                                                                                                                                              |
| Appliances with one oven light and automatic roasting                          | HEZ339020         | You can retrofit side walls so that the cooking compartment automatically cleans itself during operation.                                                                                                                                                                                              |
| Self-cleaning oven ceiling and side walls                                      |                   |                                                                                                                                                                                                                                                                                                        |
| Appliances with one oven light and a folding grill element                     | HEZ329020         | You can retrofit the ceiling and side walls so that the cooking compartment automatically cleans itself during operation.                                                                                                                                                                              |
| Appliances with two oven lights and a folding grill element                    | HEZ329022         | You can retrofit the ceiling and side walls so that the cooking compartment automatically cleans itself during operation.                                                                                                                                                                              |
| Appliances with one oven light, a folding grill element and a meat thermometer | HEZ329027         | You can retrofit the ceiling and side walls so that the cooking compartment automatically cleans itself during operation.                                                                                                                                                                              |
| Steam filter                                                                   | HEZ329000         | You can retrofit this in your oven. The steam filter filters out grease particles from the exhaust air, thereby reducing odours.<br>Only for appliances with a 6, 7 or 8 as the second digit in the E-no. (e.g. HBA38B750).                                                                            |
| System steamer                                                                 | HEZ24D300         | For easy preparation of vegetables and fish.                                                                                                                                                                                                                                                           |

## After-sales service products

You can obtain suitable care and cleaning agents and other accessories for your domestic appliances from the after-sales

service, specialist retailers or (in some countries) online via the e-Shop. Please specify the relevant product number.

|                                              |                    |                                                                                                                                                                                    |
|----------------------------------------------|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cleaning cloths for stainless-steel surfaces | Product no. 311134 | Reduces the build-up of dirt. Impregnated with a special oil for perfect maintenance of your appliance's stainless-steel surfaces.                                                 |
| Oven and grill cleaning gel                  | Product no. 463582 | For cleaning the cooking compartment. The gel is odourless.                                                                                                                        |
| Microfibre cloth with honeycomb structure    | Product no. 460770 | Especially suitable for cleaning delicate surfaces, such as glass, glass ceramic, stainless steel or aluminium. The microfibre cloth removes liquid and grease deposits in one go. |
| Door lock                                    | Product no. 612594 | To prevent children from opening the oven door. The locks on different types of appliance door are screwed in differently. See the information sheet supplied with the door lock.  |

## Before using the oven for the first time

In this section, you can find out what you must do before using your oven to prepare food for the first time. First read the section on *Safety information*.

### Heating the oven

To remove the "new" smell, heat the oven empty with the door closed. The most effective option is to heat the oven for one hour with the top and bottom heating elements  set at 240 °C. Check that no packaging has been left inside the oven.

1. Select top and bottom heating  using the function control knob.

2. Select 240 °C with the temperature control knob.

Turn the oven off after one hour. To do this, turn the function control knob to zero.

### Cleaning the accessories

Before using the accessories for the first time, clean them thoroughly using a cloth, hot water and a little soap.

## Setting the oven


There are various ways in which you can set your oven. Here we will explain how you can select the desired type of heating and temperature or grill setting.

**Note:** We recommend preheating the oven before inserting the food in order to avoid condensation on the oven glass.


### Type of heating and temperature

Example in the picture: top and bottom heat  at 190 °C.

1. Select the type of heating using the function control knob.

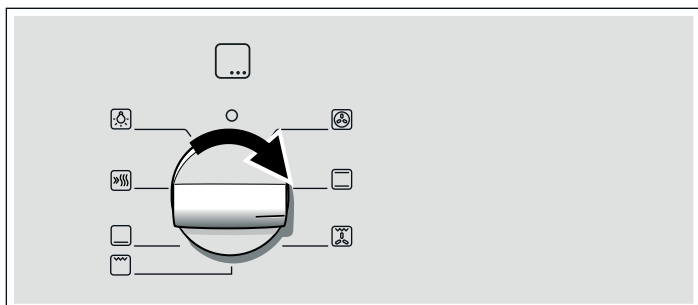

2. Select the temperature or grill power level with the temperature control knob.

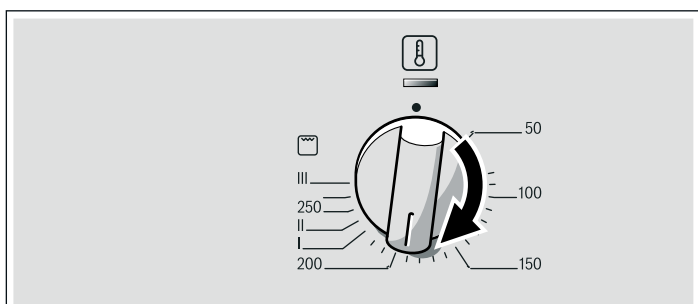

The oven will begin to heat up.

### Switching off the oven

Turn the function selector to the off position.

### Changing the settings

The type of heating and temperature or grill setting can be changed at any time using their respective selectors.

### Cooking time


The oven allows you to set the cooking time for each type of food. The oven switches off automatically when the cooking time has finished. This avoids interrupting other tasks to switch the oven off or exceeding the cooking time by mistake.

Example in the picture: Cooking time: 45 minutes.

1. Select the type of heating using the function control knob.

2. Select the temperature or grill power level with the temperature control knob.

3. Turn the timer to the right until the desired time is reached. A limit stop is located after 120 min. Do not turn the knob any further.

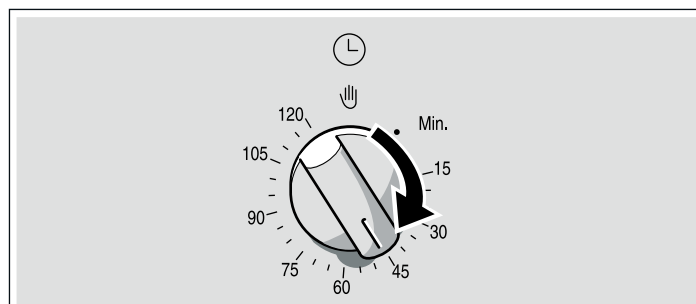



The cooking time has finished

A beep will sound. The oven will stop heating. Turn the function control knob to the 0 setting. The oven is off.

Cancelling the cooking time

Turn the timer to the 0 setting.

Notes

- Once the beep has gone off, turn the timer once again to the 0 setting.
- If the cooking time to be set is less than 30 minutes, first turn the knob to setting 30 and then back to the desired time.

Rapid heating

With the rapid heating function, the oven reaches the programmed temperature very quickly.

Rapid heating must be used for temperatures of more than 100 °C.

To ensure uniform cooking, the food must not be put into the oven until rapid heating has been completed.

- Select rapid heating using the function control knob.
- Select the required temperature using the temperature control knob.  
The indicator light on the temperature control knob will light up.

The oven will begin to heat up.

End of rapid heating

The indicator light will go out. Place the food in the oven and select the required function and temperature.

Cancelling rapid heating

Set the function control knob to the zero setting. The oven switches off.

Care and cleaning

With good care and cleaning, your oven will remain clean and fully-functioning for a long time to come. Here we will explain how to maintain and clean your oven correctly.

Notes

- Slight differences in the colours on the front of the oven are caused by the use of different materials, such as glass, plastic and metal.
- Shadows on the door panel which look like streaks, are caused by reflections made by the oven light.
- Enamel is baked on at very high temperatures. This can cause some slight colour variations. This is normal and does not affect their function. The edges of thin trays cannot be completely enamelled. As a result, these edges can be rough. This will not impair the anti-corrosion protection.

Cleaning agents

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Do not use

- sharp or abrasive cleaning agents,
- cleaning agents with a high concentration of alcohol,
- hard scouring pads or sponges,
- high-pressure cleaners or steam cleaners.

Wash new sponge cloths thoroughly before use.

| Area            | Cleaning agents                                                                                                                                                                                                                                                                                                                                                                                                        |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Oven front      | Hot soapy water:<br>Clean with a dish cloth and dry with a soft cloth. Do not use glass cleaners or glass scrapers.                                                                                                                                                                                                                                                                                                    |
| Stainless steel | Hot soapy water:<br>Clean with a dish cloth and dry with a soft cloth. Remove flecks of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under such residues.<br><br>Special stainless steel cleaning products suitable for warm surfaces are available from our after-sales service or from specialist retailers. Apply a thin layer of the cleaning product with a soft cloth. |
| Door panels     | Glass cleaner:<br>Clean with a soft cloth. Do not use a glass scraper.                                                                                                                                                                                                                                                                                                                                                 |

| Area                           | Cleaning agents                                                                                 |
|--------------------------------|-------------------------------------------------------------------------------------------------|
| Glass cover for the oven light | Hot soapy water:<br>Clean with a dish cloth.                                                    |
| Seal<br>Do not remove.         | Hot soapy water:<br>Clean with a dish cloth. Do not scour.                                      |
| Shelves                        | Hot soapy water:<br>Soak and clean with a dish cloth or brush.                                  |
| Telescopic shelves             | Hot soapy water:<br>Clean with a dish cloth or a brush. Do not soak or clean in the dishwasher. |
| Accessories                    | Hot soapy water:<br>Soak and clean with a dish cloth or brush.                                  |

Cleaning the self-cleaning surfaces in the cooking compartment

The back wall, ceiling and side walls of the cooking compartment are coated with a highly porous ceramic layer. This coating absorbs and disintegrates splashes from baking and roasting while the oven is in operation. The higher the temperature and the longer the oven is in operation, the better the result will be.

Never treat the self-cleaning surfaces with oven cleaner.

If the self-cleaning surfaces no longer clean sufficiently, they can be regenerated with the cleaning system. For more information, please see the *Cleaning system* section.

Light discolouration of the coating does not affect automatic self-cleaning.

Caution!

- Never use abrasive cleaning agents. You will scratch or destroy the highly porous coating.
- Never treat the ceramic coating with oven cleaner. If oven cleaner accidentally gets onto it, remove it immediately with a sponge and plenty of water.

Cleaning the cooking compartment floor


Use a dish cloth and hot soapy water or a vinegar solution.  
If there are heavy deposits of dirt, use a stainless steel scouring pad or oven cleaner. Only use when the cooking compartment is cold. Never treat the self-cleaning surfaces with a scouring pad or oven cleaner.

## Detaching and refitting the rails

The rails can be removed for cleaning. The oven must have cooled down.

### Detaching the rails


1. Lift up the front of the rail
2. and unhook it (figure A).
3. Then pull the whole rail forward
4. and remove it (Fig. B).

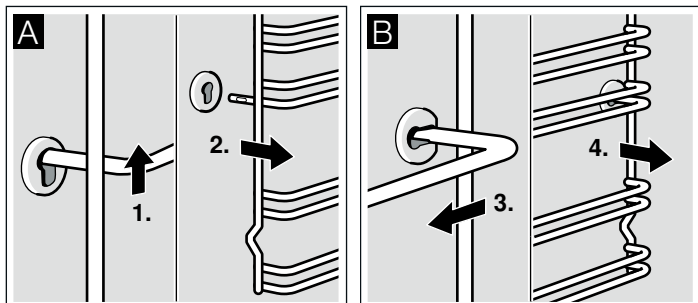

Clean the rails with cleaning agent and a sponge. For stubborn deposits of dirt, use a brush.

### Refitting the rails

1. First insert the rail into the rear socket, press it to the back slightly (figure A),
2. and then hook it into the front socket (figure B).

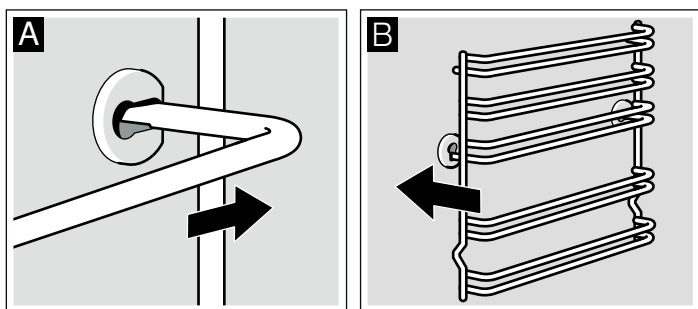


The rails fit both the left and right sides. Ensure that, as shown in figure B, levels 1 and 2 are below and levels 3, 4 and 5 are above.

## Detaching and attaching the oven door

For cleaning purposes and to remove the door panels, you can detach the oven door.

The oven door hinges each have a locking lever. When the locking levers are closed (figure A), the oven door is secured in place. It cannot be detached. When the locking levers are open in order to detach the oven door (Fig. B), the hinges are locked. They cannot snap shut.

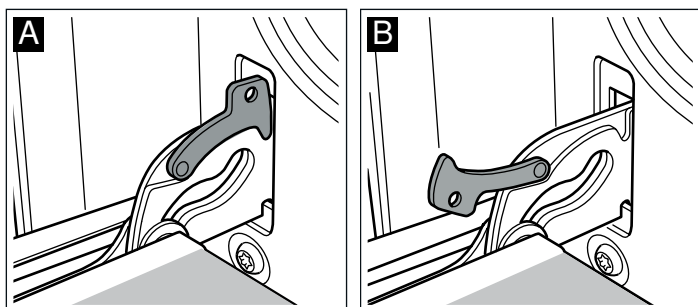


### ⚠ Risk of injury!

Whenever the hinges are not locked, they snap shut with great force. Ensure that the locking levers are always fully closed or, when detaching the oven door, fully open.

### Detaching the door


1. Open the oven door fully.
2. Fold up the two locking levers on the left and right (figure A).
3. Close the oven door as far as the limit stop. With both hands, grip the door on the left and right-hand sides. Close the door a little further and pull it out (figure B).

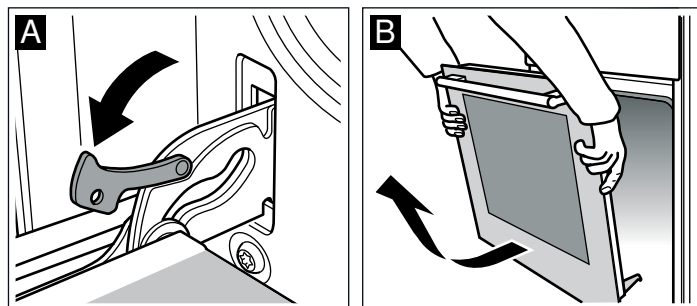


### Attaching the door

Reattach the oven door in the reverse sequence to removal.

1. When attaching the oven door, ensure that both hinges are inserted straight into the opening (figure A).
2. The notch on the hinge must engage on both sides (figure B).

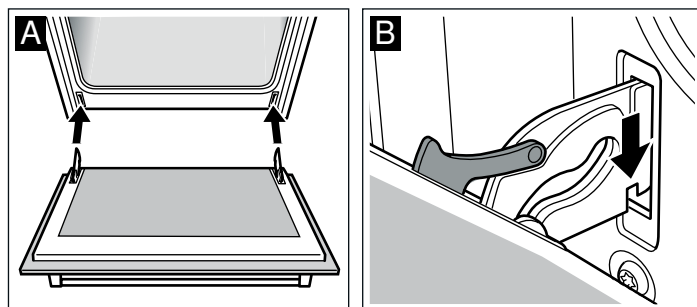

3. Fold back both locking levers (figure C). Close the oven door.

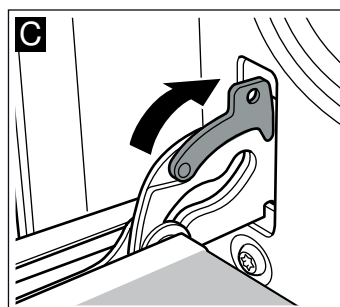

### ⚠ Risk of injury!


If the oven door falls out accidentally or a hinge snaps shut, do not reach into the hinge. Call the after-sales service.

## Removing and installing the door panels

To facilitate cleaning, you can remove the glass panels from the oven door.

1. Detach the oven door and lay on a cloth with the handle facing down.
2. Unscrew the cover on top of the oven door. To do this, undo the left and right screws (figure A).

3. Lift the panel, and pull it up and out (figure B).

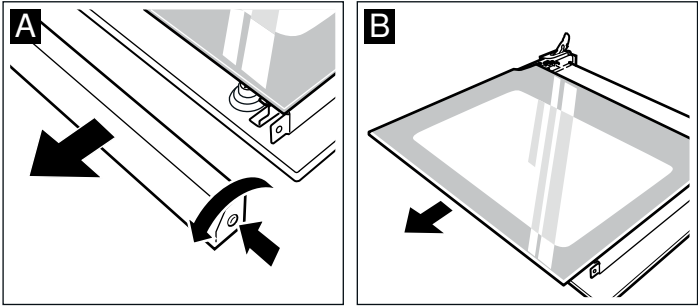

Clean the panels with glass cleaner and a soft cloth.  
Do not use sharp or abrasive materials or a glass scraper.  
The glass could be damaged.

- 4. Insert the panel diagonally towards the back. The smooth surface must face outwards.
- 5. Put the cover back in place and screw it on.
- 6. Attach the oven door.

**Do not use the oven again until the panels have been correctly fitted.**

## Troubleshooting

Quite often, when there is a malfunction, it is usually a small irregularity which is easy to rectify. Before contacting the Technical Assistance Service, try to determine the cause of the fault using the following table.

### Troubleshooting table

| Fault                      | Possible cause                         | Solution/advice                                                                 |
|----------------------------|----------------------------------------|---------------------------------------------------------------------------------|
| The oven does not work.    | The fuse has blown.                    | Check the condition of the fuse in the fuse box.                                |
|                            | Power cut.                             | Check that the light in the kitchen and other household appliances are working. |
| The oven does not heat up. | The timer is at the minimum ● setting. | Turn the timer to the setting.                                                  |

### Risk of electric shock.!

Incorrect repairs can be dangerous. Repairs may only be carried out by qualified personnel from the Technical Assistance Service.


### Changing the oven bulb

If the oven light bulb is damaged it must be replaced. Special 25 W, E14, 220 V-240 V heat-resistant light bulbs (to 300 °C temperature) can be obtained from the Technical Support Service or in specialist shops. Only use this type of bulb.

### Risk of electrical discharge and the resulting shock.!

Disconnect the appliance from the mains. Ensure that this is turned off.

- 1. Place a dishcloth into the cold oven to avoid damage.
- 2. Remove the glass protection by unscrewing it to the left.

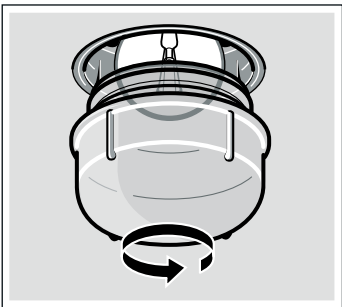

- 3. Replace the bulb with a similar bulb.
- 4. Screw the protection glass back into place.
- 5. Remove the dishcloth and switch the oven back on at the mains.

### Protective glass panels

Damaged protective glass panels must be replaced. Protective glass panels can be obtained from the Technical Assistance Service. Please quote your appliance's product number and production number.

## After-sales service

Our after-sales service is there for you if your appliance needs to be repaired. We will always find the right solution in order to avoid unnecessary visits from a service technician.

### E number and FD number

When calling us, please give the product number (E no.) and the production number (FD no.) so that we can provide you with the correct advice. The rating plate containing these numbers can be found on the right-hand side of the oven door. You can make a note of the numbers of your appliance and the telephone number of the after-sales service in the space below to save time should it be required.

E no.

FD no.

After-sales service 

Please note that there will be a fee for a visit by a service technician in the event of a malfunction, even during the warranty period.

Please find the contact data of all countries in the enclosed customer service list.

## To book an engineer visit and product advice

**GB** 0844 8928979  
Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.

**IE** 01450 2655

Trust the expertise of the manufacturer, and rest assured that the repair will be carried out by trained service technicians using original spare parts for your domestic appliance.

## Energy and environment tips

Here you can find tips on how to save energy when baking and roasting and how to dispose of your appliance properly.

### Saving energy

- Preheat the oven only if this is required by a recipe or is indicated in the tables.
- Use dark, lacquered or black enamel baking tins. These are more efficient at absorbing heat.
- Keep the oven door closed during cooking, baking and roasting cycles.
- When baking several cakes, these should be preferably baked one after the other. The oven will still be hot, thereby reducing the cooking time for the second cake. Two rectangular baking tins can be placed side-by-side.

- For long cooking times, the oven may be turned off 10 minutes prior to the specified time, allowing the item to continue to cook but taking advantage of the oven's residual heat.

### Environmentally-friendly disposal of waste

Dispose of packaging with the environment in mind.



This appliance is identified according to the Waste Electrical and Electronic Equipment Directive WEEE 2002/96/EC. This directive defines the framework for the recycling and reuse of appliances used in EU territory.

## Tested for you in our cooking studio

Here you will find a selection of dishes and the ideal settings for them. We will show you which type of heating and which temperature are best suited for your dish. You can find information about suitable accessories and the height at which they should be inserted. There are also tips about cookware and preparation methods.

### Notes

- The values in the table always apply to dishes placed into the cooking compartment when it is cold and empty.  
Only preheat the appliance if the table specifies that you should do so. Do not line the accessories with greaseproof paper until after they have been preheated.
- The times specified in the tables are guidelines only. They will depend on the quality and composition of the food.
- Use the accessories supplied. Additional accessories may be obtained as special accessories from specialist retailers or from the after-sales service.  
Before using the oven, remove any unnecessary accessories and ovenware from the cooking compartment.
- Always use oven gloves when taking hot accessories or ovenware out of the cooking compartment.

## Cakes and pastries

### Baking on one level

When baking cakes, the best results can be achieved using  Top/bottom heating.

When baking with  3D hot air, use the following shelf heights for the accessory:

- Cakes in tins: level 2
- Cakes on trays: level 3

### Baking on two or more levels

Use  3D hot air.

Shelf heights for baking on 2 levels:

- Universal pan: level 3
- Baking tray: level 1


Shelf heights for baking on 3 levels:

- Baking tray: level 5
- Universal pan: level 3
- Baking tray: level 1

Baking trays that are placed in the oven at the same time will not necessarily be ready at the same time.

The tables show numerous suggestions for your dishes.

If you are baking with 3 cake/loaf tins at the same time, place these on the wire racks as indicated in the picture.

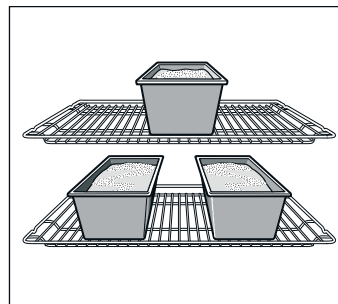

### Baking tins

It is best to use dark-coloured metal baking tins.

Baking times are increased when light-coloured baking tins made of thin metal or glass dishes are used, and cakes do not brown so evenly.

If you wish to use silicone baking tins, use the information and recipes provided by the manufacturer as a guide. Silicone baking tins are often smaller than normal tins. The amount of mixture and recipe instructions may differ.

## Tables

The tables show the ideal type of heating for the various cakes and pastries. The temperature and baking time depend on the amount and composition of the mixture. This is why temperature ranges are given in the tables. You should try the lower temperature first, since a lower temperature results in

more even browning. You can increase the temperature next time if necessary.

If you preheat the oven, the baking time is shortened by 5 to 10 minutes.

Additional information can be found in the *Baking tips* section following the tables.

| Cakes in tins                                  | Tin                 | Level | Type of heating                                                                    | Temperature in °C | Cooking time in minutes |
|------------------------------------------------|---------------------|-------|------------------------------------------------------------------------------------|-------------------|-------------------------|
| Sponge cake, simple                            | Ring tin/round tin  | 2     |  | 160-180           | 50-60                   |
|                                                | 3 loaf tins         | 3+1   |  | 140-160           | 60-80                   |
| Sponge cake, delicate                          | Ring tin/round tin  | 2     |  | 150-170           | 65-75                   |
| Flan base, sponge                              | Flan tin            | 3     |  | 160-180           | 20-30                   |
| Delicate fruit flan, sponge                    | Springform/ring tin | 2     |  | 160-180           | 50-60                   |
| Sponge base, 2 eggs (preheat)                  | Flan tin            | 2     |  | 160-180           | 20-30                   |
| Sponge flan, 6 eggs (preheat)                  | Springform cake tin | 2     |  | 160-180           | 40-50                   |
| Shortcrust pastry base with crust              | Springform cake tin | 1     |  | 170-190           | 25-35                   |
| Fruit tart/cheesecake, pastry base*            | Springform cake tin | 1     |  | 170-190           | 70-90                   |
| Swiss flan                                     | Pizza tray          | 1     |  | 220-240           | 35-45                   |
| Ring cake                                      | Ring cake tin       | 2     |  | 150-170           | 60-70                   |
| Pizza, thin base with light topping (pre-heat) | Pizza tray          | 1     |  | 250-270           | 10-15                   |
| Savoury cakes*                                 | Springform cake tin | 1     |  | 180-200           | 45-55                   |

\* Turn off the oven and allow cakes to cool for an additional 20 minutes with the oven door closed.

| Cakes on trays                               | Accessories                 | Level | Type of heating                                                                      | Temperature in °C | Cooking time in minutes |
|----------------------------------------------|-----------------------------|-------|--------------------------------------------------------------------------------------|-------------------|-------------------------|
| Sponge with dry topping                      | Baking tray                 | 2     |  | 170-190           | 20-30                   |
|                                              | Universal pan + baking tray | 3+1   |  | 150-170           | 35-45                   |
| Sponge with moist topping (fruit)            | Universal pan               | 2     |  | 180-200           | 25-35                   |
|                                              | Universal pan + baking tray | 3+1   |  | 140-160           | 40-50                   |
| Yeast dough with dry topping                 | Baking tray                 | 3     |  | 170-190           | 25-35                   |
|                                              | Universal pan + baking tray | 3+1   |  | 150-170           | 35-45                   |
| Yeast dough with moist topping (fruit)       | Universal pan               | 3     |  | 160-180           | 40-50                   |
|                                              | Universal pan + baking tray | 3+1   |  | 150-170           | 50-60                   |
| Shortcrust pastry with dry topping           | Baking tray                 | 2     |  | 170-190           | 20-30                   |
| Shortcrust pastry with moist topping (fruit) | Universal pan               | 2     |  | 170-190           | 60-70                   |
| Swiss flan                                   | Universal pan               | 1     |  | 210-230           | 40-50                   |
| Swiss roll (preheat)                         | Baking tray                 | 2     |  | 170-190           | 15-20                   |
| Plaited loaf with 500 g flour                | Baking tray                 | 2     |  | 170-190           | 25-35                   |
| Stollen with 500 g flour                     | Baking tray                 | 3     |  | 160-180           | 60-70                   |
| Stollen with 1 kg flour                      | Baking tray                 | 3     |  | 140-160           | 90-100                  |
| Strudel, sweet                               | Universal pan               | 2     |  | 190-210           | 55-65                   |
| Pizza                                        | Baking tray                 | 2     |  | 210-230           | 25-35                   |
|                                              | Universal pan + baking tray | 3+1   |  | 180-200           | 40-50                   |
| Tarte flambée (preheat)                      | Universal pan               | 2     |  | 250-270           | 10-15                   |
| Börek                                        | Universal pan               | 2     |  | 180-200           | 40-50                   |

| Small baked items         | Accessories                    | Level | Type of heating                                                                     | Temperature in °C | Cooking time in minutes |
|---------------------------|--------------------------------|-------|-------------------------------------------------------------------------------------|-------------------|-------------------------|
| Biscuits                  | Baking tray                    | 3     |  | 140-160           | 15-25                   |
|                           | Universal pan + baking tray    | 3+1   |  | 130-150           | 25-35                   |
|                           | 2 baking trays + universal pan | 5+3+1 |  | 130-150           | 30-40                   |
| Viennese whirls (preheat) | Baking tray                    | 3     |  | 140-150           | 30-40                   |
|                           | Baking tray                    | 3     |  | 140-150           | 30-40                   |
|                           | Universal pan + baking tray    | 3+1   |  | 140-150           | 30-45                   |
|                           | 2 baking trays + universal pan | 5+3+1 |  | 130-140           | 40-55                   |
| Macaroons                 | Baking tray                    | 2     |  | 100-120           | 30-40                   |
|                           | Universal pan + baking tray    | 3+1   |  | 100-120           | 35-45                   |
|                           | 2 baking trays + universal pan | 5+3+1 |  | 100-120           | 40-50                   |
| Meringue                  | Baking tray                    | 3     |  | 80-100            | 100-150                 |
| Muffins                   | Wire rack with muffin tray     | 2     |  | 170-190           | 20-25                   |
|                           | 2 wire racks with muffin trays | 3+1   |  | 160-180           | 25-35                   |
| Choux pastry              | Baking tray                    | 2     |  | 210-230           | 30-40                   |
| Puff pastry               | Baking tray                    | 3     |  | 180-200           | 20-30                   |
|                           | Universal pan + baking tray    | 3+1   |  | 180-200           | 25-35                   |
|                           | 2 baking trays + universal pan | 5+3+1 |  | 170-190           | 35-45                   |
| Leavened cake             | Baking tray                    | 2     |  | 180-200           | 20-30                   |
|                           | Universal pan + baking tray    | 3+1   |  | 160-180           | 25-35                   |

### Bread and rolls

When baking bread, preheat the oven, unless instructions state otherwise.

Never pour water into the hot oven.

| Bread and rolls                   | Accessories                 | Level | Type of heating                                                                       | Temperature in °C | Cooking time in minutes |
|-----------------------------------|-----------------------------|-------|---------------------------------------------------------------------------------------|-------------------|-------------------------|
| Yeast bread with 1.2 kg flour     | Universal pan               | 2     |  | 270               | 5                       |
|                                   |                             |       |                                                                                       | 200               | 30-40                   |
| Sourdough bread with 1.2 kg flour | Universal pan               | 2     |  | 270               | 8                       |
|                                   |                             |       |                                                                                       | 200               | 35-45                   |
| Flatbread                         | Universal pan               | 2     |  | 270               | 10-15                   |
| Bread rolls (do not preheat)      | Baking tray                 | 3     |  | 200-220           | 20-30                   |
| Rolls made with sweet yeast dough | Baking tray                 | 3     |  | 180-200           | 15-20                   |
|                                   | Universal pan + baking tray | 3+1   |  | 160-180           | 20-30                   |

### Baking tips

|                                                                                                           |                                                                                                                                                                                                                                                                    |
|-----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| You wish to bake according to your own recipe.                                                            | Use similar items in the baking tables as a guide.                                                                                                                                                                                                                 |
| How to establish whether sponge cake is baked through.                                                    | Approximately 10 minutes before the end of the baking time specified in the recipe, stick a cocktail stick into the cake at the highest point. If the cocktail stick comes out clean, the cake is ready.                                                           |
| The cake collapses.                                                                                       | Use less fluid next time or set the oven temperature 10 degrees lower. Observe the specified mixing times in the recipe.                                                                                                                                           |
| The cake has risen in the middle but is lower around the edge.                                            | Do not grease the sides of the springform cake tin. After baking, loosen the cake carefully with a knife.                                                                                                                                                          |
| The cake goes too dark on top.                                                                            | Place it lower in the oven, select a lower temperature and bake the cake for a little longer.                                                                                                                                                                      |
| The cake is too dry.                                                                                      | When it is done, make small holes in the cake using a cocktail stick. Then drizzle fruit juice or an alcoholic beverage over it. Next time, select a temperature 10 degrees higher and reduce the baking time.                                                     |
| The bread or cake (e.g. cheesecake) looks good, but is soggy on the inside (sticky, streaked with water). | Use slightly less fluid next time and bake for slightly longer at a lower temperature. For cakes with a moist topping, bake the base first. Sprinkle it with almonds or bread crumbs and then place the topping on top. Please follow the recipe and baking times. |

|                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The cake is unevenly browned.                                                                                       | Select a slightly lower temperature to ensure that the cake is baked more evenly. Bake delicate pastries on one level using  Top/bottom heating. Protruding greaseproof paper can affect the air circulation. For this reason, always cut greaseproof paper to fit the baking tray. |
| The bottom of a fruit cake is too light.                                                                            | Place the cake one level lower the next time.                                                                                                                                                                                                                                                                                                                        |
| The fruit juice overflows.                                                                                          | Next time, use the deeper universal pan, if you have one.                                                                                                                                                                                                                                                                                                            |
| Small baked items made out of yeast dough stick to one another when baking.                                         | There should be a gap of approx. 2 cm around each item. This gives enough space for the baked items to expand well and turn brown on all sides.                                                                                                                                                                                                                      |
| You were baking on several levels. The items on the top baking tray are darker than that on the bottom baking tray. | Always use  3D hot air to bake on more than one level. Baking trays that are placed in the oven at the same time will not necessarily be ready at the same time.                                                                                                                    |
| Condensation forms when you bake moist cakes.                                                                       | Baking may result in the formation of water vapour, which escapes above the door. The steam may settle and form water droplets on the control panel or on the fronts of adjacent units. This is a natural process.                                                                                                                                                   |

## Meat, poultry, fish

### Ovenware

You may use any heat-resistant ovenware. The universal pan is suitable for large roasts.

Glass ovenware is the most suitable. Ensure that the lid of the roasting dish fits well and closes properly.

Add a little more liquid when using enamelled roasting dishes.

With roasting dishes made of stainless steel, browning is not so intense and the meat may be somewhat less well cooked. Increase the cooking times.

Information in the tables:

Ovenware without a lid = open

Ovenware with a lid = closed

Always place the ovenware in the centre of the wire rack.

Place hot glass ovenware on a dry mat after cooking. The glass could crack if placed on a cold or wet surface.

### Roasting

Add in a little liquid if the meat is lean. Cover the base of the ovenware with approx. ½ cm of liquid.

Add liquid generously for pot roasts. Cover the base of the ovenware with approx. 1 - 2 cm of liquid.

The amount of liquid depends on the type of meat and the material the ovenware is made of. If preparing meat in an enamelled roasting dish, it will need a little more liquid than if cooked in glass ovenware.

Roasting dishes made from stainless steel are not ideal. The meat cooks more slowly and browns less fully. Use a higher temperature and/or a longer cooking time.

### Grilling

When grilling, preheat the oven for approx. 3 minutes, before placing the food into the cooking compartment.

Always grill with the oven door closed.

As far as possible, the pieces of food you are grilling should be of equal thickness. This will allow them to brown evenly and remain succulent and juicy.

Turn the food you are grilling after ⅔ of the time.

Do not add salt to steaks until they have been grilled.

Place the food to be grilled directly on the wire rack. If you are grilling a single piece, the best results are achieved by placing it in the centre of the wire rack.

The universal pan should also be inserted at level 1. The meat juices are collected in the pan and the oven is kept cleaner.

When grilling, do not insert the baking tray or universal pan at level 4 or 5. The high heat distorts it and the cooking compartment can be damaged when removing it.

The grill element switches on and off continually. This is normal. The grill setting determines how frequently this will happen.

### Meat

Turn pieces of meat halfway through the cooking time.

When the roast is ready, turn off the oven and allow it to rest for an additional 10 minutes. This allows better distribution of the meat juices.

After cooking, wrap sirloin in aluminium foil and leave it to rest for 10 minutes in the oven.

For roast pork with a rind, score the rind in a crossways pattern, then lay the roast in the dish with the rind at the bottom.

| Meat                       | Weight | Accessories and ovenware  | Level | Type of heating                                                                      | Temperature in °C, grill setting | Cooking time in minutes |
|----------------------------|--------|---------------------------|-------|--------------------------------------------------------------------------------------|----------------------------------|-------------------------|
| <b>Beef</b>                |        |                           |       |                                                                                      |                                  |                         |
| Pot-roasted beef           | 1.0 kg | Covered                   | 2     |  | 210-230                          | 100                     |
|                            | 1.5 kg |                           | 2     |  | 200-220                          | 120                     |
|                            | 2.0 kg |                           | 2     |  | 190-210                          | 140                     |
| Fillet of beef, medium     | 1.0 kg | Uncovered                 | 2     |  | 210-230                          | 60                      |
|                            | 1.5 kg |                           | 2     |  | 200-220                          | 80                      |
| Sirloin, medium            | 1.0 kg | Uncovered                 | 1     |  | 220-240                          | 60                      |
| Steaks, 3 cm thick, medium |        | Wire rack + universal pan | 5+1   |  | 3                                | 15                      |

### Veal

| Meat                            | Weight               | Accessories and ovenware  | Level | Type of heating                                                                       | Temperature in °C, grill setting | Cooking time in minutes |
|---------------------------------|----------------------|---------------------------|-------|---------------------------------------------------------------------------------------|----------------------------------|-------------------------|
| Joint of veal                   | 1.0 kg               | Uncovered                 | 2     |    | 190-210                          | 110                     |
|                                 | 1.5 kg               |                           | 2     |    | 180-200                          | 130                     |
|                                 | 2.0 kg               |                           | 2     |    | 170-190                          | 150                     |
| Knuckle of veal                 | 1.5 kg               | Uncovered                 | 2     |    | 210-230                          | 140                     |
| <b>Pork</b>                     |                      |                           |       |                                                                                       |                                  |                         |
| Joint without rind (e.g. neck)  | 1.0 kg               | Uncovered                 | 1     |    | 190-210                          | 120                     |
|                                 | 1.5 kg               |                           | 1     |    | 180-200                          | 150                     |
|                                 | 2.0 kg               |                           | 1     |    | 170-190                          | 170                     |
| Joint with rind (e.g. shoulder) | 1.0 kg               | Uncovered                 | 1     |    | 190-210                          | 130                     |
|                                 | 1.5 kg               |                           | 1     |    | 180-200                          | 160                     |
|                                 | 2.0 kg               |                           | 1     |    | 170-190                          | 190                     |
| Pork fillet                     | 500 g                | Wire rack + universal pan | 3+1   |    | 220-230                          | 30                      |
| Pork joint, lean                | 1.0 kg               | Uncovered                 | 2     |    | 200-220                          | 120                     |
|                                 | 1.5 kg               |                           | 2     |    | 190-210                          | 140                     |
|                                 | 2.0 kg               |                           | 2     |    | 180-200                          | 160                     |
| Smoked pork on the bone         | 1.0 kg               | Covered                   | 2     |    | 200-220                          | 70                      |
| Steaks, 2 cm thick              |                      | Wire rack + universal pan | 5+1   |    | 3                                | 20                      |
| Pork medallions, 3 cm thick     |                      | Wire rack + universal pan | 5+1   |    | 3                                | 10                      |
| <b>Lamb</b>                     |                      |                           |       |                                                                                       |                                  |                         |
| Saddle of lamb on the bone      | 1.5 kg               | Uncovered                 | 2     |  | 190                              | 60                      |
| Boned leg of lamb, medium       | 1.5 kg               | Uncovered                 | 1     |  | 150-170                          | 120                     |
| <b>Game</b>                     |                      |                           |       |                                                                                       |                                  |                         |
| Saddle of venison on the bone   | 1.5 kg               | Uncovered                 | 2     |  | 200-220                          | 50                      |
| Boned leg of roe venison        | 1.5 kg               | Covered                   | 2     |  | 210-230                          | 100                     |
| Roast game                      | 1.5 kg               | Covered                   | 2     |  | 180-200                          | 140                     |
| Joint of venison                | 1.5 kg               | Covered                   | 2     |  | 180-200                          | 130                     |
| Rabbit                          | 2.0 kg               | Covered                   | 2     |  | 220-240                          | 60                      |
| <b>Minced meat</b>              |                      |                           |       |                                                                                       |                                  |                         |
| Meat loaf                       | Made from 500 g meat | Uncovered                 | 1     |  | 180-200                          | 80                      |
| <b>Sausages</b>                 |                      |                           |       |                                                                                       |                                  |                         |
| Sausages                        |                      | Wire rack + universal pan | 4+1   |  | 3                                | 15                      |

## Poultry

The weights indicated in the table refer to oven-ready poultry (without stuffing).

Place whole poultry on the lower wire rack breast-side down. Turn after  $\frac{2}{3}$  of the specified time.

Turn roasts, such as rolled turkey joint or turkey breast, halfway through the cooking time. Turn poultry portions after  $\frac{2}{3}$  of the time.

For duck or goose, pierce the skin on the underside of the wings. This allows the fat to run out.

Poultry will turn out particularly crispy and brown if you baste it towards the end of the roasting time with butter, salted water or orange juice.

| Poultry         | Weight     | Accessories and ovenware | Level | Type of heating                                                                       | Temperature in °C, grill setting | Cooking time in minutes |
|-----------------|------------|--------------------------|-------|---------------------------------------------------------------------------------------|----------------------------------|-------------------------|
| Chicken, whole  | 1.2 kg     | Wire rack                | 2     |  | 200-220                          | 60-70                   |
| Poulard, whole  | 1.6 kg     | Wire rack                | 2     |  | 190-210                          | 80-90                   |
| Chicken, halved | 500 g each | Wire rack                | 2     |  | 220-240                          | 40-50                   |



| Poultry             | Weight     | Accessories and ovenware | Level | Type of heating                                                                    | Temperature in °C, grill setting | Cooking time in minutes |
|---------------------|------------|--------------------------|-------|------------------------------------------------------------------------------------|----------------------------------|-------------------------|
| Chicken portions    | 150 g each | Wire rack                | 3     |  | 210-230                          | 30-40                   |
| Chicken portions    | 300 g each | Wire rack                | 3     |  | 220-240                          | 35-45                   |
| Chicken breast      | 200 g each | Wire rack                | 2     |  | 3                                | 30-40                   |
| Duck, whole         | 2.0 kg     | Wire rack                | 2     |  | 190-210                          | 100-110                 |
| Duck breast         | 300 g each | Wire rack                | 3     |  | 240-260                          | 30-40                   |
| Goose, whole        | 3.5-4.0 kg | Wire rack                | 2     |  | 170-190                          | 120-140                 |
| Goose legs          | 400 g each | Wire rack                | 3     |  | 220-240                          | 50-60                   |
| Small turkey, whole | 3.0 kg     | Wire rack                | 2     |  | 180-200                          | 80-100                  |
| Rolled turkey joint | 1.5 kg     | Uncovered                | 1     |  | 190-210                          | 110-130                 |
| Turkey breast       | 1.0 kg     | Covered                  | 2     |  | 180-200                          | 80-90                   |
| Turkey thigh        | 1.0 kg     | Wire rack                | 2     |  | 180-200                          | 90-100                  |

## Fish

Turn the pieces of fish after  $\frac{2}{3}$  of the time.

Whole fish does not have to be turned. Place the whole fish in the oven in its swimming position with its dorsal fin facing

upwards. Placing half a potato or a small ovenproof container in the stomach cavity of the fish will make it more stable.

For fish fillet, add a few tablespoons of liquid to provide steam.

| Fish                   | Weight               | Accessories and ovenware | Level | Type of heating                                                                      | Temperature in °C, grill setting | Cooking time in minutes |
|------------------------|----------------------|--------------------------|-------|--------------------------------------------------------------------------------------|----------------------------------|-------------------------|
| Fish, whole            | 300 g each (approx.) | Wire rack                | 2     |    | 2                                | 20-25                   |
|                        | 1.0 kg               | Wire rack                | 2     |    | 210-230                          | 45-55                   |
|                        | 1.5 kg               | Wire rack                | 2     |  | 180-200                          | 60-70                   |
|                        | 2.0 kg               | Covered                  | 2     |  | 180-200                          | 70-80                   |
| Fish steak, 3 cm thick |                      | Wire rack                | 3     |  | 2                                | 20-25                   |
| Fish fillet            |                      | Covered                  | 2     |  | 210-230                          | 20-30                   |

## Tips for roasting and grilling

|                                                                     |                                                                                                                                                                                                                                       |
|---------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The table does not contain information for the weight of the joint. | Select the next lowest weight from the instructions and extend the time.                                                                                                                                                              |
| How to tell when the roast is ready.                                | Use a meat thermometer (available from specialist shops) or carry out a "spoon test". Press down on the roast with a spoon. If it feels firm, it is ready. If the spoon can be pressed in, it needs to be cooked for a little longer. |
| The roast is too dark and the crackling is partly burnt.            | Check the shelf height and temperature.                                                                                                                                                                                               |
| The roast looks good but the juices are burnt.                      | Next time, use a smaller roasting dish or add more liquid.                                                                                                                                                                            |
| The roast looks good but the juices are too clear and watery.       | Next time, use a larger roasting dish and use less liquid.                                                                                                                                                                            |
| Steam rises from the roast when basted.                             | This is normal and due to the laws of physics. The majority of the steam escapes through the steam outlet. It may settle and form condensation on the cooler switch panel or on the fronts of adjacent units.                         |

## Bakes, gratins, toast with toppings

Always place ovenware on the wire rack.

If you are grilling directly on the wire rack without ovenware, you should also insert the universal pan at level 1. This keeps the oven cleaner.

How well cooked the bake is will depend on the size of the ovenware and the height of the bake. The figures in the table are only average values.

| Dish                                           | Accessories and ovenware | Level | Type of heating                                                                    | Temperature in °C, grill setting | Cooking time in minutes |
|------------------------------------------------|--------------------------|-------|------------------------------------------------------------------------------------|----------------------------------|-------------------------|
| <b>Bakes</b>                                   |                          |       |                                                                                    |                                  |                         |
| Bake, sweet                                    | ovenproof dish           | 2     |  | 180-200                          | 50-60                   |
| Soufflé                                        | ovenproof dish           | 2     |  | 170-190                          | 35-45                   |
|                                                | Ramekins                 | 2     |  | 190-210                          | 25-30                   |
| Pasta bake                                     | ovenproof dish           | 2     |  | 200-220                          | 40-50                   |
| Lasagne                                        | ovenproof dish           | 2     |  | 180-200                          | 40-50                   |
| <b>Gratin</b>                                  |                          |       |                                                                                    |                                  |                         |
| Potato gratin, raw ingredients, max. 4 cm deep | 1 ovenproof dish         | 2     |  | 160-180                          | 60-80                   |
|                                                | 2 ovenproof dishes       | 1+3   |  | 150-170                          | 60-80                   |
| <b>Toast</b>                                   |                          |       |                                                                                    |                                  |                         |
| 4 slices, with topping                         | wire rack                | 3     |  | 160-170                          | 10-15                   |
| 12 slices, with topping                        | wire rack                | 3     |  | 160-170                          | 15-20                   |

## Convenience products

Observe the instructions on the packaging.

If you line the accessories with greaseproof paper, make sure that the paper is suitable for these temperatures. Make sure the paper is a suitable size for the dish to be cooked.

The cooking result greatly depends on the quality of the food. Pre-browning and irregularities can sometimes even be found on the raw product.

| Dish                                    | Accessories                 | Level | Type of heating                                                                       | Temperature in °C | Cooking time in minutes |
|-----------------------------------------|-----------------------------|-------|---------------------------------------------------------------------------------------|-------------------|-------------------------|
| <b>Pizza, frozen</b>                    |                             |       |                                                                                       |                   |                         |
| Pizza with thin base                    | universal pan               | 2     |  | 190-210           | 15-25                   |
|                                         | universal pan + wire rack   | 3+1   |  | 180-200           | 20-30                   |
| Pizza with deep-pan base                | universal pan               | 2     |  | 180-200           | 20-30                   |
|                                         | universal pan + wire rack   | 3+1   |  | 170-190           | 25-35                   |
| Pizza baguette                          | universal pan               | 3     |  | 180-200           | 20-30                   |
| Mini pizza                              | universal pan               | 3     |  | 190-210           | 10-20                   |
| <b>Pizza, chilled</b>                   |                             |       |                                                                                       |                   |                         |
| Pizza (preheat)                         | universal pan               | 3     |  | 190-210           | 10-15                   |
| <b>Potato products, frozen</b>          |                             |       |                                                                                       |                   |                         |
| Chips                                   | universal pan               | 3     |  | 190-210           | 20-30                   |
|                                         | universal pan + baking tray | 3+1   |  | 180-200           | 30-40                   |
| Croquettes                              | universal pan               | 3     |  | 200-220           | 20-25                   |
| Rösti, stuffed potato pockets           | universal pan               | 3     |  | 210-230           | 15-25                   |
| <b>Baked items, frozen</b>              |                             |       |                                                                                       |                   |                         |
| Bread rolls, baguette                   | universal pan               | 3     |  | 170-190           | 10-20                   |
| Pretzels (dough)                        | universal pan               | 3     |  | 210-230           | 15-25                   |
| <b>Baked items, prebaked</b>            |                             |       |                                                                                       |                   |                         |
| Part-cooked rolls, part-cooked baguette | universal pan               | 3     |  | 190-210           | 10-20                   |
|                                         | universal pan + wire rack   | 3+1   |  | 160-180           | 20-25                   |
| <b>Processed portions, frozen</b>       |                             |       |                                                                                       |                   |                         |
| Fish fingers                            | universal pan               | 2     |  | 220-240           | 10-20                   |

| Dish                             | Accessories   | Level | Type of heating                                                                    | Temperature in °C | Cooking time in minutes |
|----------------------------------|---------------|-------|------------------------------------------------------------------------------------|-------------------|-------------------------|
| Chicken goujons, chicken nuggets | universal pan | 3     |  | 200-220           | 15-25                   |
| <b>Strudel, frozen</b>           |               |       |                                                                                    |                   |                         |
| Strudel                          | universal pan | 3     |  | 200-220           | 35-40                   |

## Special dishes

At low temperatures,  3D hot air is equally useful for producing creamy yoghurt as it is for proving light yeast dough.

First, remove accessories, hook-in racks or telescopic shelves from the cooking compartment.

### Preparing yoghurt

1. Bring 1 litre of milk (3.5 % fat) to the boil and cool down to 40 °C.
2. Stir in 150 g of yoghurt (at refrigerator temperature).
3. Pour into cups or small screw-top jars and cover with cling film.

4. Preheat the cooking compartment as indicated.

5. Place the cups or jars on the cooking compartment floor and incubate as indicated.

### Proving dough

1. Prepare the dough as usual, place it in a heat-resistant ceramic dish and cover.
2. Preheat the cooking compartment as indicated.
3. Switch off the oven and place the dough in the cooking compartment and leave it to prove.

| Dish          | Ovenware               |                                  | Type of heating                                                                   | Temperature                                                                                    | Cooking time            |
|---------------|------------------------|----------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|-------------------------|
| Yoghurt       | Cups or screw-top jars | on the cooking compartment floor |  | 50 °C Preheat<br>50 °C                                                                         | 5 mins<br>8 hrs         |
| Proving dough | Heat-resistant dish    | on the cooking compartment floor |  | 50 °C Preheat<br>Switch off the appliance and place the yeast dough in the cooking compartment | 5-10 mins<br>20-30 mins |

## Defrost

The defrosting time will depend on the type and quantity of the food.

Observe the instructions on the packaging.

Take frozen food out of its packaging and place in suitable ovenware on the wire rack.

Place poultry on a plate with the breast side facing down.

| Frozen food                                                                                                                                                      | Accessories | Level | Type of heating                                                                       | Temperature                                   |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|-------|---------------------------------------------------------------------------------------|-----------------------------------------------|
| e.g. cream cakes, buttercream cakes, gateaux with chocolate or sugar icing, fruit, chicken, sausage and meat, bread and bread rolls, cakes and other baked items | wire rack   | 1     |  | The temperature selector remains switched off |

## Drying

With  3D hot air, you can dry foods brilliantly.

Use unblemished fruit and vegetables only and wash them thoroughly.

Drain off the excess water, then dry them.

Line the universal pan and the wire rack with greaseproof or parchment paper.

Turn very juicy fruit or vegetables several times.

Remove fruit and vegetables from the paper as soon as they have dried.

| Fruit and herbs         | Accessories          | Level | Type of heating                                                                     | Temperature | Cooking time       |
|-------------------------|----------------------|-------|-------------------------------------------------------------------------------------|-------------|--------------------|
| 600 g apple rings       | Universal pan + rack | 3+1   |  | 80 °C       | 5 hrs (approx.)    |
| 800 g pear slices       | Universal pan + rack | 3+1   |  | 80 °C       | 8 hrs (approx.)    |
| 1.5 kg damsons or plums | Universal pan + rack | 3+1   |  | 80 °C       | 8-10 hrs (approx.) |
| 200 g herbs, washed     | Universal pan + rack | 3+1   |  | 80 °C       | 1½ hrs (approx.)   |

## Preserving

For preserving, the jars and rubber seals must be clean and intact. If possible, use jars of the same size. The information in the table is for round, one-litre jars.

### Caution!

Do not use jars that are larger or taller than this. The lids could crack.

Only use fruit and vegetables in good condition. Wash them thoroughly.

The times given in the tables are a guide only. The time will depend on the room temperature, number of jars, and the quantity and temperature of the contents. Before you switch off the appliance or change the cooking mode, check whether the contents of the jars are bubbling as they should.

## Preparation

1. Fill the jars, but not to the top.
2. Wipe the rims of the jars, as they must be clean.
3. Place a damp rubber seal and a lid on each jar.
4. Seal the jars with the clips.

Place no more than six jars in the cooking compartment.

## Making settings

1. Insert the universal pan at level 2. Arrange the jars on it so that they do not touch each other.
2. Pour ½ litre of hot water (approx. 80 °C) into the universal pan.

3. Close the oven door.
4. Set  Bottom heating.
5. Set the temperature to between 170 and 180 °C.

## Preserving

### Fruit

After approx. 40 to 50 minutes, small bubbles begin to form at short intervals. Switch off the oven.

After 25 to 35 minutes of residual heat, remove the preserving jars from the cooking compartment. If they are allowed to cool for longer in the cooking compartment, germs could multiply, promoting acidification of the preserved fruit.

| Fruit in one-litre jars                   | When it starts to bubble | Residual heat      |
|-------------------------------------------|--------------------------|--------------------|
| Apples, redcurrants, strawberries         | Switch off               | approx. 25 minutes |
| Cherries, apricots, peaches, gooseberries | Switch off               | approx. 30 minutes |
| Apple purée, pears, plums                 | Switch off               | approx. 35 minutes |

### Vegetables

As soon as bubbles begin to form in the jars, set the temperature back to between 120 and 140 °C. Depending on

the type of vegetable, heat for approx. 35 to 70 minutes. Switch off the oven after this time and use the residual heat.

| Vegetables with cold cooking water in one-litre jars | When it starts to bubble | Residual heat      |
|------------------------------------------------------|--------------------------|--------------------|
| Gherkins                                             | -                        | approx. 35 minutes |
| Beetroot                                             | approx. 35 minutes       | approx. 30 minutes |
| Brussels sprouts                                     | approx. 45 minutes       | approx. 30 minutes |
| Beans, kohlrabi, red cabbage                         | approx. 60 minutes       | approx. 30 minutes |
| Peas                                                 | approx. 70 minutes       | approx. 30 minutes |

## Taking out the jars

After preserving, remove the jars from the cooking compartment.

### Caution!

Do not place the hot jars on a cold or wet surface. They could suddenly burst.

# Acrylamide in foodstuffs

Acrylamide is mainly produced in grain and potato products prepared at high temperatures, such as potato crisps, chips,

toast, bread rolls, bread or fine baked goods (biscuits, gingerbread, cookies).

## Tips for keeping acrylamide to a minimum when preparing food

|                |                                                                                                                                                                                                                       |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>General</b> | <ul style="list-style-type: none"><li>■ Keep cooking times to a minimum.</li><li>■ Cook meals until they are golden brown, but not too dark.</li><li>■ Large, thick pieces of food contain less acrylamide.</li></ul> |
| <b>Baking</b>  | With top/bottom heating max. 200 °C.<br>With 3D hot air or hot air max. 180 °C.                                                                                                                                       |
| Biscuits       | With top/bottom heating max. 190 °C.<br>With 3D hot air or hot air max. 170 °C.<br>Egg or egg yolk reduces the production of acrylamide.                                                                              |
| Oven chips     | Spread evenly over the baking tray, in a single layer. Bake at least 400 g per baking tray so that the chips do not dry out                                                                                           |

# Test dishes

These tables have been produced for test institutes to facilitate the inspection and testing of the various appliances.

In accordance with EN 50304/EN 60350 (2009) and IEC 60350.

## Baking

Baking on 2 levels:

Always insert the universal pan above the baking tray.

Baking on 3 levels:

Insert the universal pan in the middle.

Piped biscuits:


Baking trays that are placed in the oven at the same time will not necessarily be ready at the same time.

Double crust apple pie on 1 level:

place dark springform cake tins next to each other diagonally on the same level.

Double crust apple pie on 2 levels:

Place dark springform cake tins next to each other (see illustration).

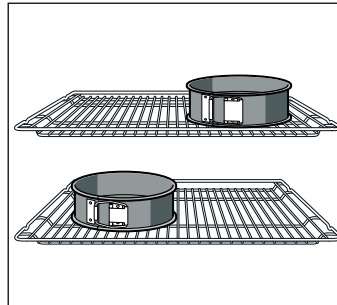

Cakes in tinplate springform cake tins:

Bake on 1 level with  Top/bottom heating. Place the springform cake tin on the universal pan instead of on the wire rack.

**Note:** For baking, use the lower of the temperatures indicated first.

| Dish                             | Accessories and tins                              | Level | Type of heating                                                                      | Temperature in °C | Cooking time in minutes |
|----------------------------------|---------------------------------------------------|-------|--------------------------------------------------------------------------------------|-------------------|-------------------------|
| Viennese whirls (preheat*)       | Baking tray                                       | 3     |    | 140-150           | 30-40                   |
|                                  | Baking tray                                       | 3     |  | 140-150           | 30-40                   |
|                                  | Universal pan + baking tray                       | 3+1   |  | 140-150           | 30-45                   |
|                                  | 2 baking trays + universal pan                    | 5+3+1 |  | 130-140           | 40-55                   |
| Small cakes (preheat*)           | Baking tray                                       | 3     |  | 150-170           | 20-35                   |
|                                  | Baking tray                                       | 3     |  | 150-170           | 25-35                   |
|                                  | Universal pan + baking tray                       | 3+1   |  | 140-160           | 30-45                   |
|                                  | 2 baking trays + universal pan                    | 5+3+1 |  | 130-150           | 35-55                   |
| Hot water sponge cake (preheat*) | Springform cake tin on the wire rack              | 2     |  | 160-170           | 30-40                   |
| Hot water sponge cake            | Springform cake tin on the wire rack              | 2     |  | 160-170           | 30-45                   |
| Apple pie                        | Wire rack + 2 springform cake tins, dia. 20 cm    | 1     |  | 170-190           | 80-100                  |
|                                  | 2 wire racks + 2 springform cake tins, dia. 20 cm | 3+1   |  | 170-190           | 70-100                  |


\* Do not use rapid heating to preheat the appliance.


## Grilling


If you are grilling food directly on the wire rack, the universal pan should also be inserted at level 1. The liquid is then collected, keeping the oven cleaner.

| Dish                                      | Accessories               | Level | Type of heating                                                                      | Grill setting | Cooking time in minutes |
|-------------------------------------------|---------------------------|-------|--------------------------------------------------------------------------------------|---------------|-------------------------|
| Toast<br>Preheat for 10 minutes           | Wire rack                 | 5     |  | 3             | 1/2-2                   |
| Beefburgers, 12 pieces*<br>do not preheat | Wire rack + universal pan | 4+1   |  | 3             | 25-30                   |

\* turn over after 2/3 of the cooking time.







**Robert Bosch Hausgeräte GmbH**  
Carl-Wery-Straße 34  
81739 München  
Germany  
**[www.bosch-home.com](http://www.bosch-home.com)**



9000774533

920320