

Quick Start Guide




Step A Connect

Step B Setup

Step C Enjoy

What's in the Box?


You should find these items upon opening the box.

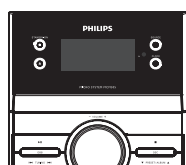


Main unit



Remote Control

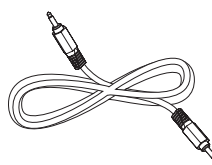


MP3 Link cable

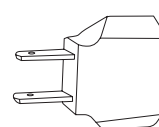

Flat pin adaptor



Quick Start Guide

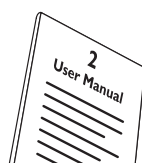

User Manual

PHILIPS

Step A *Connect*

1


Connect the speaker cables.

2

Connect the AC power cord to the wall socket.

Tip

See the User Manual for how to connect other equipment to this system.

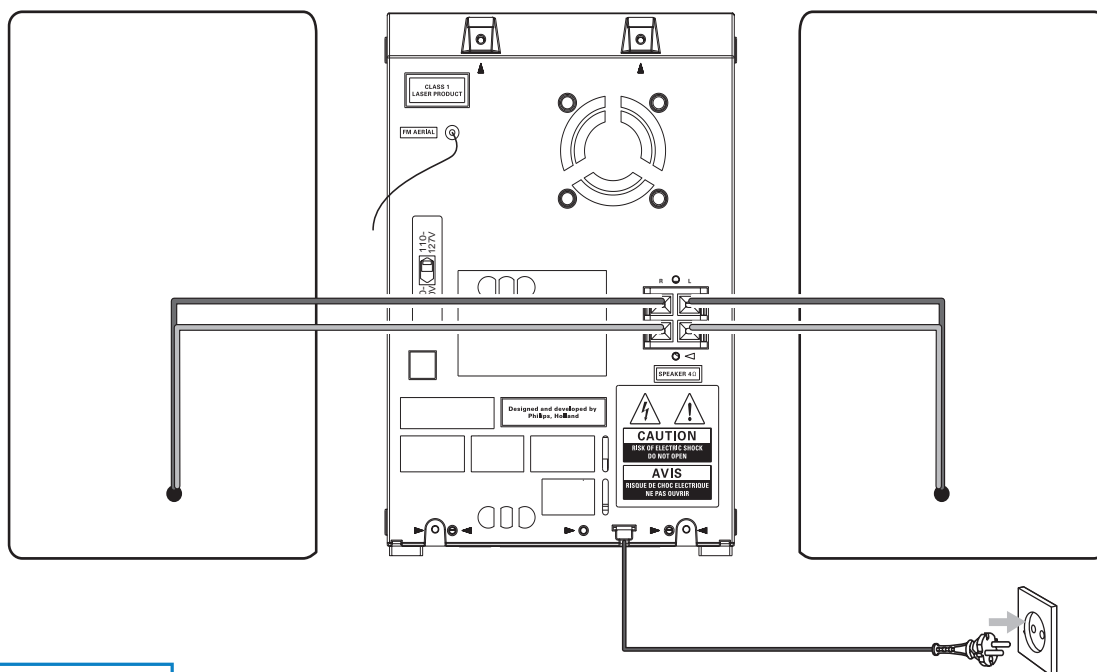

Step B *Setup*

Set clock

Note

– In Eco Power Standby mode, press **CLOCK** to show clock first, then press and hold **CLOCK** to proceed clock setting.

1

In standby mode, press and hold **CLOCK** on the main unit.

2

Press **■** on the main unit to select 12 hour or 24 hour format.

3

Turn **VOLUME +/-** to set the hour.

4

Press **CLOCK** to confirm.


→ The minute digits are displayed and begin to blink.

5

Turn **VOLUME +/-** to set the minute.

6


Press **CLOCK** to confirm.

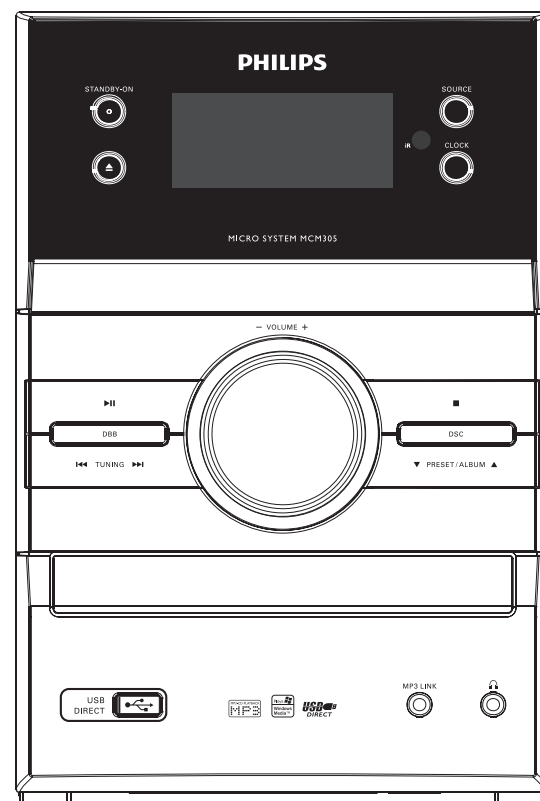

Step C *Enjoy*

Play disc


- 1 Press **CD** to select the disc source.
- 2 Press **▲** to open the disc tray.
- 3 Insert a disc with the printed side facing up, then close the disc tray.
- 4 To pause/resume play, press **▶||**.
- 5 To stop play, press **■**.

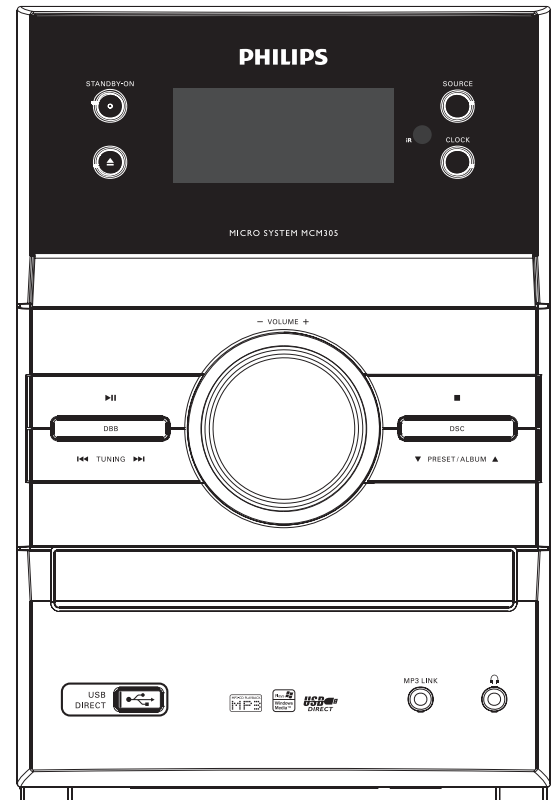

Play from USB

Ensure that the USB device contains playable audio content.

- 1 Flip open the USB socket cover on the front panel.
- 2 Insert the USB plug of a USB device into the socket.
- 3 Press **USB** to select the USB source.

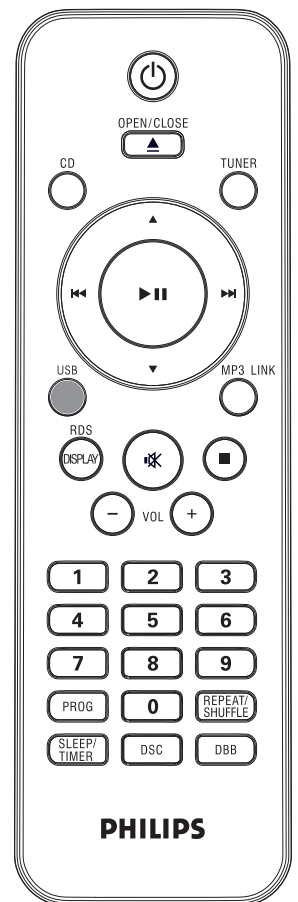

Step C *Enjoy*

Tune to a radio station

1

Press TUNER to select the tuner source.

2

Press and hold **⏮️⏭️** for more than 2 seconds.

3

Repeat step 2 to tune to more stations.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

