MCM 275

Quick Start Guide

Step A *Install*

Step B *Prepare*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

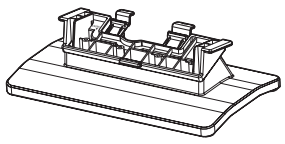

Stand

FM wire antenna

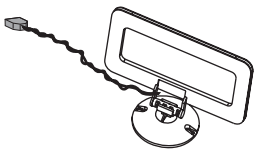

MW antenna

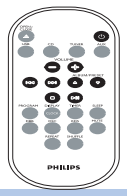

Remote control with
1 x CR2025 battery

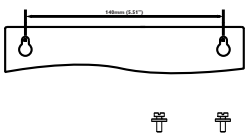

Mounting kit
(1x template, 2 x screws)

Quick start guide

User manual

PHILIPS

Step A *Install*

Mounting stand onto the set

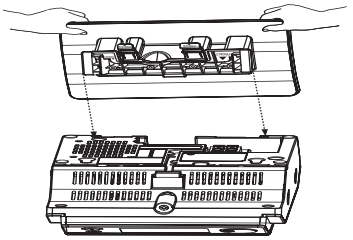

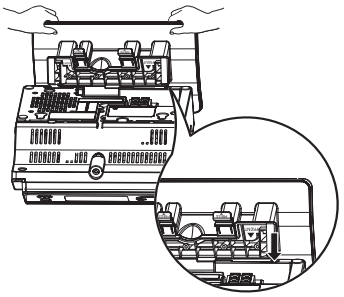

1. Put MCM275 on a flat and firm surface, rear side facing up
2. As shown, align the stand to the slots at set's bottom, ▼ **FRONT** facing down
3. Push the stand down into the slots

Helpful hints:

*- For wall mounting, please refer to the **User Manual, Appendix: How to mount your MCM275 onto Walls.** You may need assistance from the qualified service personnel.*

Rear connections

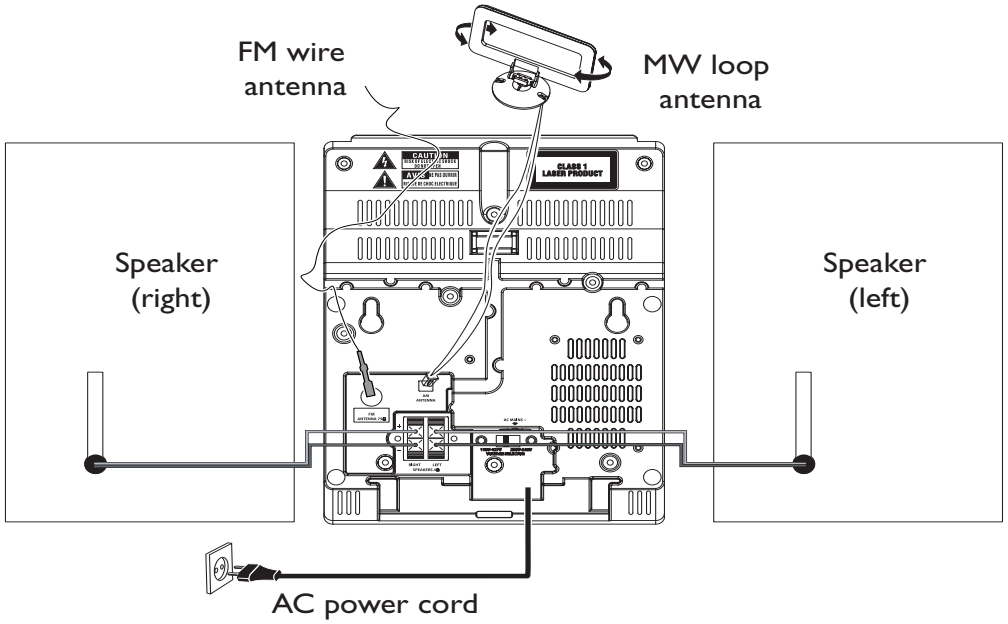

1. Connect the cable of the left speaker to **LEFT** (red and black) and the cable of the right speaker to **RIGHT (red and black)**
2. Extend the wire antenna and fit it to **FM ANTENNA**
3. a. Assemble the loop antenna
   b. Fit the plug of the loop antenna to **AM ANTENNA**
4. a. If your system is equipped with a Voltage Selector, set the VOLTAGE SELECTOR to the local power line voltage
   b. Connect the AC power cord to the wall socket

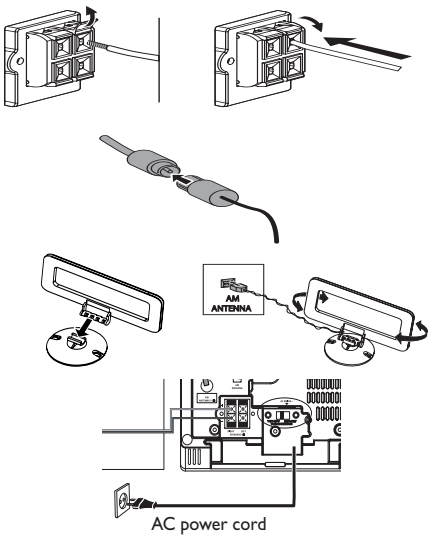

Step B *Prepare*

Setting the clock

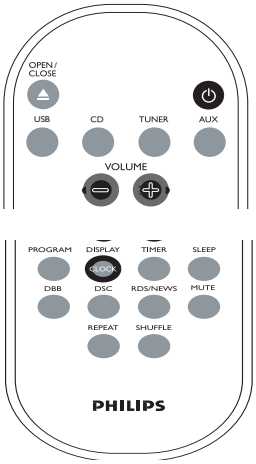

1. In the standby mode, press and hold **DISPLAY/CLOCK** on the remote control
   → 24 HR or 12 HR appears for the initial clock setting. ***To select 12-hour clock or 24-hour clock,***
   a. Press **VOLUME +/-** once or more
   b. Press **DISPLAY/CLOCK** to confirm
   → The hours digits start flashing
2. Hold down or press **VOLUME +/-** repeatedly to set the hours
3. Press **DISPLAY/CLOCK** to confirm
4. Hold down or press **VOLUME +/-** repeatedly to set the minutes
5. Press **DISPLAY/CLOCK** to confirm

IMPORTANT!

– Remove the protective plastic tab before using the remote control

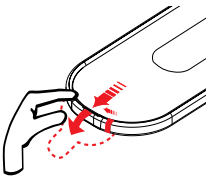

Notes for remote control:

– First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or TUNER, for example).

– Then select the desired function (▶II, I◀◀, ▶▶I for example).

Step C *Enjoy*

Playing discs

With this system, you can play all pre-recorded audio CDs (CDDA), all finalized audio CD-Rs and CD-RWs, MP3/WMA-CDs (CD-Rs/CD-RWs with MP3/WMA files)

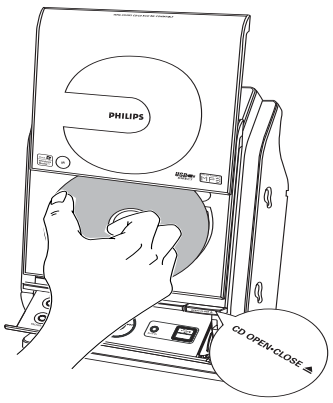

1. Press **SOURCE** once or more to select **CD** (or **CD** on the remote control)
2. Press **CD OPEN•CLOSE ▲** to open the CD compartment
3. Insert a disc with the printed side facing up. Press **CD OPEN•CLOSE ▲** again to close the compartment
4. Press **▶ II** to start playback
5. To stop playback, press **STOP ■**

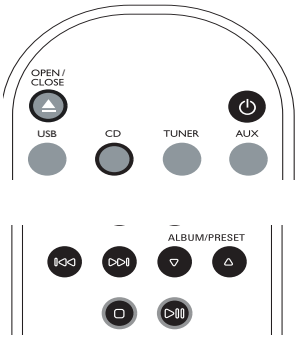

Step C *Enjoy*

Tuning to radio stations

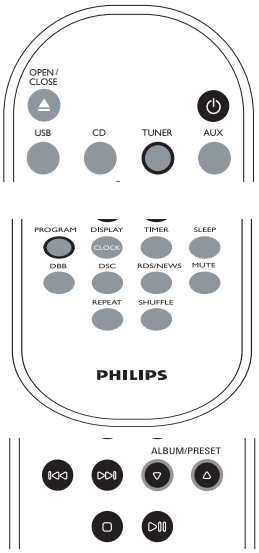

1. Press **SOURCE** once or more to select **TUNER** (or **TUNER** on the remote control)
2. Press and hold **PROGRAM** until AUTO appears
   → P flashes. Available stations are programmed: FM stations followed by MW stations
3. Press the **ALBUM/ PRESET** buttons once or more until the desired preset station is displayed

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

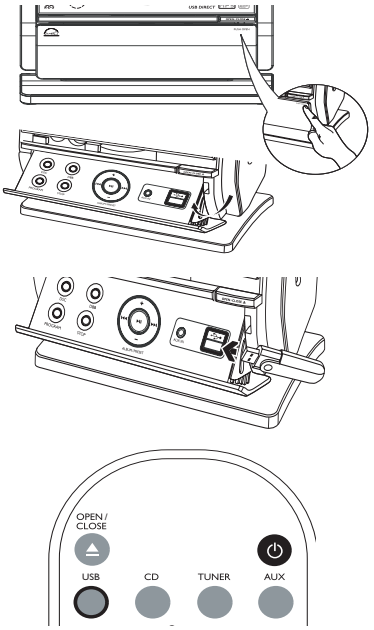

1. Check you have unfolded the control panel
2. Insert the USB device's USB plug into the socket on the set 's foldable control panel
3. Press **SOURCE** once or more to select **USB** (or **USB** on the remote control)
4. Play the USB's audio files as you do with the albums/tracks on a CD
5. Press **STANDBY-ON** to switch off the set

Detailed playback features and additional functions are described in the accompanied owner's manual.

2006 © Koninklijie Philips Electronics N.V.
All rights reserved.