

Always there to help you

Register your product and get support at
www.philips.com/welcome



EN	User manual
ES	Manual del usuario
FR	Mode d'emploi

PHILIPS

P&F USA Inc.
PO Box 2248
Alpharetta, GA 30023-2248
Phone 1 866 309 0845

Meet Philips at the Internet
http://www.philips.com/welcome



EN

1 Important

Safety

Important Safety Instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Apparatus shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiaa.org.
- Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.

- Warning**
- Never remove the casing of this apparatus.
 - Never lubricate any part of this apparatus.
 - Never place this apparatus on other electrical equipment.
 - Keep this apparatus away from direct sunlight, naked flames or heat.
 - Never look into the laser beam inside this apparatus.
 - Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

- Warning**
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Notice for the USA
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.

Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information
All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

2 Your clock radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

With this clock radio, you can:


- enjoy the FM radio
- know the time
- wake up to buzz or favorite radio tone
- set two alarms to ring at different time.

What's in the box

Check and identify the contents of your package:

- Main unit (with power adapter attached)
- User manual

Overview of the main unit

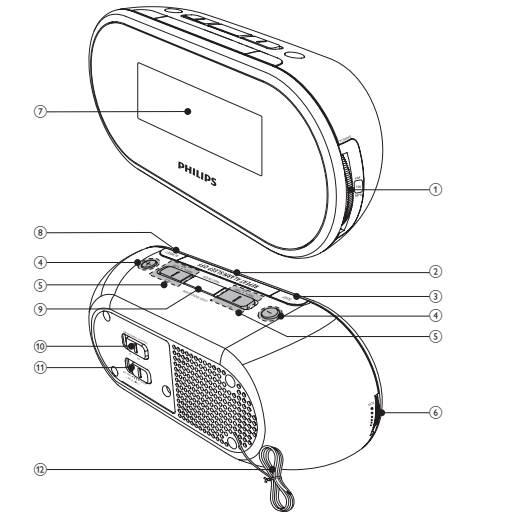

- TUNING**
 - Tune to a radio station.
- REPEAT ALARM/SLEEP OFF**
 - Repeat the alarm.
 - Disable the sleep timer.
- SLEEP**
 - Set the sleep timer.
- + / -**
 - Adjust the times of clock, alarm timer and sleep timer.
- AL1, AL2**
 - RADIO**: Set the current radio station as alarm tone.
 - BUZ**: Set buzz as alarm tone.
 - OFF**: Turn off the alarm timer.
- VOL**
 - Adjust the volume level of radio.
- Display panel**
- AL RESET**
 - Stop the alarm.
- RADIO ON/OFF**
 - Turn on or off radio.
- BRIGHTNESS CONTROL**
 - Adjust the brightness of display panel.
- Clock Control**
 - SET TIME**: Activate the clock time setup.
 - SET AL1/AL2**: Activate the alarm time setup; display the set alarm time.
 - CLOCK**: Display the clock time.
- FM ANT**
 - Attached FM radio antenna.

3 Get started

- Caution**
- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence. If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:
Model No. _____
Serial No. _____

Connect power

- Caution**
- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the apparatus.
 - Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
 - Before connecting the AC power cord, ensure you have completed all other connections.

- Connect the power adapter to the power socket.

Set the clock time

- Switch **Clock Control** to **SET TIME**
- Press **+ / -** to set the time (12-hour system).
- Switch **Clock Control** to **CLOCK**.

- Tip**
- Press and hold **+** to fast increase the time digits.
 - Press **-** to decrease the time digits one by one.

4 Listen to radio

Tune to a radio station

- Press **RADIO ON/OFF** to turn on the radio.
- Adjust **TUNING** slowly to tune to a radio station.
 - To turn off the radio, press **RADIO ON/OFF** again.

Adjust the volume level

- Rotate **VOL** clockwise or anti-clockwise.

5 Set the alarm timer

Set the alarm time

You can set two separate alarms. For the alarm tone, you can select the buzz or the FM radio.

- Note**
- Before you start, ensure that the time is set correctly.

- Switch **Clock Control** to **AL1** or **AL2** (on **SET AL1/AL2**).
- Press **+ / -** to set the alarm time.
- Switch **Clock Control** to **CLOCK**.

Turn on the alarm timer

- Note**
- Ensure the alarm time is set successfully.

- Switch **AL1/AL2** to **BUZ** or **RADIO**
 - B** / **A** appears.
- The buzz or FM radio is set for alarm tone.

View the alarm time

- Switch **Clock Control** to **AL1** or **AL2** (on **SET AL1/AL2**).
 - B** / **A** appears.
- The preset alarm time is displayed.

Repeat alarm

- When the alarm rings, press **REPEAT ALARM/SLEEP OFF**.
 - The alarm repeats ringing 7 minutes later.

Stop alarm ring

- When the alarm rings, press **AL RESET**.
 - The alarm stops but the alarm settings remain.

Turn off the alarm timer

- Switch **AL1/AL2** to **OFF**.
 - B** / **A** disappears.

6 Other features

Set the sleep timer

You can set the clock radio to turn off automatically after a certain period of time (0 to 59 minutes).

- Note**
- Before the setup, ensure **Clock Control** is switched to **CLOCK** and the radio is turned off.

- Press and hold **SLEEP**.
 - The time digits count down from **0:59** to **0:00**.
 - The radio turns on.
 - Press **+ / -** repeatedly to adjust the time.
 - Release **SLEEP** when the desired time digits are displayed.
- To turn off the sleep timer:**
- Press **REPEAT ALARM/SLEEP OFF**.

Adjust display brightness

- Switch **BRIGHTNESS CONTROL** to **HI** or **LO**.
 - HI**: For high brightness level
 - LO**: For low brightness level

7 Product information

- Note**
- Product information is subject to change without prior notice.

Specifications

Tuner (FM)	
Tuning Range	87.5 - 108 MHz
Sensitivity	< 22 dBf
- Mono, 26dB S/N Ratio	
Total Harmonic Distortion	< 3%
Signal to Noise Ratio	> 50 dB

General information	
AC Power	Input: 100-240V~ 50/60Hz 0.25MAX Output: 5VDC, 500mA
Operation Power Consumption	3 W
Dimensions - Main Unit (W x H x D)	185 x 85 x 52 mm
Weight - Main Unit	0.37 kg

8 Troubleshooting

- Caution**
- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site (www.philips.com/support). When you contact Philips, ensure that your apparatus is nearby and the model number and serial number are available.

- No power**
 - Ensure that the Mains cord is connected securely.
 - Ensure that there is power at the AC Mains.

- No sound**
 - Adjust the volume.

- No response from the unit**
 - Disconnect and reconnect the AC power plug, then turn on the unit again.

- Poor radio reception**
 - Increase the distance between the apparatus and your TV or VCR.
 - Fully extend the antenna.
 - Connect an outdoor antenna instead.

- Timer does not work**
 - Set the clock correctly.
 - Switch on the timer.

- Clock/timer setting erased**
 - Power has been interrupted or the power plug has been disconnected.
 - Reset the clock/timer.
 -

FR

1 Important

Sécurité

Consignes de sécurité importantes

- Lisez attentivement ces consignes.
- Conservez soigneusement ces consignes.
- Tenez compte de tous les avertissements.
- Respectez toutes les consignes.
- N'utilisez pas cet appareil à proximité d'une source d'eau.
- Nettoyez l'appareil avec un chiffon sec uniquement.
- N'obstruez pas les orifices de ventilation. Installez l'appareil conformément aux consignes du fabricant.
- N'installez pas l'appareil à proximité de sources de chaleur telles que des radiateurs, registres de chaleur, poêles ou autres appareils (amplificateurs par exemple) produisant de la chaleur.
- Respectez la fonction de sécurité de la fiche polarisée ou de mise à la terre. Une fiche polarisée possède deux broches dont l'une est plus large que l'autre. Une fiche de mise à la terre possède deux broches et une patte de mise à la terre. La broche large ou la troisième patte sont fournies pour des raisons de sécurité. Si la fiche fournie n'est pas adaptée à votre support de prise, demandez à un électricien de vous le remplacer.

- Évitez de marcher sur le cordon d'alimentation ou de le pincer, notamment au niveau des fiches, des prises de courant et de son point de sortie sur l'appareil.
- Utilisez uniquement les pièces de fixation/accessoires spécifié(e) s par le fabricant.
- Débranchez cet appareil en cas d'orage ou pendant les longues périodes d'inutilisation.
- Confiez toutes les tâches de maintenance à un personnel qualifié. Des travaux de maintenance sont nécessaires en cas d'endommagement de l'appareil : par exemple, endommagement du cordon d'alimentation ou de la fiche, déversement de liquide ou chute d'objets à l'intérieur de l'appareil, exposition de l'appareil à la pluie ou à l'humidité, dysfonctionnement ou chute de l'appareil.
- Votre appareil ne doit pas être exposé aux fuites goutte à goutte ou aux éclaboussures.
- Ne placez pas d'objets susceptibles d'endommager votre appareil à proximité de celui-ci (par exemple, objets remplis de liquide ou bougies allumées).
- Ce produit peut contenir du plomb et du mercure. La mise au rebut de ces substances peut être réglementée afin de préserver l'environnement. Pour plus d'informations sur le traitement ou le recyclage des produits, veuillez contacter les autorités locales ou l'Electronic Industries Alliance à l'adresse www.eiaa.org.

- Si la fiche de l'adaptateur plug-in Direct est utilisée comme dispositif de découplage, elle doit rester facilement accessible.
- Avertissement**
- Ne retirez jamais le boîtier de l'appareil.
 - Ne graissez jamais aucun composant de cet appareil.
 - Ne posez jamais cet appareil sur un autre équipement électrique.
 - Conservez cet appareil à l'abri des rayons du soleil, des flammes nues et de toute source de chaleur.
 - Ne regardez jamais le rayon laser émis par l'appareil.
 - Veillez à maintenir un accès facile au cordon d'alimentation, à la fiche ou à l'adaptateur pour débrancher l'appareil.

- Avertissement**
- Pour éviter tout risque d'incendie ou d'électrocution, conservez cet appareil à l'abri de la pluie et de l'humidité.

Avertissement

Toute modification apportée à cet appareil qui ne serait pas approuvée expressément par Philips Consumer Lifestyle peut invalider l'habilitation de l'utilisateur à utiliser l'appareil.

Remarque pour les États-Unis
À l'issue des tests dont il a fait l'objet, cet équipement a été déclaré conforme à la section 15 de la réglementation FCC applicable aux appareils numériques de classe B. Ces limites sont conçues pour fournir une protection suffisante contre les interférences nuisibles dans les installations résidentielles. Cet équipement génère, utilise et peut émettre des ondes radioélectriques. Il est susceptible de créer des interférences nuisibles dans les communications radioélectriques s'il n'est pas installé ou utilisé conformément au mode d'emploi. Cependant, l'absence d'interférences dans une installation particulière n'est pas garantie. Dans le cas où cet équipement créerait des interférences avec la réception radio ou télévisée, ce qui peut être vérifié en éteignant et en rallumant l'appareil, il est conseillé d'essayer de corriger ces interférences en appliquant une ou plusieurs des mesures suivantes :

- déplacer l'antenne de réception ;
- augmenter la distance entre l'équipement et le récepteur ;
- raccorder l'équipement à une prise de courant située sur un circuit différent de celui sur lequel le récepteur est connecté ;
- prendre conseil auprès d'un distributeur ou d'un technicien radio/TV qualifié.

Cet appareil est conforme aux limites d'exposition au rayonnement RF stipulées par la FCC et l'IC pour une utilisation dans un environnement non contrôlé. Les antennes utilisées pour cet émetteur doivent être installées et doivent fonctionner à au moins 20 cm de distance des utilisateurs et ne doivent pas être placées près d'autres antennes ou émetteurs ou fonctionner avec ceux-ci. Les installateurs doivent s'assurer qu'une distance de 20 cm sépare l'appareil (à l'exception du combiné) des utilisateurs.

Mise au rebut de votre ancien appareil et des piles

Cet appareil a été conçu et fabriqué avec des matériaux et des composants de haute qualité pouvant être recyclés et réutilisés. Ne jetez pas ce produit avec les ordures ménagères ordinaires. Renseignez-vous sur les réglementations locales concernant la collecte des produits électriques et électroniques et des piles. La mise au rebut citoyenne de ces produits permet de protéger l'environnement et la santé. Visitez www.recycle.philips.com pour plus d'informations sur les centres de recyclage dans votre région.

Informations sur l'environnement
Tout emballage superflu a été supprimé. Nous avons fait notre possible pour permettre une séparation facile de l'emballage en trois matériaux : carton (boîte), polystyrène moussé (qui amortit les chocs) et polyéthylène (sacs, feuille protectrice en mousse). Votre appareil se compose de matériaux recyclables et réutilisables à condition d'être démontés par une entreprise spécialisée. Respectez les réglementations locales pour vous débarrasser des emballages, des piles usagées et de votre ancien équipement.

2 Votre radio-réveil

Félicitations pour votre achat et bienvenue chez Philips ! Pour profiter pleinement de l'assistance offerte par Philips, enregistrez votre produit à l'adresse suivante : www.philips.com/welcome.

Introduction

Avec ce radio-réveil, vous pouvez :


- écouter la radio FM ;
- savoir l'heure ;
- vous réveiller au son du buzzer ou de votre radio préférée ;
- paramétrer deux alarmes à des heures différentes.

Contenu de l'emballage

Vérifiez et identifiez les différentes pièces contenues dans l'emballage :

- Unité principale (avec adaptateur secteur fourni)
- Mode d'emploi

Présentation de l'unité principale

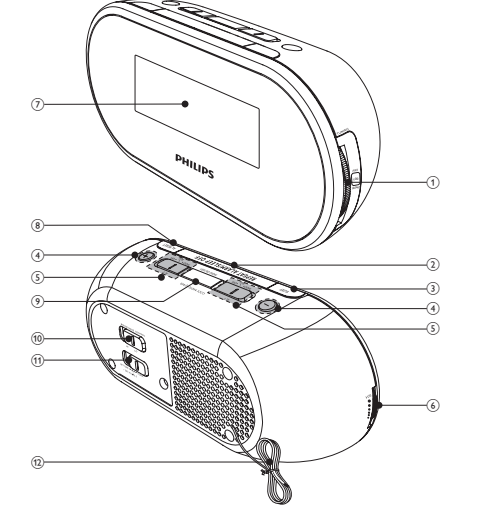

- TUNING**
 - Permet de régler une station de radio.
- REPEAT ALARM/SLEEP OFF**
 - Permet de répéter l'alarme.
 - Permet de désactiver l'arrêt programmé.

- SLEEP**
 - Permet de régler l'arrêt programmé.
- + / -**
 - Permet de régler l'horloge, l'alarme et l'arrêt programmé.
- AL1, AL2**
 - RADIO** : permet de définir la station de radio en cours comme tonalité de l'alarme.
 - BUZ** : permet de définir le buzzer comme tonalité de l'alarme.
 - OFF** : permet de désactiver l'alarme.
- VOL**
 - Permet de régler le volume de la radio.
- Afficheur**
- AL RESET**
 - Permet d'arrêter l'alarme.
- RADIO ON/OFF**
 - Permet d'activer/de désactiver la radio.
- BRIGHTNESS CONTROL**
 - Permet de régler la luminosité de l'écran.
- Sélecteur d'horloge**
 - SET TIME** : permet d'activer le réglage de l'horloge.
 - SET AL1/AL2** : permet d'activer le réglage de l'alarme et d'afficher l'heure définie pour l'alarme.
 - CLOCK** : permet d'afficher l'heure.
- FM ANT**
 - Antenne radio FM fixée.

3 Guide de démarrage

- Attention**
- L'utilisation de commandes ou de réglages, ou de toute autre procédure que celles données dans ce document risque d'exposer l'utilisateur à une utilisation ou à des radiations dangereuses.

Les instructions fournies dans ce chapitre doivent être suivies dans l'ordre énoncé. Si vous contactez Philips, vous devrez fournir les numéros de modèle et de série de cet appareil. Les numéros de série et de modèle sont indiqués sous l'appareil. Notez ces numéros ici :
N° de modèle : _____
N° de série : _____

Alimentation

- Attention**
- Risque d'endommagement du produit ! Vérifiez que la tension d'alimentation correspond à la valeur de tension imprimée sous ou au dos de l'appareil.
 - Risque d'électrocution ! Lorsque vous débranchez le cordon d'alimentation, tirez sur la fiche électrique, jamais sur le cordon.
 - Avant de brancher le cordon d'alimentation, vérifiez que vous avez effectué toutes les autres connexions.

- Branchez l'adaptateur secteur sur la prise secteur.

Réglage de l'heure

- Réglez le **sélecteur d'horloge** sur **SET TIME**.
- Appuyez sur **+ / -** pour régler l'heure (système 12 heures).
- Réglez le **sélecteur d'horloge** sur **CLOCK**.

- Conseil**
- Maintenez enfoncé **+** pour augmenter rapidement les chiffres de l'heure.
 - Appuyez sur **-** pour diminuer les chiffres de l'heure un par un.

4 Écoute de la radio

Réglage d'une station de radio

- Appuyez sur **RADIO ON/OFF** pour allumer la radio.
- Réglez **TUNING** lentement pour rechercher une station de radio.
 - Pour désactiver la radio, appuyez de nouveau sur **RADIO ON/OFF**.

Réglage du volume

- Tournez **VOL** dans le sens des aiguilles d'une montre ou dans l'autre sens.

5 Réglage de la minuterie de l'alarme

Programmation de l'alarme

Vous pouvez programmer deux alarmes différentes. Il est possible de sélectionner comme tonalité d'alarme le buzzer ou la radio FM.

- Remarque**
- Avant de commencer, assurez-vous que l'heure est correctement réglée.

- Réglez le **sélecteur d'horloge** sur **AL1** ou **AL2** (sur **SET AL1/AL2**).
- Appuyez sur **+ / -** pour définir l'heure de l'alarme.
- Réglez le **sélecteur d'horloge** sur **CLOCK**.

Activer l'alarme

- Remarque**
- Assurez-vous que l'alarme a bien été réglée.

- Réglez **AL1/AL2** sur **BUZ** ou sur **RADIO**.
 - B** / **A** s'affiche.
 - Vous avez défini le buzzer ou la radio FM comme tonalité de l'alarme.

Affichage de l'heure de l'alarme

- Réglez le **sélecteur d'horloge** sur **AL1** ou **AL2** (sur **SET AL1/AL2**).
 - B** / **A** ou **B** s'affiche.
 - L'heure prédéfinie de l'alarme s'affiche.

Répétition de l'alarme

- Lorsque l'alarme se déclenche, appuyez sur **REPEAT ALARM/ SLEEP OFF**.
 - L'alarme se déclenche à nouveau 7 minutes plus tard.

Arrêt de l'alarme

- Lorsque l'alarme se déclenche, appuyez sur **AL RESET**.
 - L'alarme s'arrête, mais ses paramètres sont conservés.

Désactivation de l'alarme

- Réglez **AL1/AL2** sur **OFF**.
 - B** / **A** disparaît.

6 Autres fonctions

Réglage de l'arrêt programmé

Vous pouvez régler le radio-réveil pour qu'il s'éteigne automatiquement après une durée prédéfinie (de 0 à 59 minutes).

- Remarque**
- Avant de le régler, assurez-vous que le **sélecteur d'horloge** est réglé sur **CLOCK** et que la radio est désactivée.

- Maintenez la touche **SLEEP** enfoncée.
 - Les chiffres de l'alarme effectuent un compte à rebours de **0:59** à **0:00**.
 - La radio s'allume.

- Appuyez plusieurs fois sur **+ / -** pour régler l'heure

