



Servidor FTP

DCS-932L

DCS-932L




Procedimentos para configuração de conexão FTP

- 1- Para realizar o procedimento de conexão com o servidor FTP o computador e a câmera IP devem estar conectados via cabo Ethernet nas portas LAN do seu **Roteador** ou até mesmo via **Wireless**.



2- Acesse a página de configuração com o **IP** que foi anotado durante a instalação junto ao **Mydlink**, abra o **Internet Explorer** e digite na barra de endereços o **IP** da câmera e tecle **Enter**. Veja o exemplo abaixo, neste exemplo usamos o **IP Padrão da Câmera**.

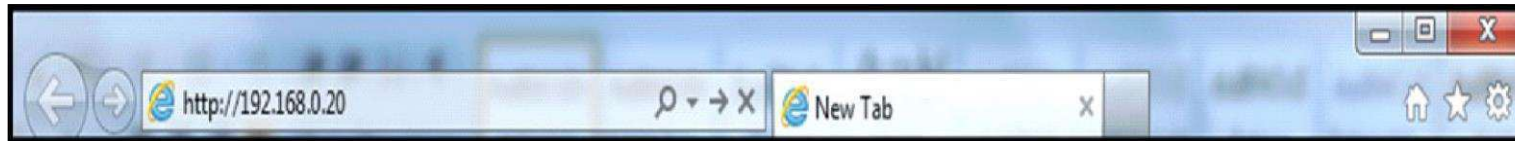

No centro da tela abrirá os campos para autenticação.



O usuário e senha padrão do equipamento é:


User Name: admin

Password: (digite a senha cadastrada junto ao **Mydlink**)

Clique em **Ok**.

3- Na tela de configuração realize os procedimentos abaixo indicados. Clique em **Setup**, depois em **Motion Detection**.

- ✓ **Motion Detection:** (Enable)
- ✓ **Sensitivity:** (essa opção define a sensibilidade da câmera em detectar algum movimento na área selecionada **no caso em vermelho**).
- ✓ Arraste o mouse sobre a área que deseja monitorar.

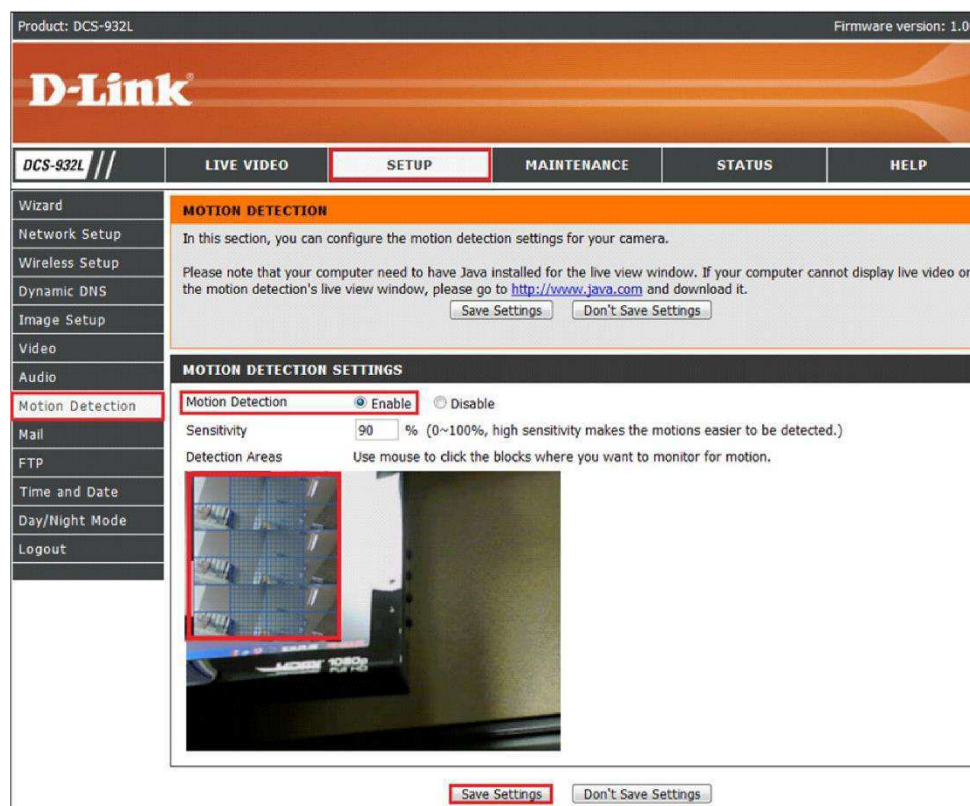

Obs.: Acabamos de configurar a detecção de movimentos da câmera, nos próximos passos realizaremos as configurações de conexão com o Servidor FTP. 4- Clique na opção **Setup** depois em **FTP** no lado esquerdo da página.

Dados para Conexão com o Servidor FTP:

Product: DCS-932L Firmware version: 1.00

D-Link

DCS-932L // LIVE VIDEO **SETUP** MAINTENANCE STATUS HELP

Wizard
Network Setup
Wireless Setup
Dynamic DNS
Image Setup
Video
Audio
Motion Detection
Mail
FTP
Time and Date
Day/Night Mode
Logout

FTP
In this section, you may configure a FTP server to receive the images.
Save Settings Don't Save Settings

FTP SERVER

Host Name 192.168.0.103
Port 21 (Default is 21)
User Name dlink
Password *****
Path /Especificar pasta do FTP externo
Passive Mode ☒ Yes ☐ No

TIME SCHEDULE

☒ Enable uploading images to the FTP server

☐ Always
☒ Schedule
Day ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun
Time Period Start : 00:00:00 (Example : 06:30:00)
Stop : 00:00:00 (Example : 22:30:00)
☒ Motion Detection

Image Frequency ☒ Auto Frames/Second
☐ 1 Seconds/Frame
Base File Name DCS-932L
File ☒ Overwrite
☒ Date/Time Suffix
☒ Create subfolder by 0.5 hour
☐ Sequence Number Suffix Up to 1024

TEST FTP SERVER

A JPEG file will be sent to the above FTP server for testing.
(File name: test_date_time.jpg) Test

Save Settings Don't Save Settings

Helpful Hints..
Host Name:
This is the IP address of the FTP server that you will be connecting to.
Port:
The default port is 21.
User Name:
The user name that required accessing the external FTP server.
Password:
The password of the external FTP server.
Passive mode - Enabling passive mode will allow access to an external FTP server if your camera is behind a router protected by a firewall.

Enable uploading images to the FTP server:
Checking this box will enable the camera to upload images to above FTP server.
Select **Always** to enable camera uploading images to the FTP server always.
Select **Schedule** if you like to specify the time and day when the camera to start and stop uploading the images to the FTP server.
Select **Motion Detection** if you would like to camera uploading images to the FTP server when the motions are detected.
Image Frequency - User can choose and define the numbers for both **Frames/Second** and **Seconds/Frame**.
Base File Name - The name that contains the time stamp information, for example DCS-932L_2005072116425101.jpg. This means that the camera took a snapshot in the year 2005, July 21 at 16:42:51 (hour:min:sec) and 01 represents the 1st picture.

Host name: (Digite o IP do Servidor FTP)

Port: (21)

User Name: (Digite usuário do Servidor FTP)

Password: (Digite a senha do Servidor FTP)

Path: (Especifica a pasta de destino no servidor de FTP externo.)

Enable Uploading Images to the FTP Server: (Deixa marcado)

Motion Detection: (Deixe marcado)

Data/Time Suffix e Create Subfolder by: (Deixe marcado) **Passive Mode:** (yes).

Clique em **Save Settings** para salvar as configurações

Para visualizar os dados enviados basta acessar o servidor FTP.

Após autenticar com o servidor irá apresentar os arquivos no mesmo.

FTP root at 192.168.0.103			
To view this FTP site in Windows Explorer, click Page, and then click Open FTP Site in Windows Explorer.			
06/07/2012	12:40PM	Directory	2100101
06/07/2012	12:46PM	Directory	2100611
06/07/2012	06:21PM	27,875	DCS-932 01011.avi
06/07/2012	12:45PM	548,948	DCS-932 010101.avi
06/07/2012	01:07PM	498,034	DCS-932 01011.jpg
06/07/2012	01:21PM	524,592	0120201.avi
06/07/2012	10:11AM	9,216	02101212.jpg

