






Thule XT Kit 3140

> Instructions

FORD Transit Courier, 4-dr Van, 14-

This kit is only for vehicles with fixpoint mounting.

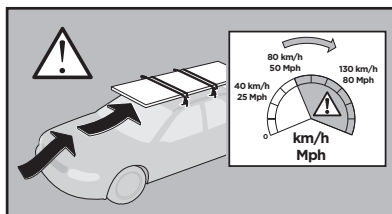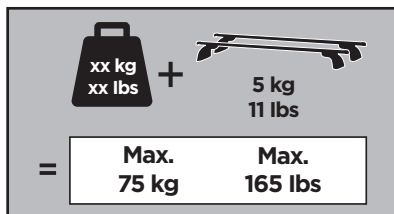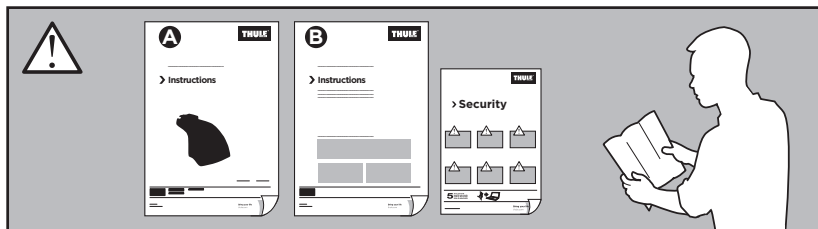


ISO 11154-E


183140

C.20170612
509-3140-02


Bring your life
thule.com



◀ **01** x4



◀ **206** x2




◀ **207** x1



◀ **208** x1

A

12 mm x8

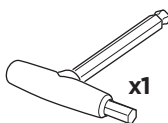

x1

50784 x4


50786 x4

50870 x4

51294 3 mm x1

51340 TORX T25 x1

50273 x1



x1



x1

1

01



208



207



01



01




206




206




01



2

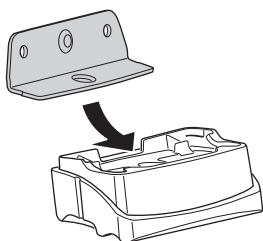


C

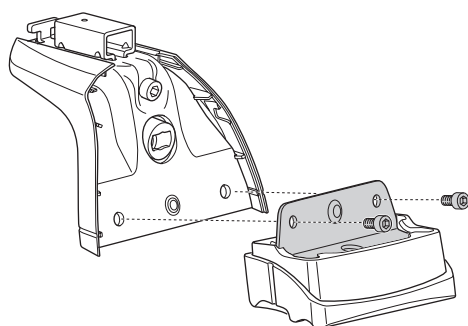

A


12 mm

x8

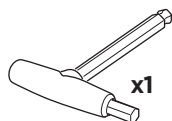


x1


6 Nm

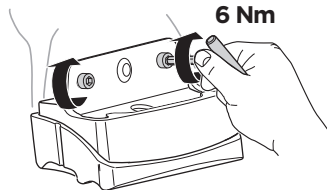


3




x1

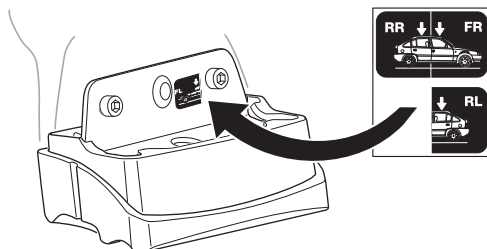


4




A

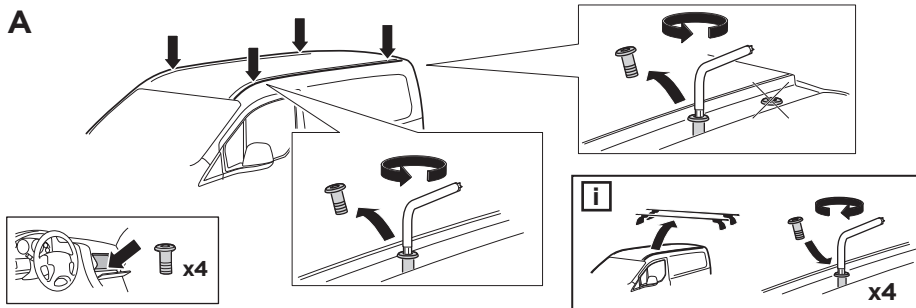


B

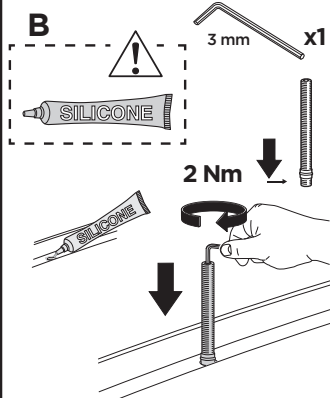

C

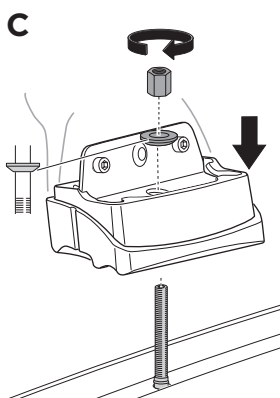

D

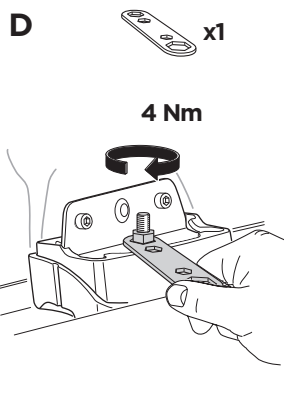

5

