

**THULE**
SWEDEN

Thule XT Kit 3149

> Instructions

VW California, 4-dr Bus, (T5) 03-15, (T6) 15-

VW Caravelle, 4-dr Bus, (T5) 03-15, (T6) 15-

VW Multivan, 4-dr Bus, (T5) 03-15, (T6) 15-





VW Shuttle, 4-dr Bus, (T5) 03-15, (T6) 15-

VW Transporter, 2-dr Single Cab, (T5) 03-15, (T6) 15-

VW Transporter, 4-dr Double Cab, (T5) 03-15, (T6) 15-

VW Transporter, 4-dr Van, (T5) 03-15, (T6) 15-

This kit is only for vehicles with fixpoint mounting or T-profile.



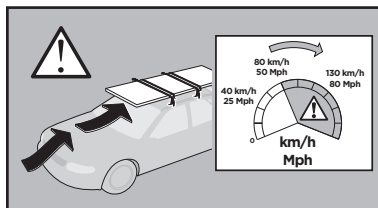
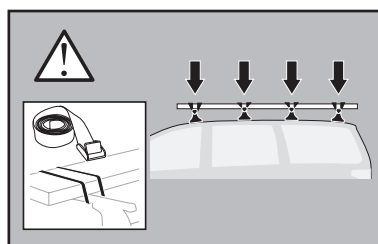
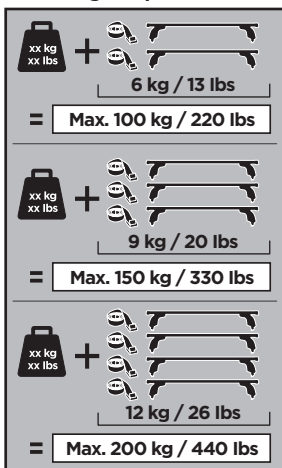
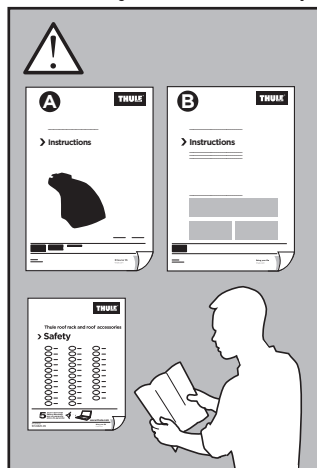


ISO 11154-E

183149

C.20150810
509-3149-01

Bring your life
thule.com

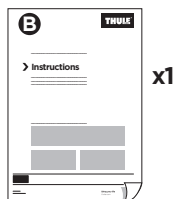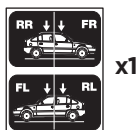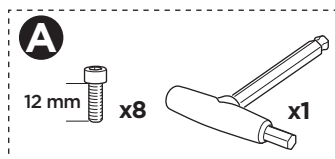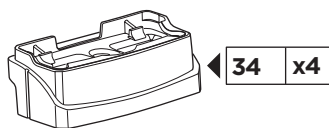

1

