






Thule XT Kit 3155

> Instructions

CITROËN Dispatch, 4-dr Van, 16-
CITROËN Jumpy, 4-dr Van, 16-
CITROËN SpaceTourer, 5-dr Bus, 16-
OPEL Vivaro, 4-dr Van, 19-
OPEL Zafira Life, 5-dr Bus, 19-
PEUGEOT Expert, 4-dr Van, 16-
PEUGEOT Traveller, 5-dr Bus, 16-
TOYOTA ProAce, 4-dr Van, 16-
TOYOTA ProAce Verso, 5-dr Bus, 16-
VAUXHALL Vivaro, 4-dr Van, 19-
VAUXHALL Vivaro Life, 5-dr Bus, 19-

This kit is only for vehicles with fixpoint mounting.

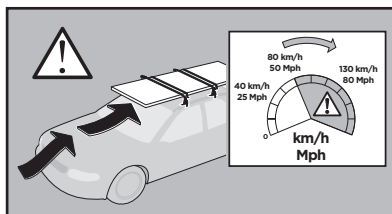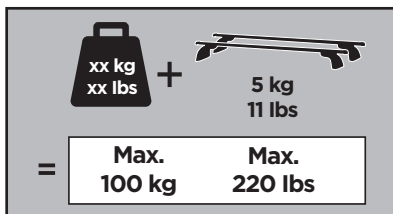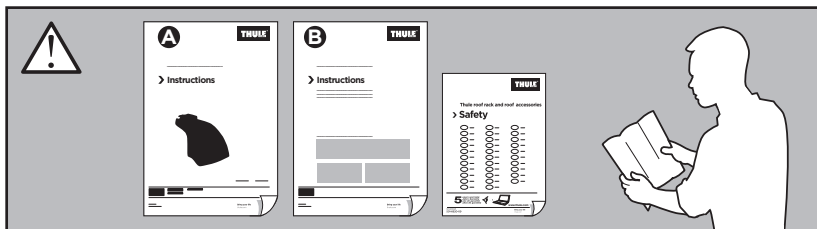


ISO 11154-E

183155

C.20191210
509-3155-03

Bring your life
thule.com

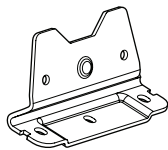


◀ 07 x4




x4



x4



x1

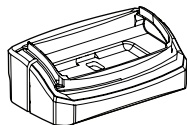

◀ 16 x4



x4




x1

A




x8



x1

1

07



16



16



07



07




16








16




07




2

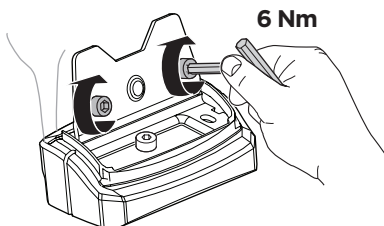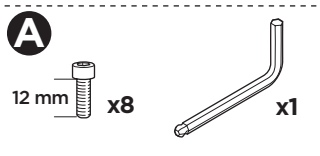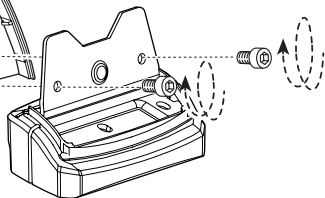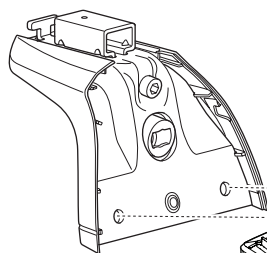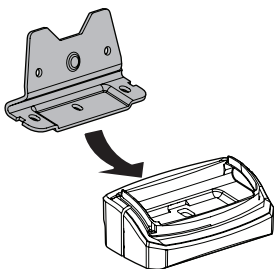

3



x1

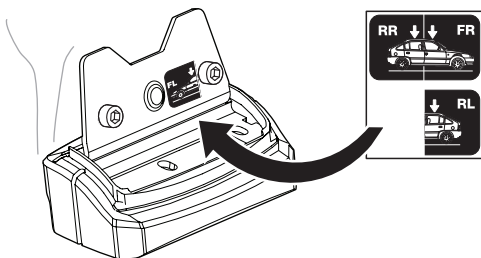

4



20 mm x4



x4




x4

A




x1


A

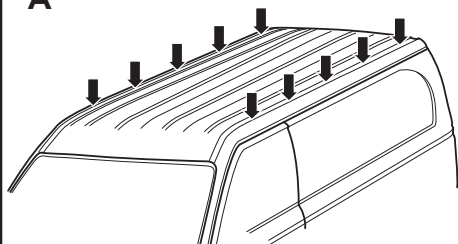


B

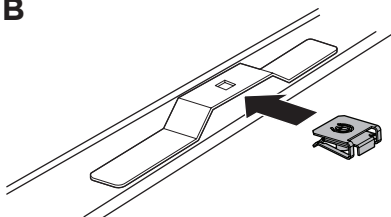


C

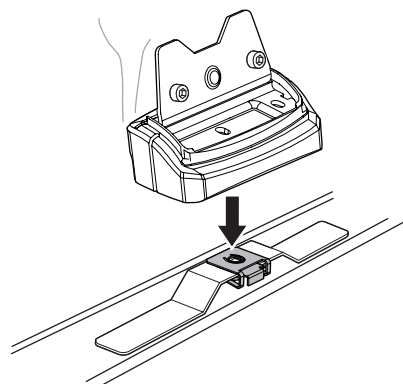

D

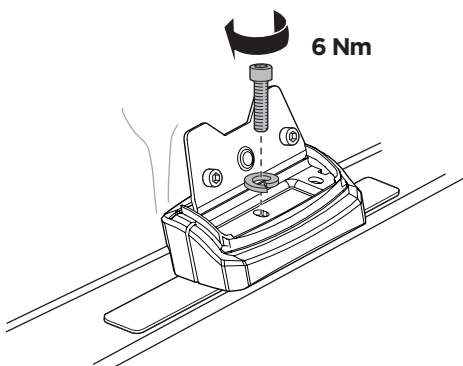

5

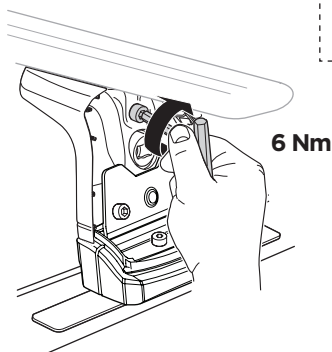

A



x1

