



Thule XT Kit 3021

> Instructions

DACIA Dokker, 4-dr Van, 12-
FIAT Doblo, 3-dr Van, 00-03, 04-05, 06-09
FIAT Doblo, 4-dr Van, 00-03, 04-05, 06-09
FIAT Doblo, 5-dr Van, 00-03, 04-05, 06-09
FIAT Doblo Maxi, 4-dr Van, 08-09
FORD Tourneo Connect, 5-dr Bus, 03-13
FORD Transit Connect, 4-dr Van, 03-13
MERCEDES Citan, 4-dr Van, 12-
NISSAN Kubistar, 5-dr Van, 97-09
RENAULT Kangoo, 5-dr Van, 97-07, 08-
RENAULT Kangoo Maxi, 5-dr Van, 10-

This kit is only for vehicles with fixpoint mounting.

Weight Capacity Diagrams:

xx kg / xx lbs + Thule XT Kit 3021 = Max. 75 kg / 165 lbs

xx kg / xx lbs + Thule XT Kit 3021 = Max. 100 kg / 220 lbs

Speed Limit Diagram:

80 km/h 50 Mph 130 km/h 80 Mph

40 km/h 25 Mph


km/h Mph

ISO 11154-E


183021

C.20151008
509-3021-07


Bring your life
thule.com

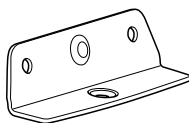

◀ **01** x4



◀ **26** x2

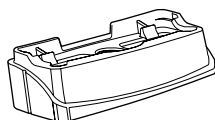

◀ **27** x2



751
FootPack

A

12 mm x8

5 mm x1



753
FootPack

A

16 mm x8


5 mm x1

31464
M6x30 mm x4

50603
M8x40 mm x4

50786
x4

50229
6 mm x1





x1




x1


1 753 FootPack

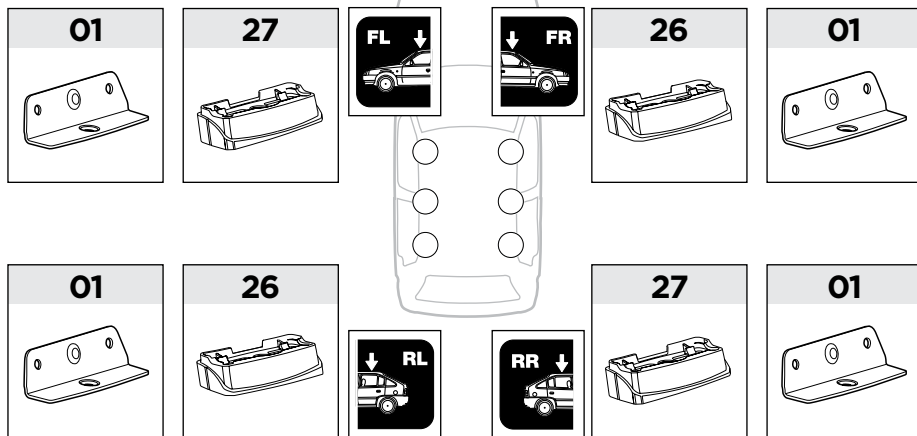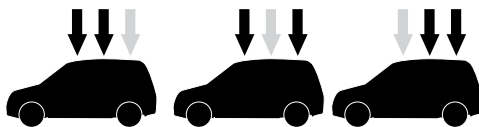

A

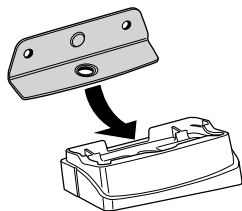

B

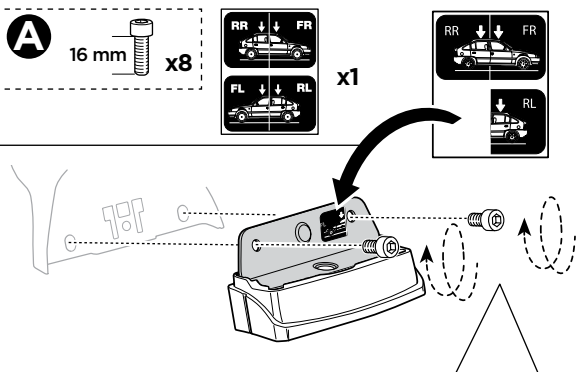

EN Only a few turns
DE Nur wenige Umdrehungen
FR Quelques tours uniquement
NL Slechts enkele slagen
IT Solo qualche giro
ES Sólo algunas vueltas
PT Noções básicas
SV Endast några varv
DK Kun nogle få omgange
NE Bare noen få omdreininger
FI Vain muutama kierros

ET Ainult mõni pööre
LV Tikai dažī apgriezieni
LT Tik keli pasukimai
PL Wystarczy kilka obrotów
RU Только несколько оборотов
UK Лише декілька обертів
BG Само няколко завъртания
CS Pouze několik otáček
SK Len niekoľko otáčok
SL Le nekaj obratov
HR/BIH Samo nekoliko okreta



RO Doar câteva rotiri
HU Csak néhány fordítás
EL Μόνο λίγες περιστροφές
TR Yalnızca birkaç tur

AR بعض دورات فقط
HE רק מספר סיבובים
ZH 仅几圈
JA 2～3回転のみ
KO 몇 번만 돌리면 됨
TH เพียงสองสามรอบ


1




RENAULT Kangoo Maxi

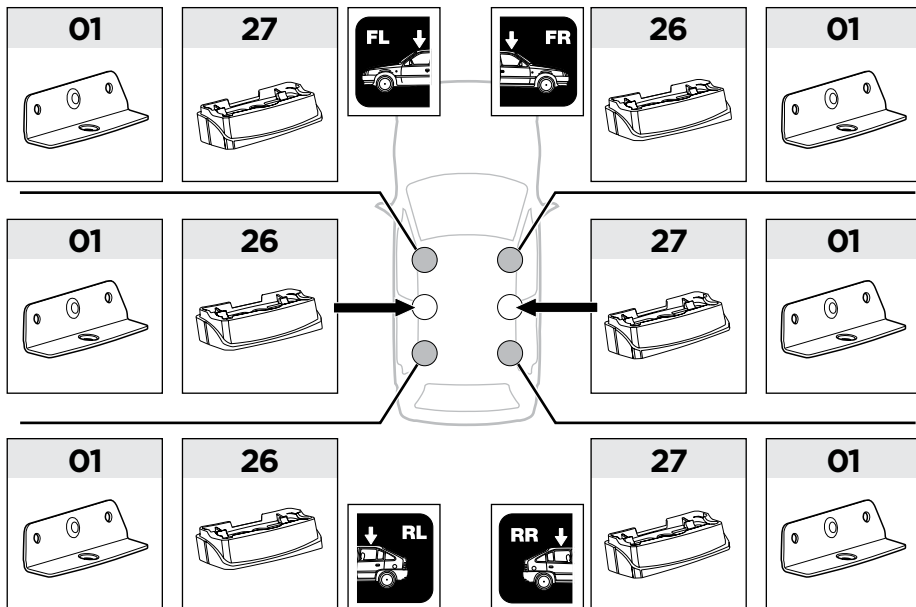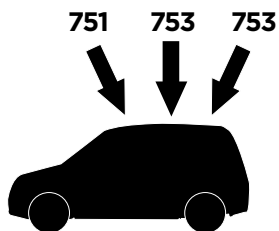

A

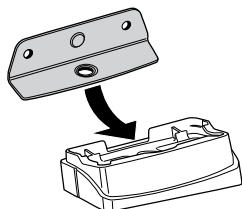









B

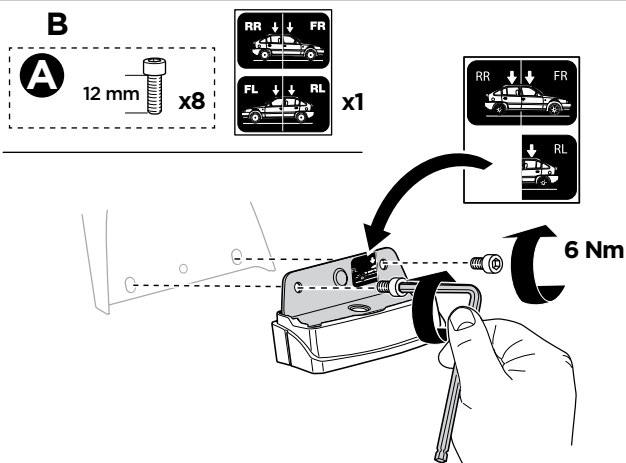

1**751**
FootPack**753**
FootPack

DACIA Dokker


751 753 751

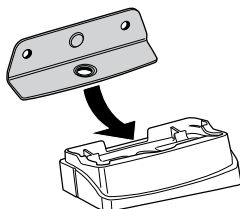**01****27****26****01****01****26****27****01****01****26****27****01****A****B****A**



12 mm x8





x8




x1

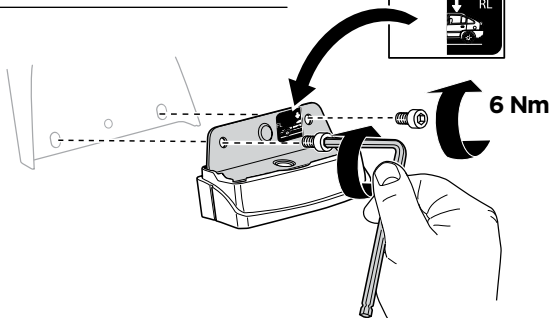


2 751 FootPack




A DACIA Dokker RENAULT Kangoo Maxi

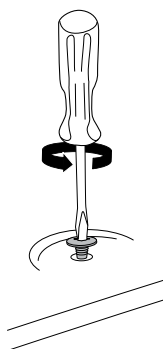



B

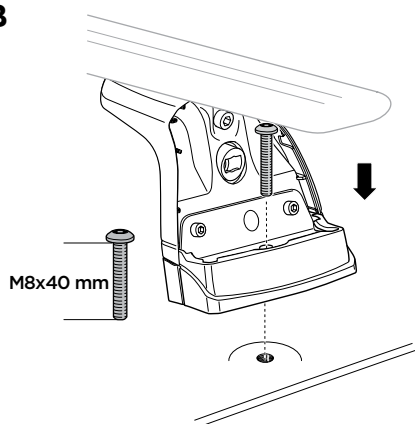






C

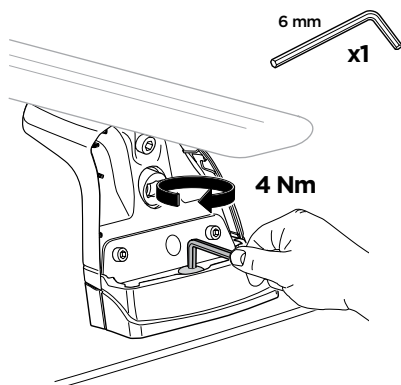


D

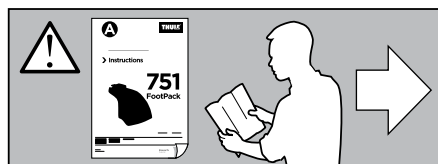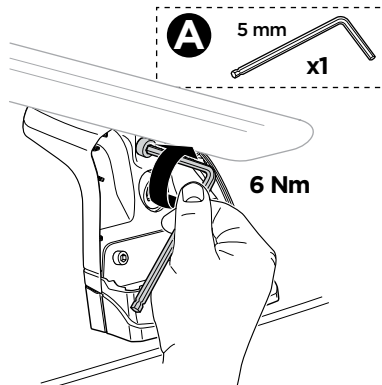

2 753 FootPack

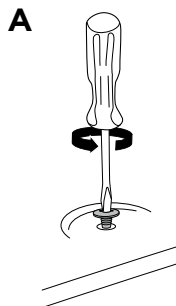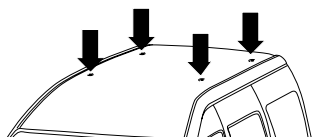


B FIAT Doblo, FIAT Doblo Maxi

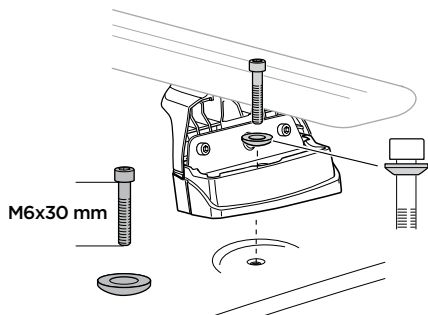


DACIA Dokker FORD Tourneo Connect FORD Transit Connect MERCEDES Citan



NISSAN Kubistar RENAULT Kangoo RENAULT Kangoo Maxi

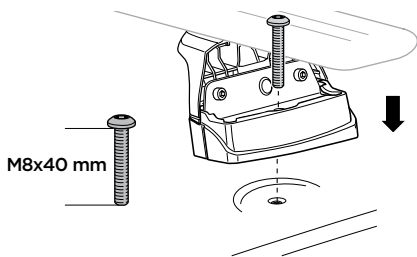

C FIAT



DACIA FORD MERCEDES NISSAN RENAULT

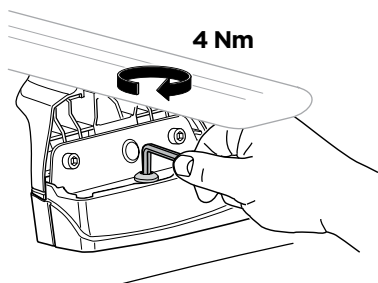

D

