

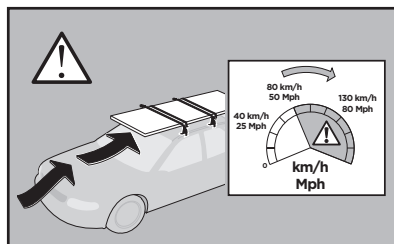
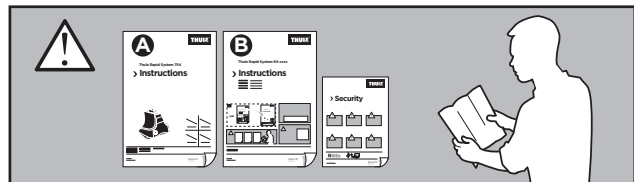


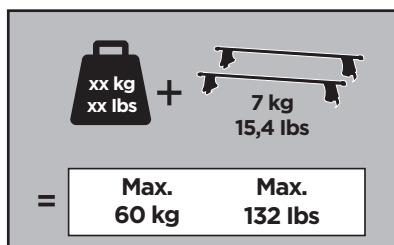

Thule Rapid System Kit 1778

> Instructions

VOLKSWAGEN Passat (B8), 4-dr Sedan, 15-

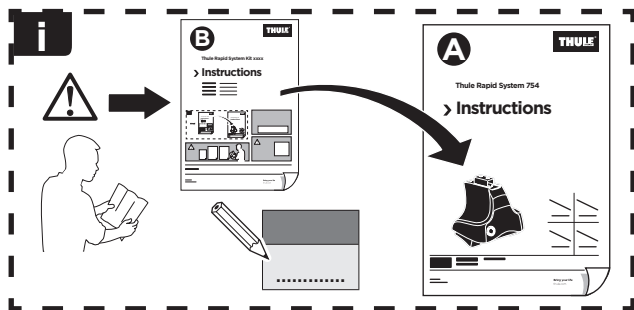


ISO 11154-E

141778
C.20150304
519-1778-01


Bring your life
thule.com




204 x1




206 x1



450 x2



1270 x4



x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
VOLKSWAGEN Passat (B8), 4-dr Sedan, 15-	44,5	1096	43 1/8

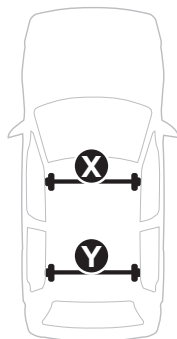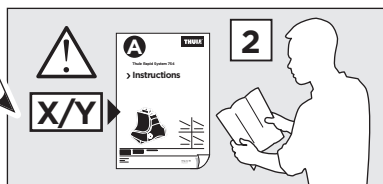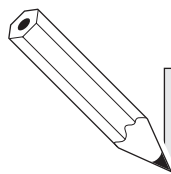



	Y (scale)	Y (mm)	Y (inch)
VOLKSWAGEN Passat (B8), 4-dr Sedan, 15-	41	1061	41 3/4

2

VOLKSWAGEN Passat (B8), 4-dr Sedan, 15-

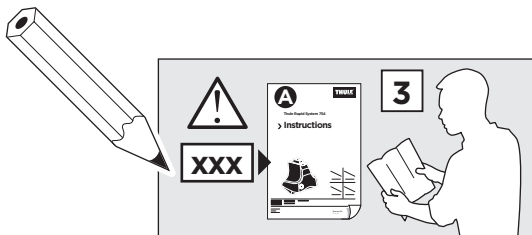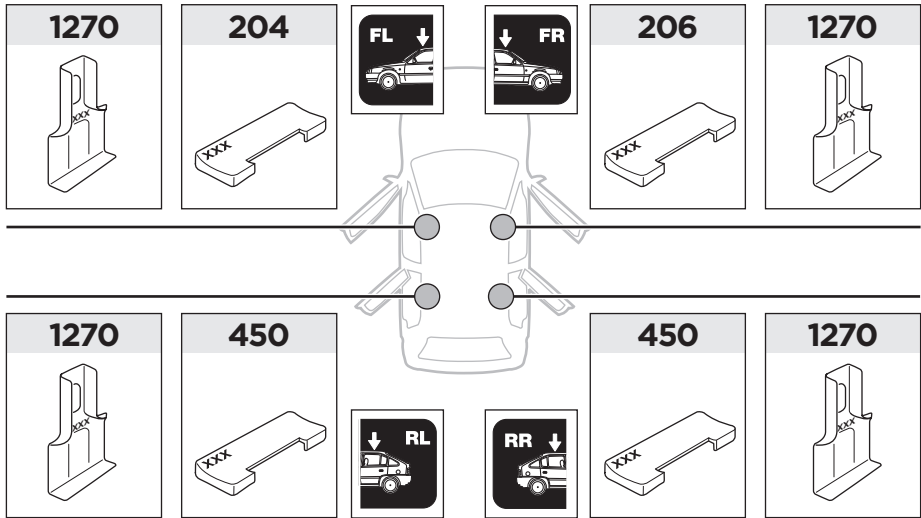

3

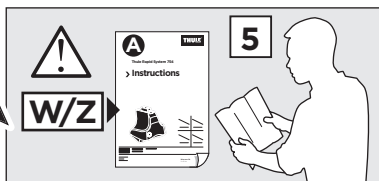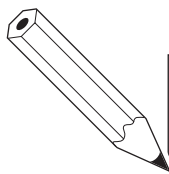

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLKSWAGEN Passat (B8), 4-dr Sedan, 15-	160	780	6 1/4	30 3/4

