

1









Kit 187009

VW California T5 & T6, 4-dr Bus, 03-15 / 15-
 VW Caravelle T5 & T6, 4-dr Bus, 03-15 / 15-
 VW Multivan T5 & T6, 4-dr Bus, 03-15 / 15-
 VW Transporter T5 & T6, 4-dr Van, 03-15 / 15-
 VW Shuttle T5 & T6, 4-dr Bus, 03-15 / 15-




ISO 11154-E


This kit is only for vehicles with T-Profile.

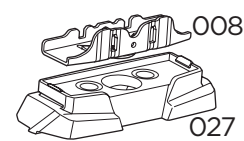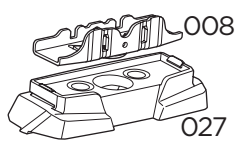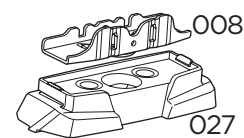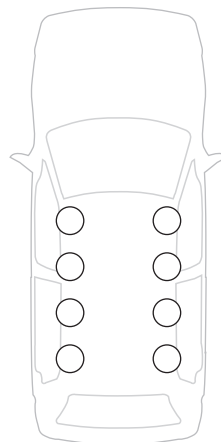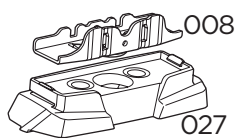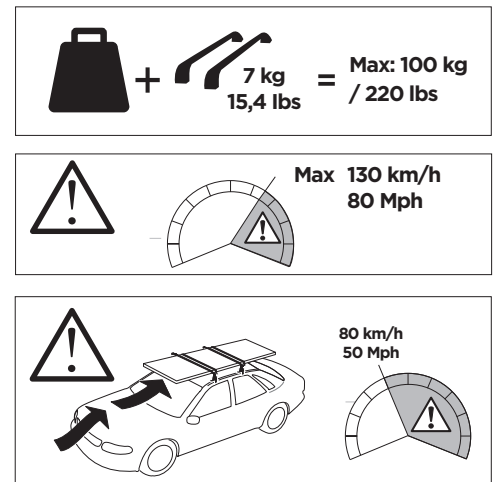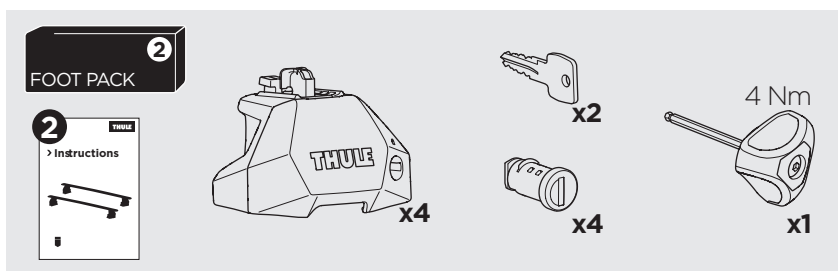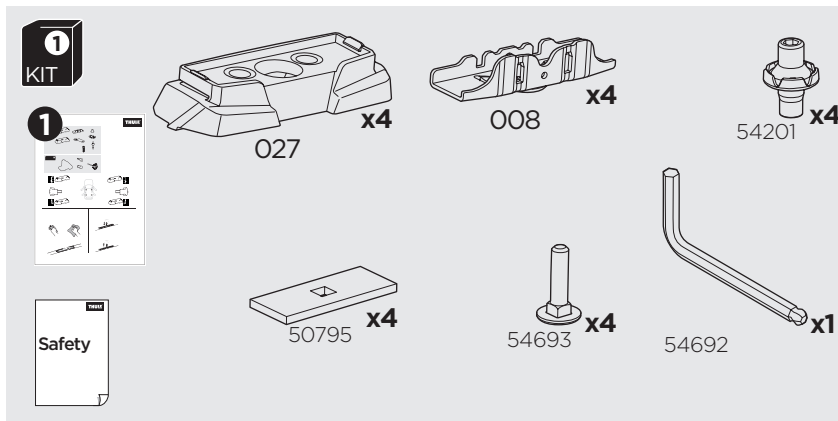


1

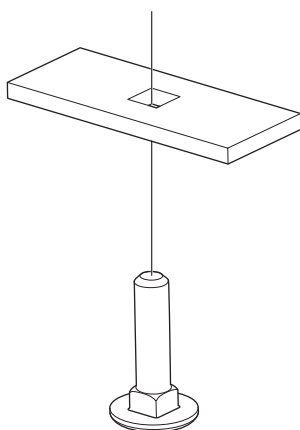


2

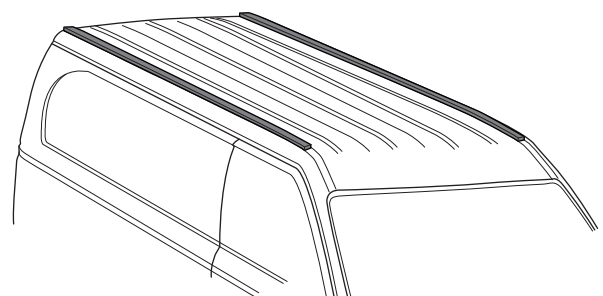


3

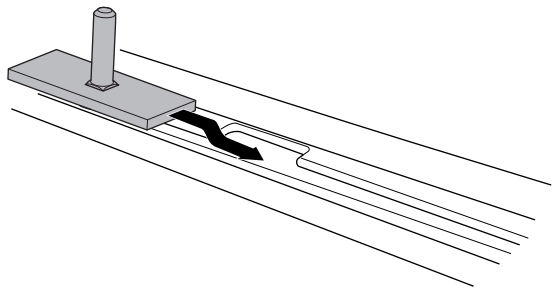


4

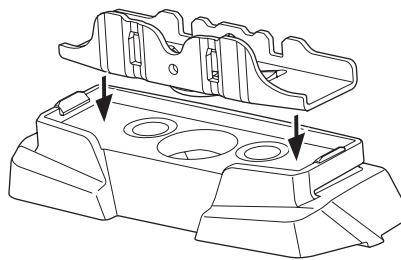


5

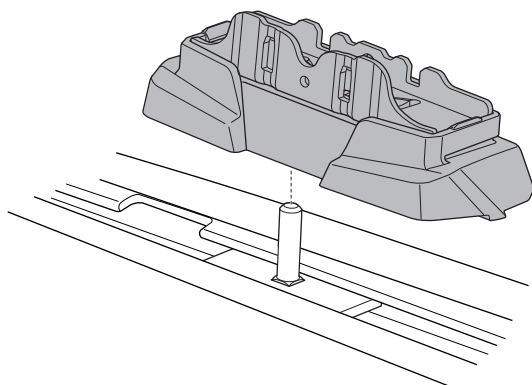


6

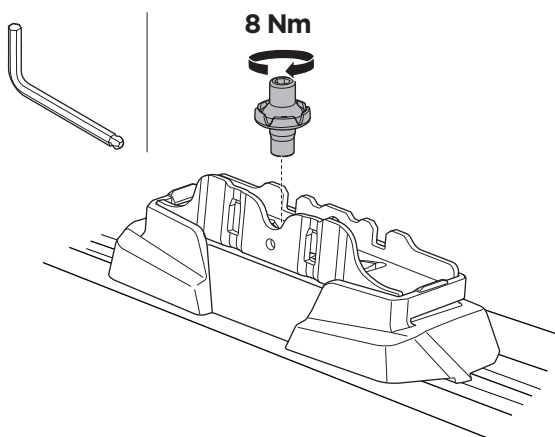

7

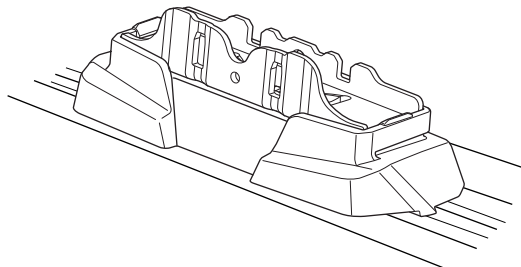

A

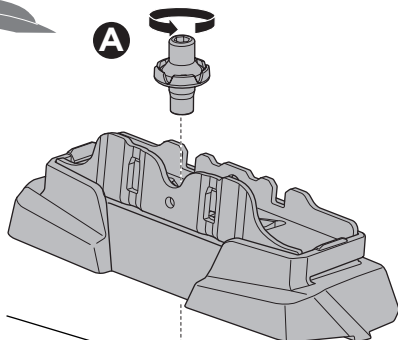

B

