



INSTALLATION INSTRUCTIONS

PSB-2112 PLASMA DISPLAY MOUNTING BRACKET

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

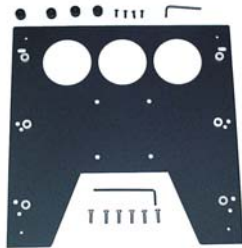


Figure 1

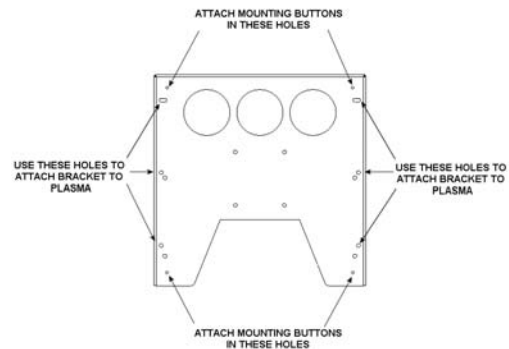


Figure 2

- (1) Plasma Static Mount Bracket
- (4) Mounting Buttons
- (6) M6 x 20 mm Button Head Cap Screws
- (6) Nylon Spacers .625 OD X .33 ID X .25

- (1) M4 Allen Key
- (4) 10-24 Button head Cap Screws
- (1) 1/8" Allen Key

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

CAUTION! PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

1. Using a 10-24 button head cap screw inserted from back side of bracket, secure mounting button, with chamfered hole of mounting button (larger surface) facing bracket, to bracket outside corners (four places) resulting in a 14" square pattern (see Figure 2, Figure 3, and Figure 4).
2. Place Nylon spacer over mounting holes (see Figure 2 & Figure 5).
3. Place mounting bracket on spacers and attach using the M6 screws (see Figure 5 & Figure 6).
4. With the aid of another person, lift Plasma Display up to the Chief Mount, aligning buttons of mounting brackets with slots in the Chief Mount.
5. Lower safety catch on the Chief Mount to secure Plasma Display, making sure catch is completely engaged.

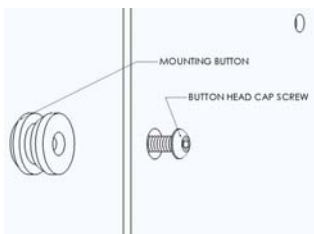


Figure 3



Figure 4

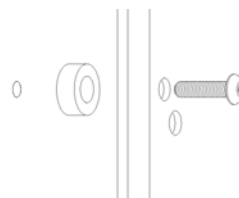


Figure 5

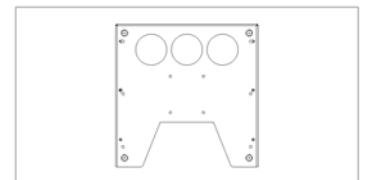


Figure 6