

WALL MOUNT PATCH PANEL QUICK START GUIDE


Thank you for purchasing this INTELLINET NETWORK SOLUTIONS™ Wall Mount Patch Panel.

Follow the steps on this quick start guide for easy installation and use of either the Cat5e or Cat6 version of this product.




12-port
Cat5e
UTP
model
shown

IDC (3 options)



3 6 5 4 3 6 5 4

1 2 7 8 1 2 7 8



110D
type



3 6 5 4 3 6 5 4

1 2 7 8 1 2 7 8



Krone
type




3 6 5 4 3 6 5 4


1 2 7 8 1 2 7 8



110D & Krone
IDC compatible

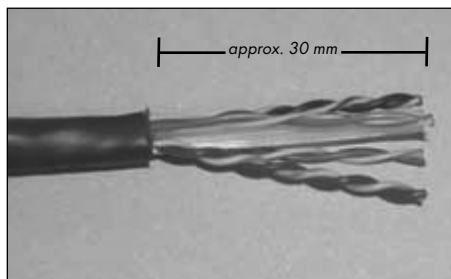

approx. 30 mm

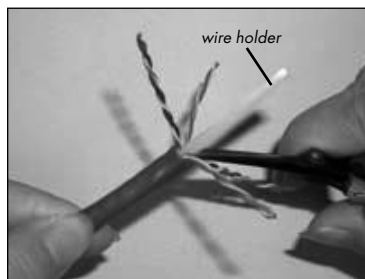

wire holder

1. Carefully strip away approximately 30 mm of the cable jacket(s) (above left) to be connected to the Patch Panel, separating the wires into four pairs. Using a wire cutter, cut the wire holder (above right) flush with the cable jacket.

T568A

PIN 5 WHITE/BLUE
PIN 4 BLUE
PIN 1 WHITE/GREEN
PIN 2 GREEN
PIN 3 WHITE/ORANGE
PIN 6 ORANGE
PIN 7 WHITE/BROWN
PIN 8 BROWN

T568B

PIN 5 WHITE/BLUE
PIN 4 BLUE
PIN 1 WHITE/ORANGE
PIN 2 ORANGE
PIN 3 WHITE/GREEN
PIN 6 GREEN
PIN 7 WHITE/BROWN
PIN 8 BROWN



2. Follow the IDC color-code chart above to position the wires, then use a Krone punch-down tool to crimp and connect them.



www.intellinet-network.com

Are you completely satisfied with this product?
Please contact your
INTELLINET NETWORK SOLUTIONS™
dealer with comments or questions.

Copyright © INTELLINET NETWORK SOLUTIONS
All products mentioned are trademarks or registered trademarks
of their respective owners.