

Installation Guide



www.newstar.eu

LCD MONITOR DESK MOUNT




Model:
FPMA-D900SP

To mount your flat panel monitor or any parts at an ergonomically correct position, start at step 1 and continue as directed.

Part Check-List

01

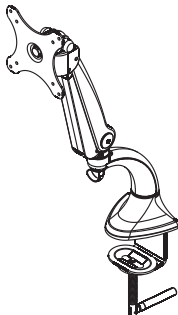

X1


Fitting / Tools Check-List

02



X1

03



X1


04



X4


Step 1

Desk thickness from 15mm~60mm. Then fix the clamp on the desk.

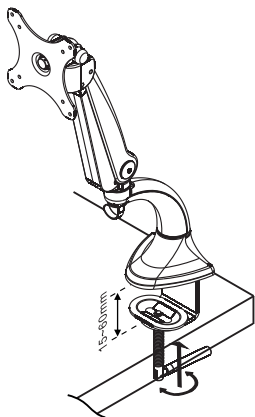


Step 2

Secure the arm to the rear of the LCD panel with four screws. And then tighten them up with screwdriver(not provided).

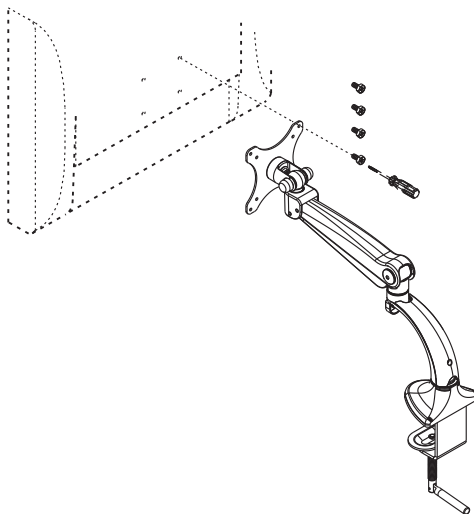

Step 3

Cable management arrange cable as illustrated.

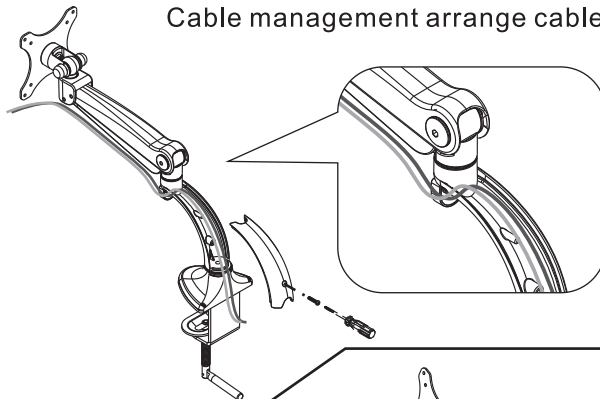


Adjustment:

Use the allen key provided to adjust the weight capacity from 2.5 to 5 kg.


Adjustment:

Be sure to adjust the weight in a vertical position as illustrated. Twist the allen key in a clockwise direction for more weight; counterclockwise direction for less weight.

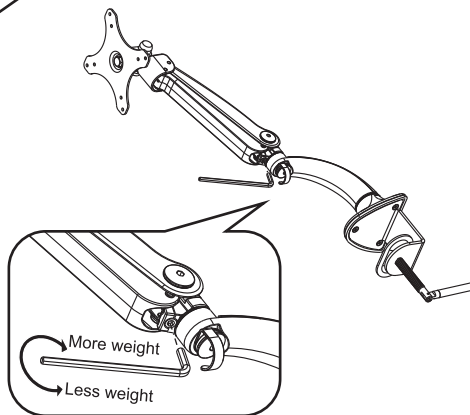

When mount the monitors with different weights on the arm, you may find that the tension of the universal joint needs to be adjusted in order to move the monitor position easily. Please see adjustment as follows.

- Remove the plastic universal joint covers.
- Find the nylon nut (not the screw head) and use the included wrench to adjust the tension.
- Use one hand to support the monitor and adjust the tension of the universal joint.
 - ☐ Clockwise : more tension
 - ☐ Counterclockwise : less tension
- When the desired tension is achieved, replace the two plastic covers.

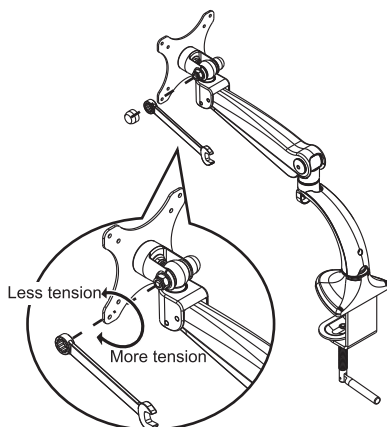

Installation Guide

NEWSTAR
computer products

www.newstar.eu

LCD MONITOR DESK MOUNT



All Rights Reserved
Unauthorized Copying and Reproduction are prohibited