




Installation and Assembly: Universal Tablet Mount

Models: PTM200

Max Load Capacity:
5 lbs (2.2 kg)

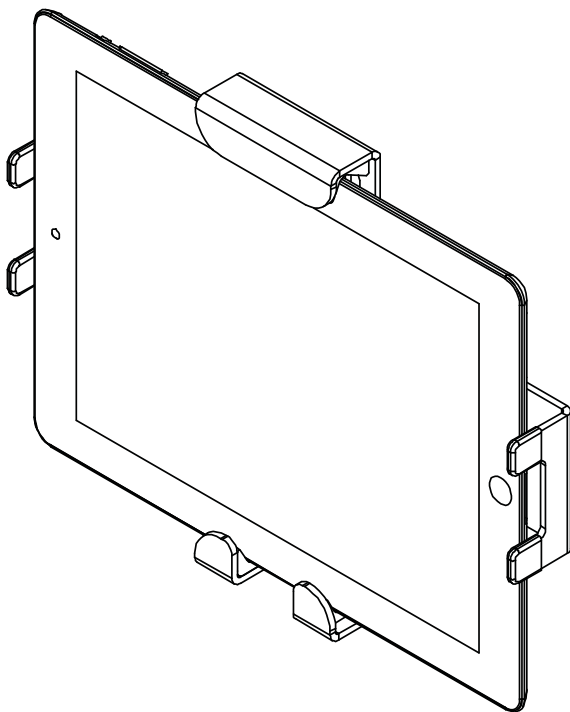

Features:

- Adjustable height and width allows mount to fit virtually any tablet
- Quick and easy installation onto any 75 x 75 mm VESA® Mount
- Theft resistant security kit available
- Sleek hardware covers for a finished look
- Holds virtually any 7.68" - 13.75" tablet

NOTE: Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Do not begin to install your Peerless product until you have read and understood the instructions and warnings contained in this Installation Sheet. If you have any questions regarding any of the instructions or warnings, for US customers please call Peerless customer care at 1-800-865-2112, for all international customers, please contact your local distributor.
- This product should only be installed by someone of good mechanical aptitude, has experience with basic building construction, and fully understands these instructions.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- Never exceed the Maximum Load Capacity. See page one.
- Always use an assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not overtighten. Overtightening can damage the items, greatly reducing their holding power.
- This product is intended for indoor use only. Use of this product outdoors could lead to product failure and personal injury.

Tools Needed for Assembly

Accessories

- phillips screwdriver
- ACC954 (security fasteners kit)

Table of Contents


Parts List.....	3
Cradle Assembly.....	4-5
Attaching Cradle Assembly to Mount.....	6

Before you begin, make sure all parts shown are included with your product.


Parts List	
Description	Black Qty. Part #
A main plate	1 021-1045
B side clamp	2 021-1052
C top clamp	1 021-1054
D bottom clamp	1 021-1069
E plastic cover	2 590-1347
F washer	7 540-2003
G M5 x 8mm self tapping phillips screw	11 520-1167
H 1/4" spacer	3 600-1215
I M5 x 20mm phillips screw	4 510-1208
J adhesive foam pad	4 570-0045
K 1/2" spacer	4 540-1057

Parts may appear slightly different than illustrated.


A

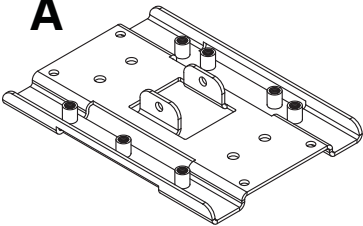


B

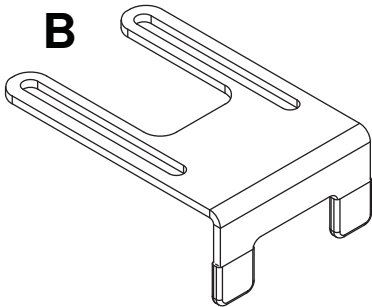


C

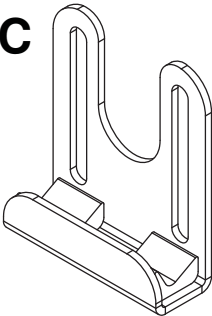

D

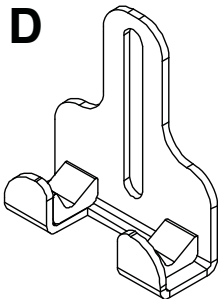

E

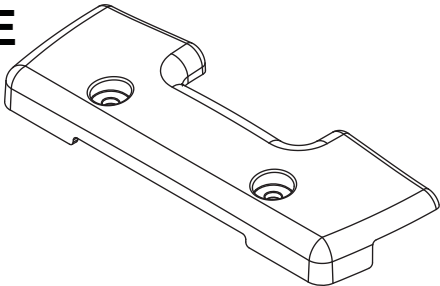


F




G




H




I



J





K




1

Fit top clamp (C) and bottom clamp (D) into main plate (A) and over pins as shown in figures 1.1 and 1.2.

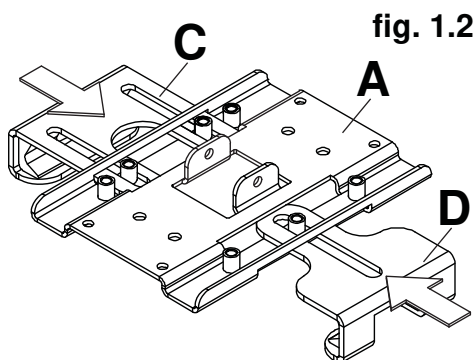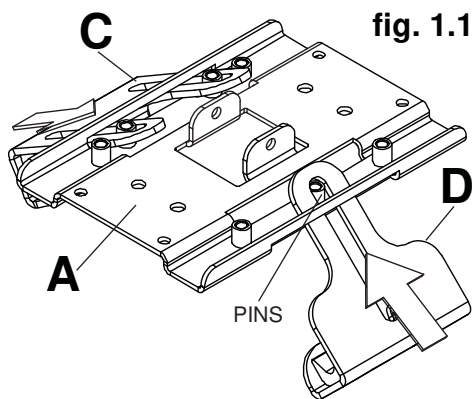**2**


Secure with three 1/4" spacers (H), three M5 washers (F), and three M5 x 8 mm screws (G). Do not tighten screws.

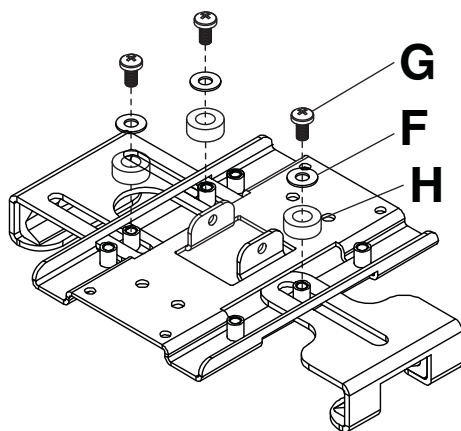

3


Secure two side clamps (**B**) to back of main plate (**A**) with four M5 washers (**F**) and four M5 x 8 mm self tapping phillips screws (**G**).

Do not tighten screws.

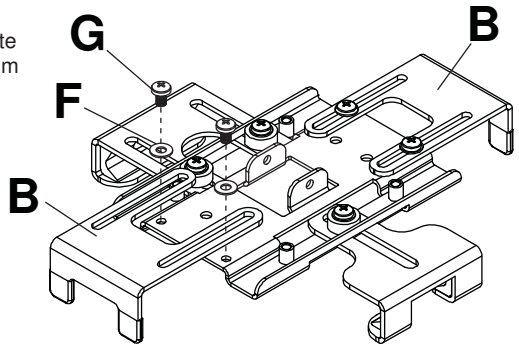


4

Apply four adhesive foam pads (**J**) to front of main plate (**A**) as shown.

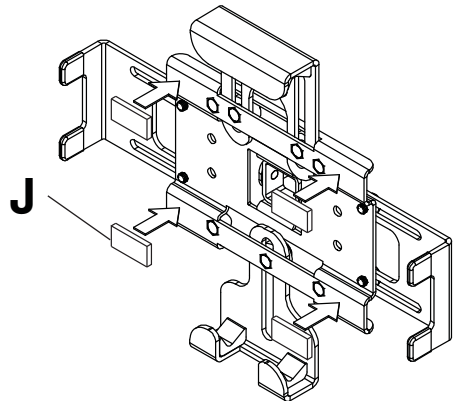

5


To prevent scratching the tablet, set a cloth on a flat, level surface. Place tablet face side down, adjust clamps around tablet, then tighten all seven screws.

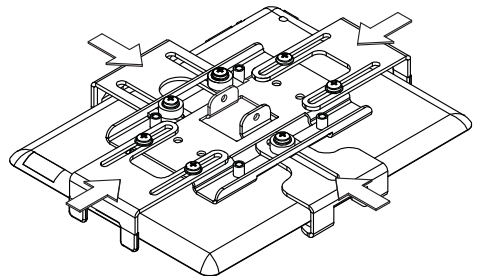

6

Tablet mount can be attached to any VESA 75 x 75mm pattern mounting plate (sold separately) with four M5 x 20 mm screws (I), four 1/2" spacers (K), and two plastic covers (E).

Refer to accompanying instructions with VESA mounting plate to install to supporting surface.

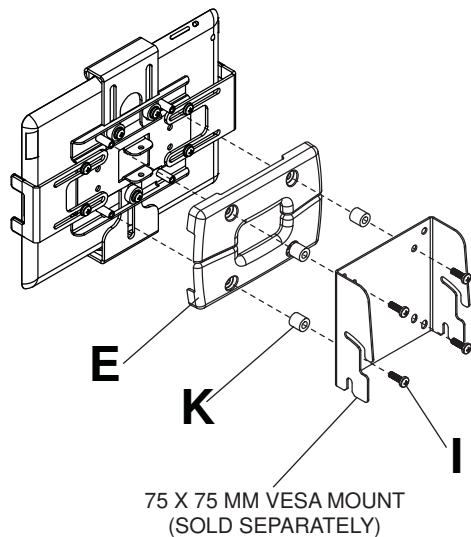

THIS PAGE INTENTIONALLY LEFT BLANK

LIMITED FIVE-YEAR WARRANTY

Peerless Industries, Inc. ("Peerless") warrants to original end-users of Peerless® products will be free from defects in material and workmanship, under normal use, for a period of five years from the date of purchase by the original end-user (but in no case longer than six years after the date of the product's manufacture).

At its option, Peerless will repair or replace, or refund the purchase price of, any product which fails to conform with this warranty.

In no event shall the duration of any implied warranty of merchantability or fitness for a particular purpose be longer than the period of the applicable express warranty set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty does not cover damage caused by (a) service or repairs by the customer or a person who is not authorized for such service or repairs by Peerless, (b) the failure to utilize proper packing when returning the product, (c) incorrect installation or the failure to follow Peerless' instructions or warnings when installing, using or storing the product, or (d) misuse or accident, in transit or otherwise, including in cases of third party actions and force majeure.

In no event shall Peerless be liable for incidental or consequential damages or damages arising from the theft of any product, whether or not secured by a security device which may be included with the Peerless® product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty is in lieu of all other warranties, expressed or implied, and is the sole remedy with respect to product defects. No dealer, distributor, installer or other person is authorized to modify or extend this Limited Warranty or impose any obligation on Peerless in connection with the sale of any Peerless® product.

This warranty gives specific legal rights, and you may also have other rights which vary from state to state.


www.peerless-av.com

© 2012 Peerless Industries, Inc.