

Dell OptiPlex 9030 All-In-One Owner's Manual

Regulatory Model: W09C
Regulatory Type: W09C001



Notes, Cautions, and Warnings



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2014 Dell Inc. All rights reserved. This product is protected by U.S. and international copyright and intellectual property laws. Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2014 - 06

Rev. A00

Contents

1 Working on Your Computer.....	5
Before Working Inside Your Computer.....	5
Recommended Tools.....	6
Turning Off Your Computer.....	7
After Working Inside Your Computer.....	7
Important Information.....	8
2 Removing and Installing Components.....	9
System Overview.....	9
Removing the VESA Stand.....	10
Installing the VESA Stand.....	11
Removing the Back Cover.....	11
Installing the Back Cover.....	12
Removing the Memory.....	12
Installing the Memory.....	13
Removing the VESA Mount Bracket.....	13
Installing the VESA Mount Bracket.....	14
Removing the Power and On-Screen Display (OSD) Buttons Board.....	14
Installing the Power and OSD Buttons Board.....	15
Removing the System-Board Shield.....	15
Installing the System-Board Shield.....	16
Removing the Converter Board.....	16
Installing the Converter Board.....	17
Removing the Coin-Cell Battery.....	18
Installing the Coin-Cell Battery.....	18
Removing the Optical Drive.....	18
Installing the Optical Drive.....	20
Removing the Hard Drive.....	20
Installing the Hard Drive.....	21
Removing the Intrusion Switch.....	22
Installing the Intrusion Switch.....	23
Removing the Wireless Local Area Network (WLAN) Card.....	23
Installing the WLAN Card.....	24
Removing the Heatsink Assembly.....	24
Installing the Heatsink Assembly.....	24
Removing the Processor Fan.....	25
Installing the Processor Fan.....	26
Removing the Power-Supply Fan.....	26

Installing the Power-Supply Fan.....	27
Removing the I/O Board Shield.....	28
Installing the I/O Board Shield.....	29
Removing the Power Supply Unit (PSU).....	29
Installing the Power Supply Unit.....	30
Removing the Processor.....	31
Installing the Processor.....	31
Removing the Speakers.....	32
Installing the Speakers.....	33
Removing the System Board.....	34
System Board Layout.....	35
Installing the System Board.....	36
Removing the Display Panel.....	37
Installing the Display Panel.....	39
Removing the Camera.....	40
Installing the Camera.....	41
3 System Setup.....	42
Boot Sequence.....	42
Navigation Keys.....	42
System Setup Options.....	43
Updating the BIOS	53
System and Setup Password.....	54
Assigning a System Password and Setup Password.....	54
Deleting or Changing an Existing System and/or Setup Password.....	55
4 Technical Specifications.....	56
5 Contacting Dell.....	61

Working on Your Computer

Before Working Inside Your Computer

Use the following safety guidelines to help protect your computer from potential damage and to help to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that the following conditions exist:

- You have read the safety information that shipped with your computer.
- A component can be replaced or--if purchased separately--installed by performing the removal procedure in reverse order.

 **WARNING:** Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the power source.

 **WARNING:** Before working inside your computer, read the safety information that shipped with your computer. For additional safety best practices information, see the Regulatory Compliance Homepage at www.dell.com/regulatory_compliance

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

 **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface, such as a connector on the back of the computer.

 **CAUTION:** Handle components and cards with care. Do not touch the components or contacts on a card. Hold a card by its edges or by its metal mounting bracket. Hold a component such as a processor by its edges, not by its pins.

 **CAUTION:** When you disconnect a cable, pull on its connector or on its pull-tab, not on the cable itself. Some cables have connectors with locking tabs; if you are disconnecting this type of cable, press in on the locking tabs before you disconnect the cable. As you pull connectors apart, keep them evenly aligned to avoid bending any connector pins. Also, before you connect a cable, ensure that both connectors are correctly oriented and aligned.

 **NOTE:** The color of your computer and certain components may appear differently than shown in this document.

To avoid damaging your computer, perform the following steps before you begin working inside the computer.

1. Ensure that your work surface is flat and clean to prevent the computer cover from being scratched.
2. Turn off your computer (see Turning Off Your Computer).

 **CAUTION: To disconnect a network cable, first unplug the cable from your computer and then unplug the cable from the network device.**

3. Disconnect all network cables from the computer.
4. Disconnect your computer and all attached devices from their electrical outlets.
5. Press and hold the power button while the computer is unplugged to ground the system board.
6. Remove the cover.

 **CAUTION: Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.**

Recommended Tools

The procedures in this document may require the following tools:

- Small flat-blade screwdriver
- Phillips screwdriver
- Small plastic scribe

Turning Off Your Computer

 **CAUTION:** To avoid losing data, save and close all open files and exit all open programs before you turn off your computer.

1. Shut down the operating system:

- In Windows 8.1:
 - Using a touch-enabled device:
 - a. Swipe in from the right edge of the screen, opening the Charms menu and select **Settings**.
 - b. Select the  and then select **Shut down**.
 - Using a mouse:
 - a. Point to upper-right corner of the screen and click **Settings**.
 - b. Click the  and select **Shut down**.

- In Windows 7:

1. Click **Start** .
2. Click **Shut Down**.

or

1. Click **Start** .
2. Click the arrow in the lower-right corner of the **Start** menu as shown below, and then click



Shut Down

2. Ensure that the computer and all attached devices are turned off. If your computer and attached devices did not automatically turn off when you shut down your operating system, press and hold the power button for about 6 seconds to turn them off.

After Working Inside Your Computer

After you complete any replacement procedure, ensure you connect any external devices, cards, and cables before turning on your computer.

1. Replace the cover.

 **CAUTION:** To connect a network cable, first plug the cable into the network device and then plug it into the computer.

2. Connect any telephone or network cables to your computer.
3. Connect your computer and all attached devices to their electrical outlets.
4. Turn on your computer.
5. If required, verify that the computer works correctly by running the Dell Diagnostics.

Important Information



NOTE: Avoid using the touchscreen in dusty, hot, or humid environments.



NOTE: Sudden change in temperature may cause condensation on the inner surface of the glass screen, which will disappear after a short time and does not affect normal usage.

Removing and Installing Components

This section provides detailed information on how to remove or install the components from your computer.

System Overview

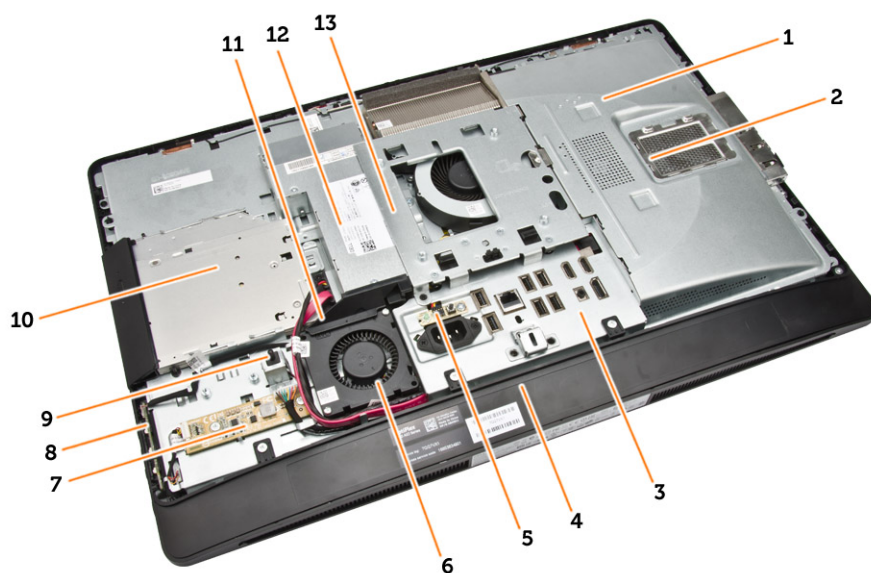


Figure 1. Inside View – 1

1. system board shield
2. memory shield
3. I/O board shield
4. speaker cover
5. power-supply diagnostic board
6. power-supply fan
7. converter board
8. power and on-screen display (OSD) buttons board
9. intrusion switch
10. optical drive
11. power-supply fan bracket
12. power-supply unit
13. VESA mount bracket

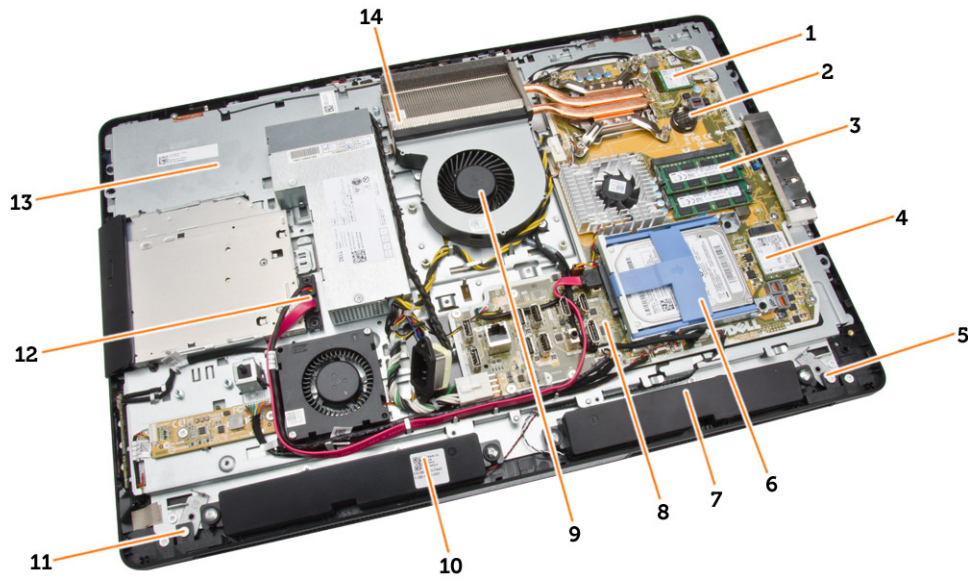



Figure 2. Inside View – 2

- | | |
|---------------------------|-------------------------|
| 1. processor | 2. coin-cell battery |
| 3. memory module | 4. WLAN card |
| 5. left side lock latch | 6. hard drive |
| 7. speaker | 8. system board |
| 9. processor fan | 10. speaker |
| 11. right side lock latch | 12. optical-drive cable |
| 13. display bracket | 14. heatsink assembly |

Removing the VESA Stand

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Place the computer on a flat surface, display side facing downwards.

3. Press the button on the VESA cover to release the stand.

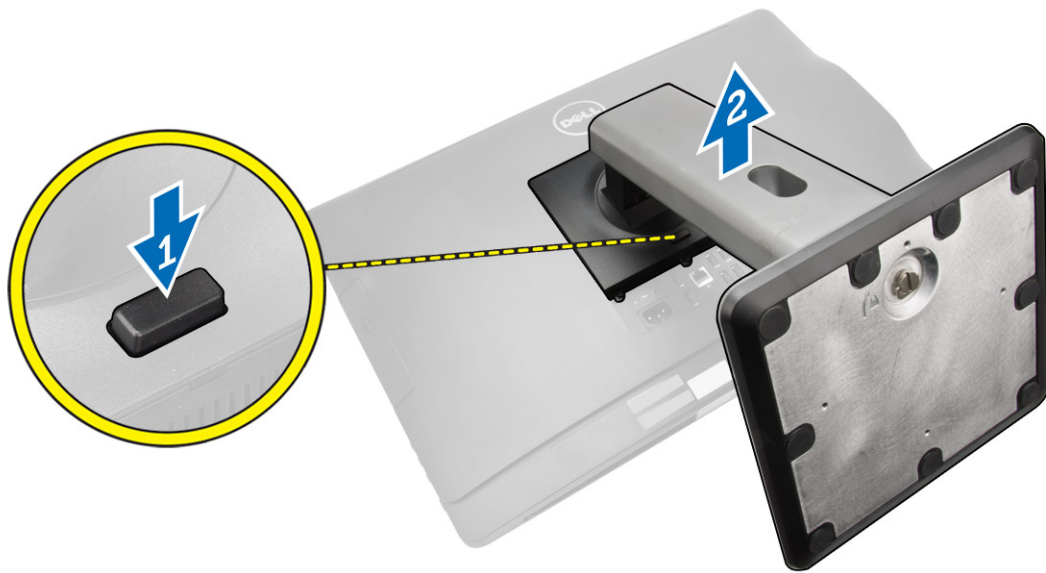

4. Lift the VESA stand upwards and away from the back cover.


Installing the VESA Stand

1. Align and place the VESA stand on the back of the computer.
2. Place and press the VESA cover on the computer, until it clicks into place.
3. Follow the procedures in *After Working Inside Your Computer*.

Removing the Back Cover

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the VESA stand.

3. Release the latches on two sides that secure the back cover to the computer. Lift the back cover upwards and remove it from the computer.

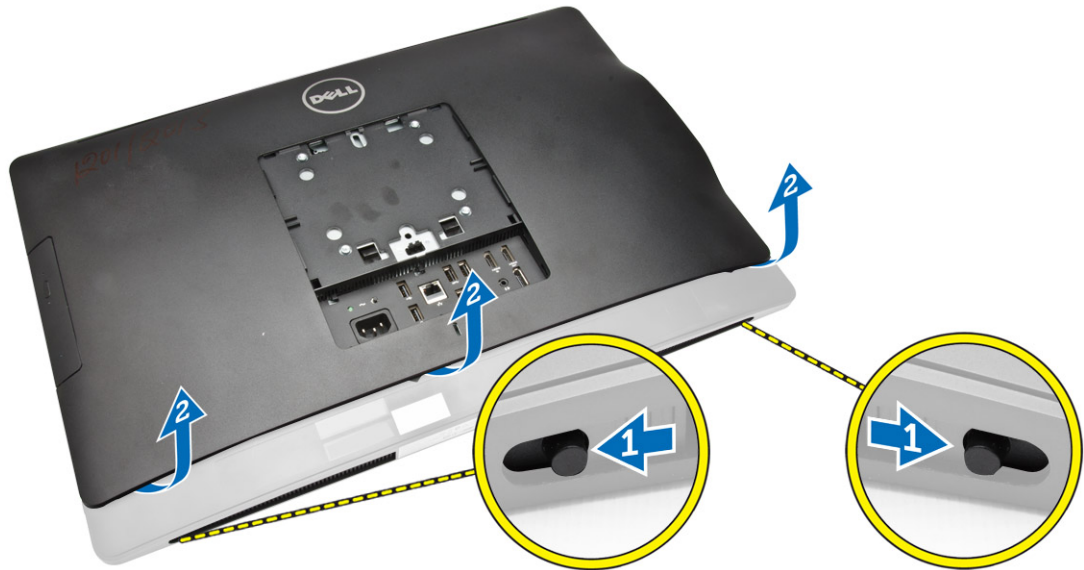


Installing the Back Cover

1. Align the back cover to its original position on the computer.
2. Hold locks on both sides to secure the back cover to the computer.
3. Install the VESA stand.
4. Follow the procedures in *After Working Inside Your Computer*.


Removing the Memory

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover

3. Lift the memory shield outwards.

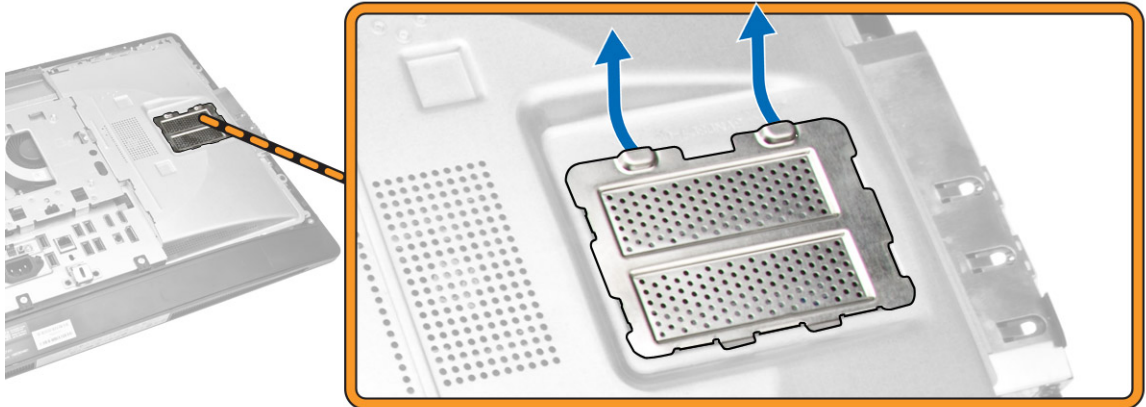

4. Pry the retention clips away from the memory module until it pops-up. Lift and remove the memory module from its connector.

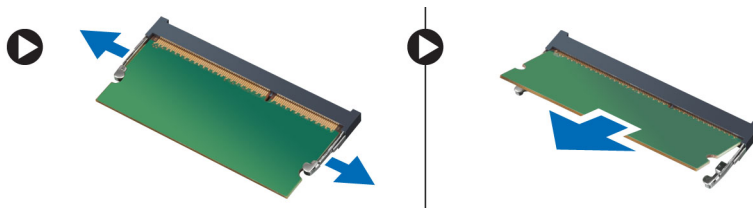


Installing the Memory

1. Align the notch on the memory-card with the tab in the system-board connector.
2. Press down on the memory module until the release tabs spring back to secure them in place.
3. Place the memory shield back into its place.
4. Install the:
 - a. back cover
 - b. VESA stand
5. Follow the procedures in *After Working Inside Your Computer*.

Removing the VESA Mount Bracket

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover

3. Remove the screws that secure the VESA mount bracket to the computer. Lift the bracket away from the computer.

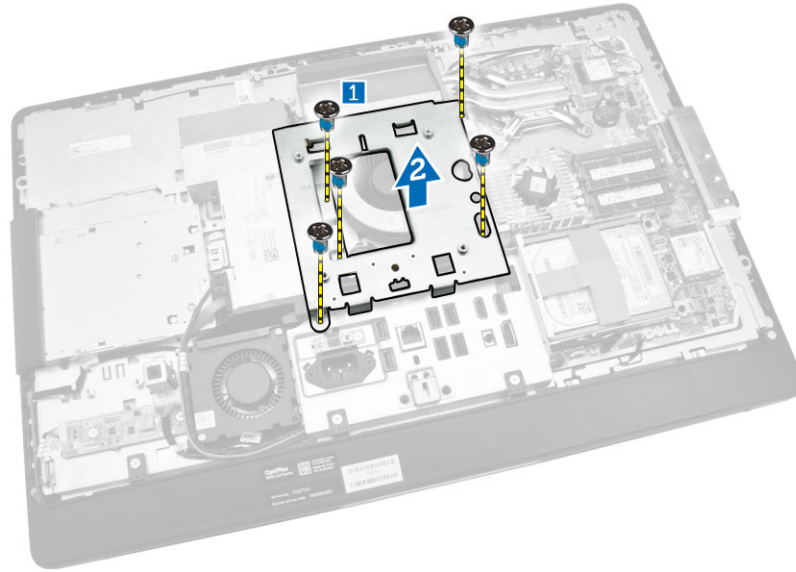


Installing the VESA Mount Bracket

1. Align and place the bracket on the back of the computer.
2. Tighten the screws that secure the VESA mount bracket to the computer.
3. Install the:
 - a. back cover
 - b. VESA stand
4. Follow the procedures in *After Working Inside Your Computer*.

Removing the Power and On-Screen Display (OSD) Buttons Board

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover

3. Perform the following steps as shown in the illustration:
 - a. Remove the tape that secures the power and OSD buttons board to the computer [1].
 - b. Lift the power and OSD buttons board from the chassis [2].
 - c. Disconnect the cable from the power and OSD buttons board to remove it from the computer [3].

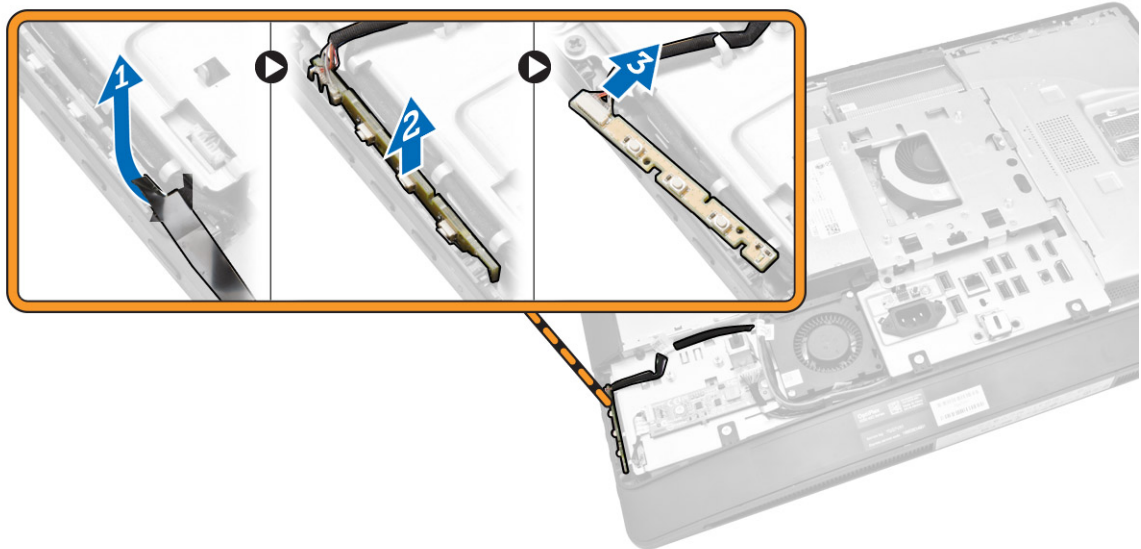


Installing the Power and OSD Buttons Board

1. Insert the power and OSD buttons board into its slot and fix the tape to secure it.
2. Connect the cable to the power and OSD buttons board.
3. Install:
 - a. back cover
 - b. VESA stand
4. Follow the procedures in *After Working Inside Your Computer*.

Removing the System-Board Shield

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover

3. Perform the following steps as shown in the illustration:
 - a. Press the securing tab down to release the system-board shield from the slots on the chassis [1].
 - b. Slide the system-board shield and lift it away from the computer [2].

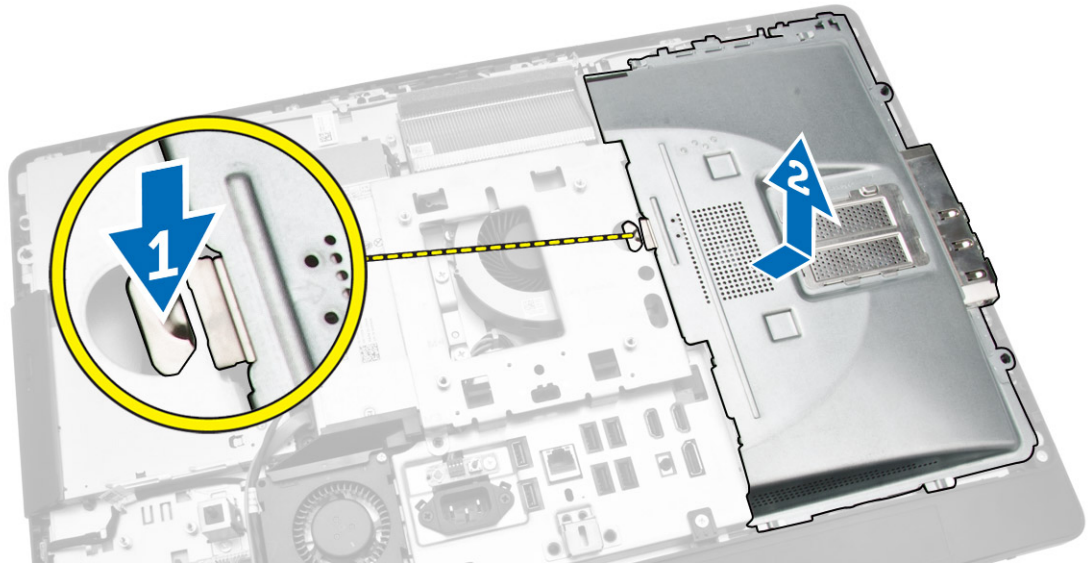


Installing the System-Board Shield

1. Align and place the system-board shield on the back of the computer.
2. Tighten the screws that secure the system-board shield to the computer.
3. Install the:
 - a. VESA mount bracket
 - b. back cover
 - c. VESA stand
4. Follow the procedures in *After Working Inside Your Computer*.


Removing the Converter Board

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover

3. Disconnect the cables from the converter board.

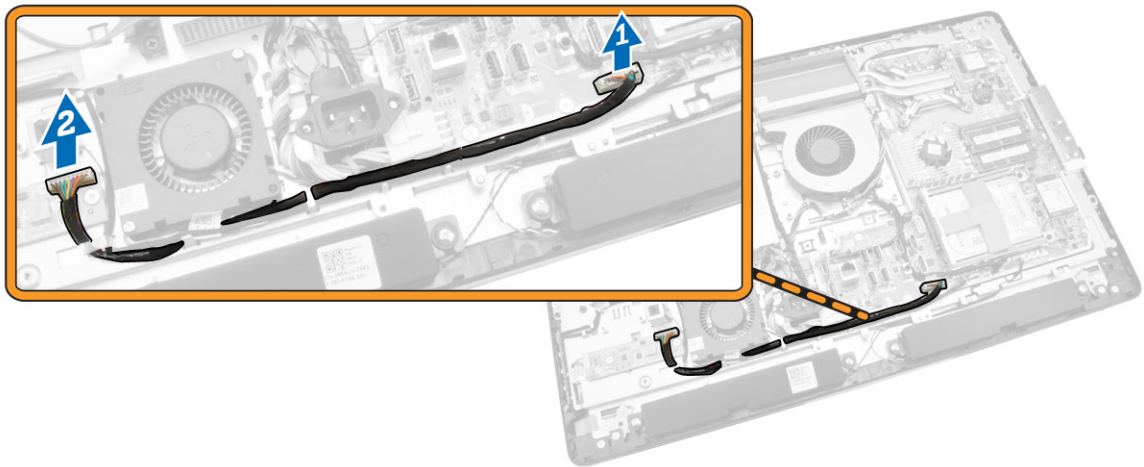

4. Perform the following steps as shown in the illustration:
 - a. Disconnect the display-backlight cable from the connectors on the converter board [1].
 - b. Disconnect the converter-board cable from the connectors on the converter board [2].
 - c. Remove the screws that secure the converter board to the computer [3].
 - d. Lift the converter board away from the computer [4].

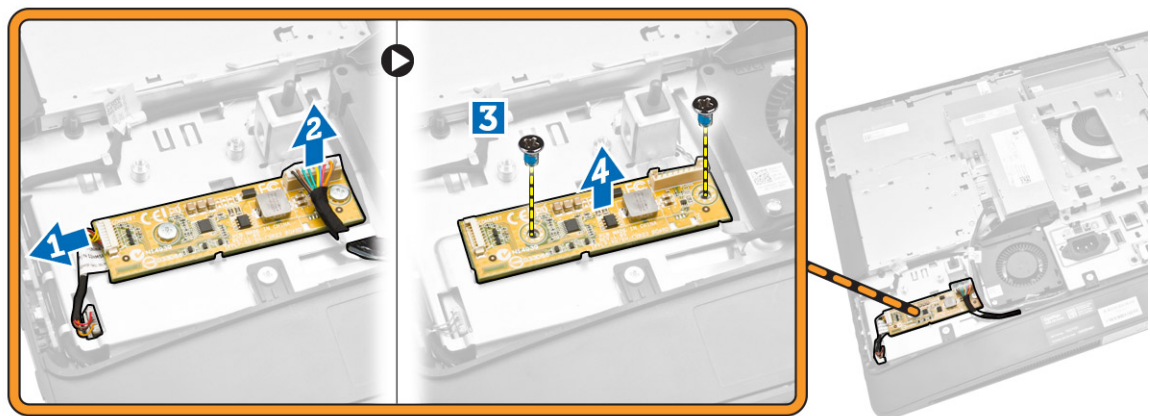


Installing the Converter Board

1. Place the converter board into its place.
2. Tighten the screws to secure the converter board to the computer.
3. Connect the converter-board cable and display-backlight cable to the connectors on the converter board.
4. Install the:
 - a. back cover
 - b. VESA stand
5. Follow the procedures in *After Working Inside Your Computer*.

Removing the Coin-Cell Battery

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. system-board shield
3. Press the release latch away from the battery. The battery pops-out from the socket; lift the coin-cell battery out of the computer.

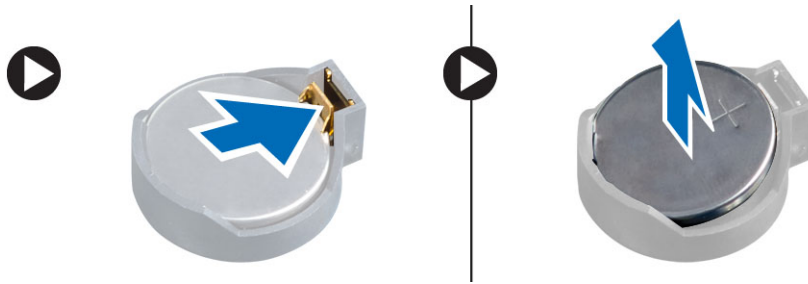


Installing the Coin-Cell Battery

1. Place the coin-cell battery into its slot on the system board.
2. Press the coin-cell battery downward until the release latch springs back into place and secures it.
3. Install:
 - a. system-board shield
 - b. base cover
 - c. VESA stand
4. Follow the procedures in *After Working Inside Your Computer*.


Removing the Optical Drive

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover


3. Perform the following steps as shown in the illustration:
- Press the securing tab down to release the optical drive [1].
 - Slide the optical drive outward to remove it from the computer [2].

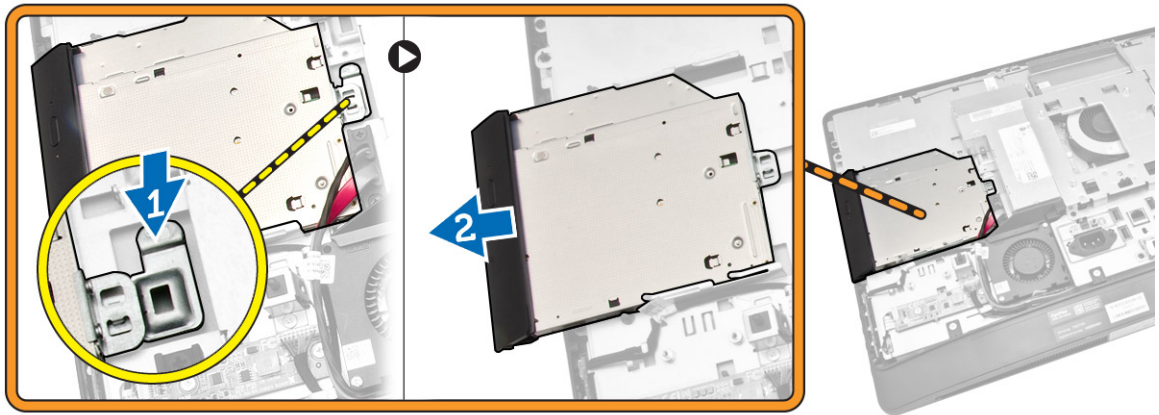

4. Perform the following steps as shown in the illustration:
- Disconnect the optical-drive cables from the connector on the system board [1] [2].
 - Unthread the cable from the notches of the computer [3].

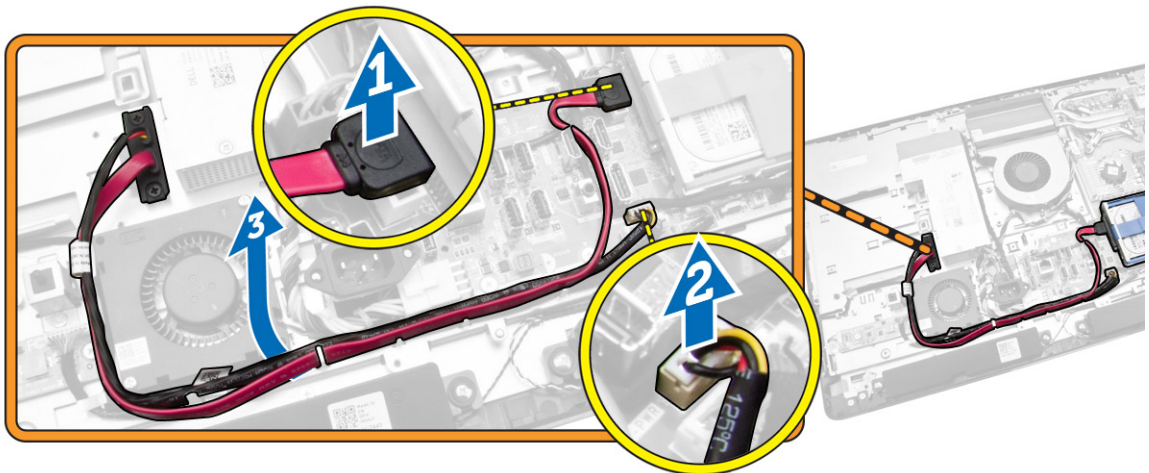

5. Remove the screws that secure the optical-drive cable to the system and unthread the cables from the notches.

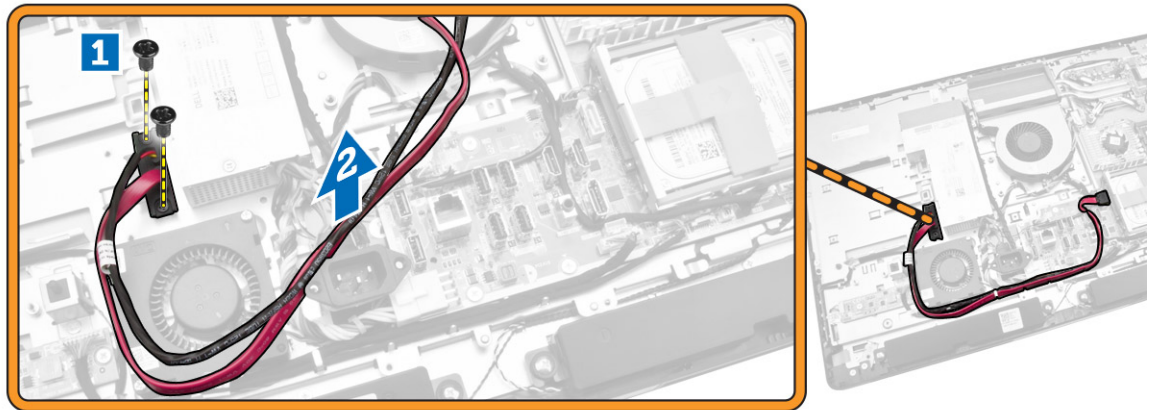


Installing the Optical Drive

1. Align and slide the optical drive into its slot.
2. Connect the optical-drive cable.
3. Lock and secure the optical drive to the computer.
4. Install the:
 - a. back cover
 - b. VESA stand
5. Follow the procedures in *After Working Inside Your Computer*.


Removing the Hard Drive

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
3. Unthread the cables from the notches on the hard-drive bracket. Disconnect the hard-drive cables from the hard drive.

4. Perform the following steps as shown in the illustration:
 - a. Press down on the hard-drive bracket [1].
 - b. Slide the hard-drive assembly to release it from the hard-drive cage [2].
 - c. Lift the hard-drive assembly away from the computer [3].

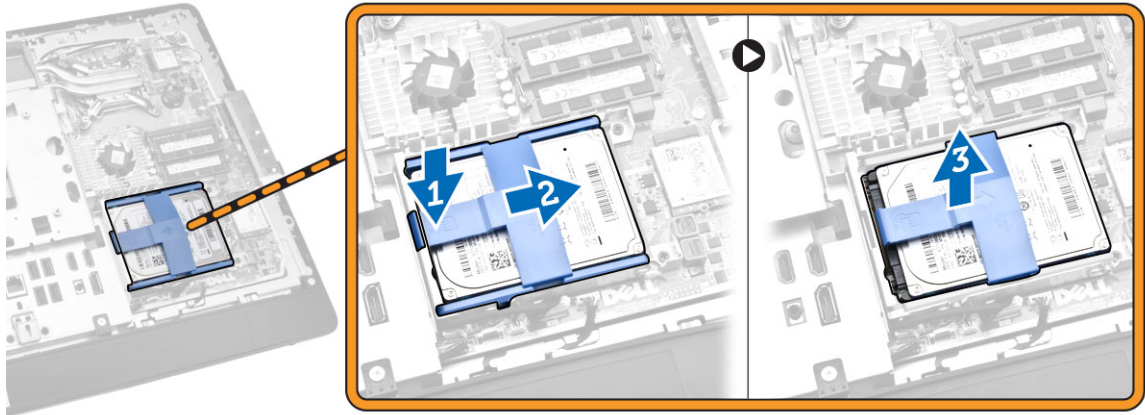

5. Perform the following steps as shown in the illustration:
 - a. Remove the screws that secure the hard-drive cage to the computer [1].
 - b. Lift the hard-drive cage away from the computer [2].

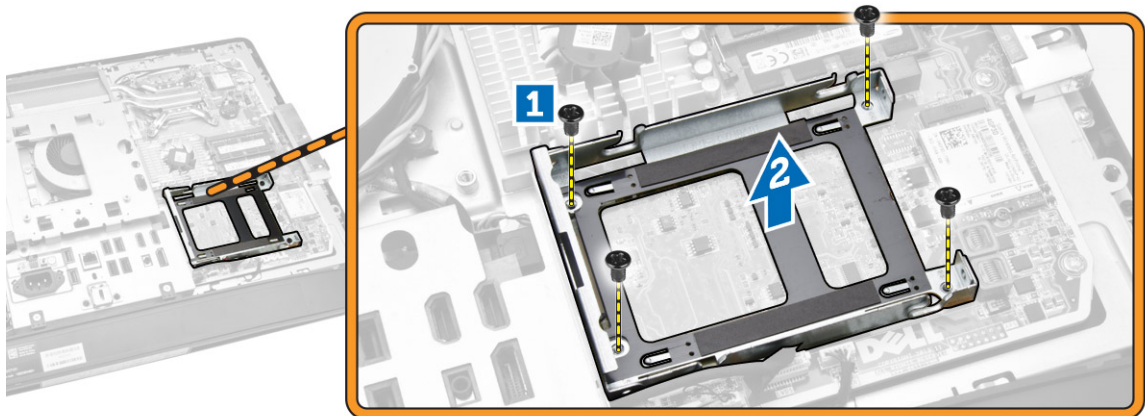


Installing the Hard Drive

1. For a 3.5-inch hard drive, slide the hard drive into the hard-drive bracket.
2. For a 2.5-inch hard drive, tighten the screws that secure the hard-drive case to the hard drive. Slide the hard drive into the hard-drive bracket.
3. Align and place the hard-drive cage on the computer.
4. Tighten the screws that secure the hard-drive cage to the computer.
5. Align and place the hard-drive bracket on the hard-drive cage.
6. Connect the hard-drive cables to the hard drive. Thread the cables into the notches on the hard-drive bracket.


7. Install:
 - a. VESA mount bracket
 - b. back cover
 - c. VESA stand
8. Follow the procedures in *After Working Inside Your Computer*.

Removing the Intrusion Switch

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. system-board shield
3. Disconnect the intrusion-switch cable from the connector on the system board. Unthread the cable from the notches on the computer.

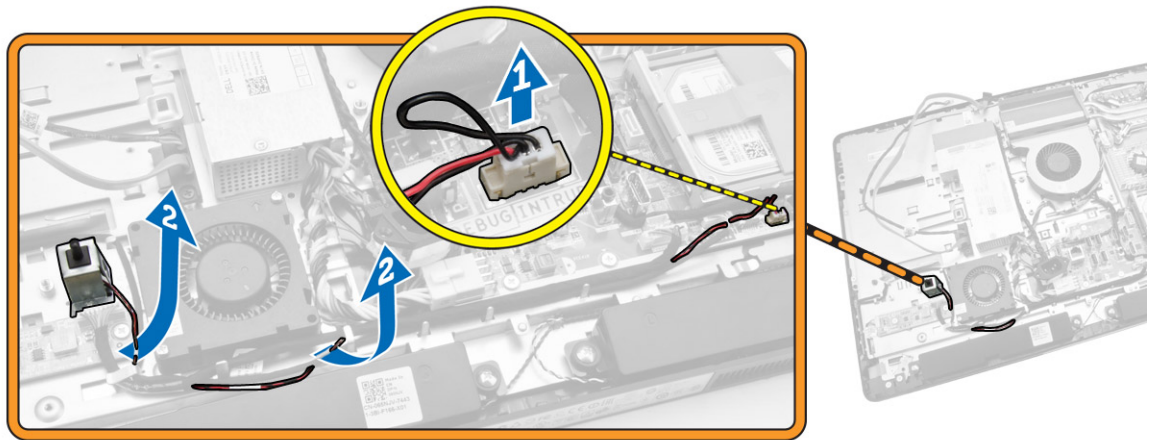

4. Remove the screws that secure the intrusion switch to the chassis. Lift the intrusion switch and remove it from the computer.

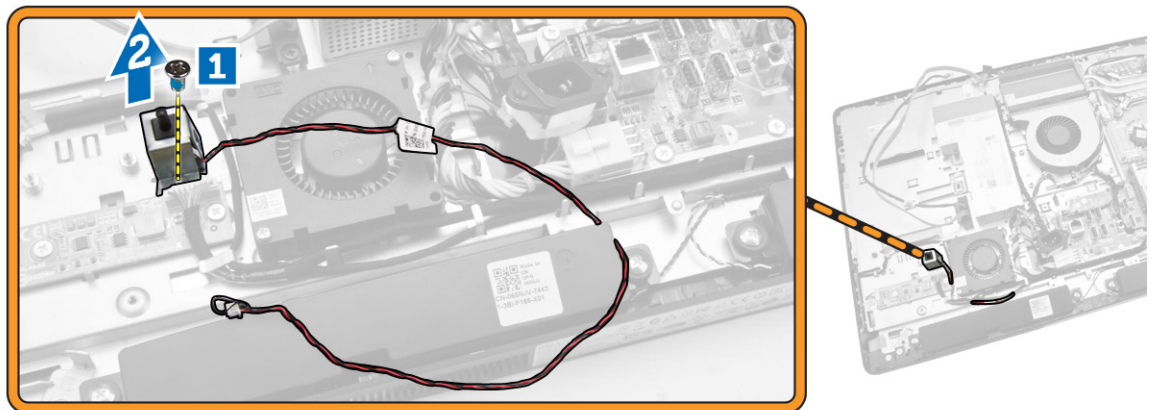


Installing the Intrusion Switch

1. Place the intrusion switch on the computer and tighten the screw to secure it to the chassis.
2. Thread the cable along the notches on the chassis and connect the intrusion-switch cable to the connector on the system board.
3. Install:
 - a. system-board shield
 - b. VESA mount bracket
 - c. back cover
 - d. VESA stand
4. Follow the procedures in *After Working Inside Your Computer*.

Removing the Wireless Local Area Network (WLAN) Card

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. system-board shield
3. Disconnect the WLAN cables. Remove the screws that secure the WLAN card to the system board. Remove the WLAN card from the connector.

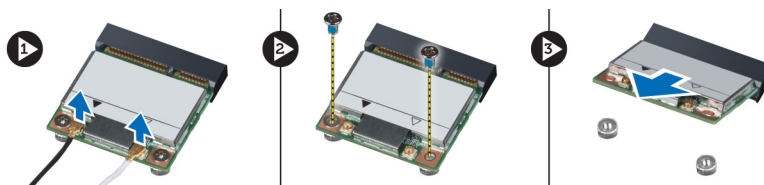


Installing the WLAN Card

1. Align and place the WLAN card on the connector.
2. Tighten the screws to secure the WLAN card to the system board.
3. Connect the WLAN cables.
4. Install:
 - a. system-board shield
 - b. VESA mount bracket
 - c. back cover
 - d. VESA stand
5. Follow the procedures in *After Working Inside Your Computer*.

Removing the Heatsink Assembly

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. system-board shield
3. Remove the screws that secure the heatsink module to the chassis. Lift the heatsink assembly up and remove it from the computer.

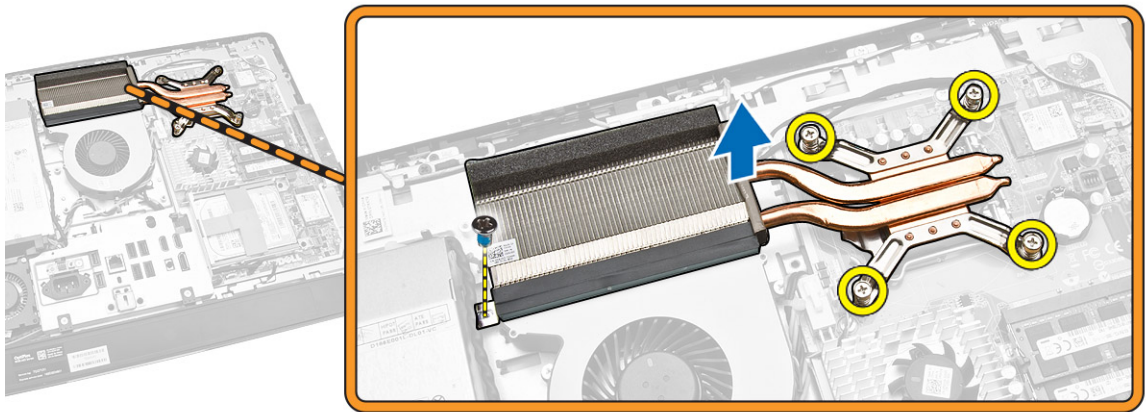


Installing the Heatsink Assembly

1. Align and place the heatsink assembly on the computer.
2. Tighten the screws that secure the heatsink assembly to the chassis.


3. Install:
 - a. system-board shield
 - b. VESA mount bracket
 - c. back cover
 - d. VESA stand
4. Follow the procedures in *After Working Inside Your Computer*.

Removing the Processor Fan

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. system-board shield
3. Perform the following steps as shown in the illustration:
 - a. Disconnect the power-supply cable from the connector on the system board [1][2].
 - b. Unthread the cable from the hooks in the computer [3].

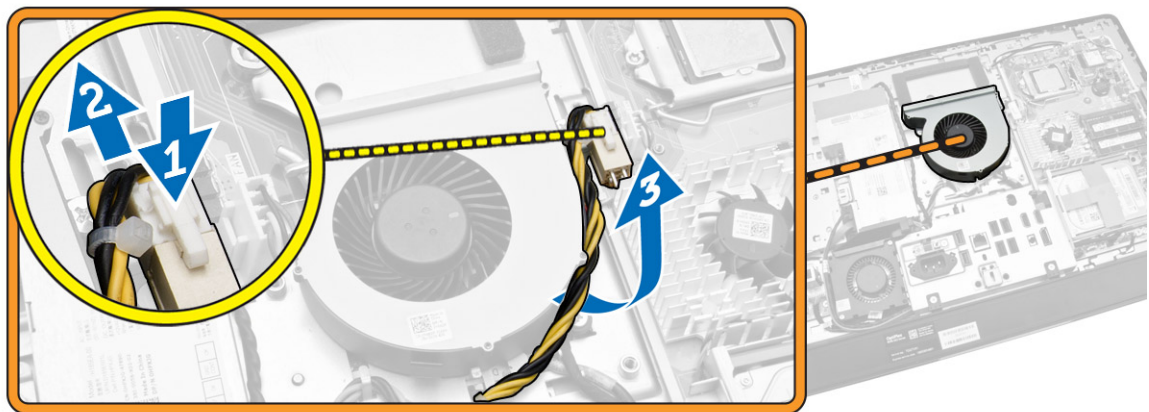

4. Perform the following steps as shown in the illustration:
 - a. Disconnect the processor-fan cable from the connector on the system board [1].
 - b. Remove the screws that secure the processor fan to the system board [2].
 - c. Lift the processor fan away from the computer [3].

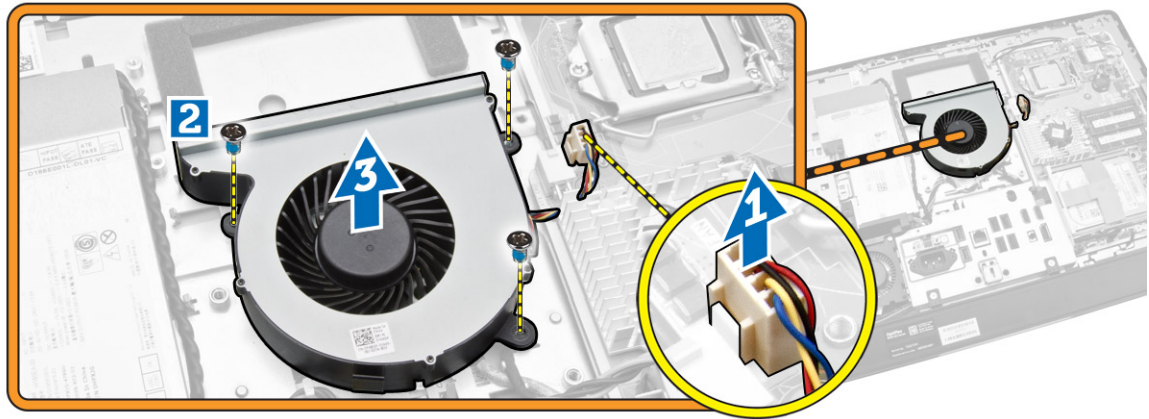


Installing the Processor Fan

1. Place the processor fan on the computer and tighten the screws to secure the processor fan to the system board.
2. Connect the processor-fan cable to the connector on the system board.
3. Connect the power-supply cable to the connector on the system board and thread the cable on the hooks in the computer.
4. Install:
 - a. system-board shield
 - b. VESA mount bracket
 - c. back cover
 - d. VESA stand
5. Follow the procedures in *After Working Inside Your Computer*.


Removing the Power-Supply Fan

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. system-board shield

3. Remove the screw that secures the fan duct to the chassis. Lift the fan bracket away from the computer.

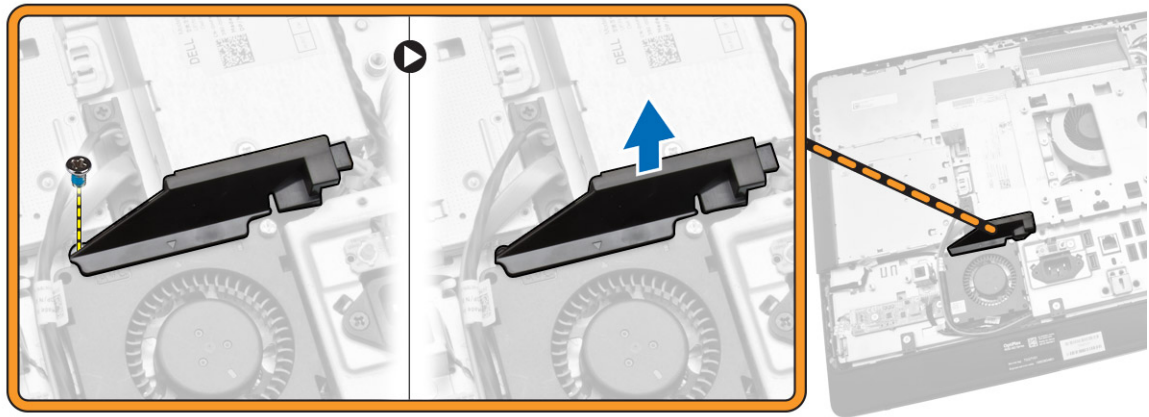

4. Perform the following steps as shown in the illustration:
 - a. Disconnect the power-supply fan cable from the connector on the system board [1].
 - b. Remove the screws that secure the power-supply fan to the chassis [2].
 - c. Lift the power-supply fan away from the computer [3].

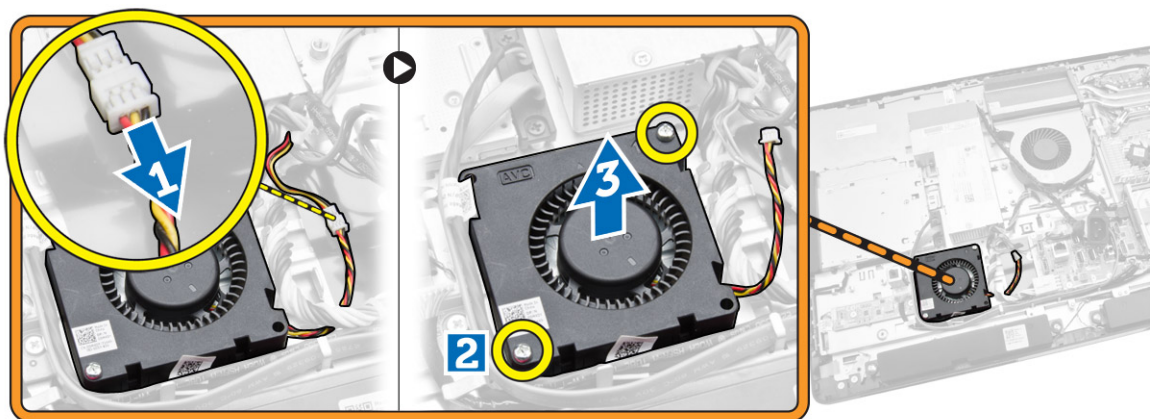


Installing the Power-Supply Fan


1. Place the power-supply fan on the computer and tighten the screws to secure it to the chassis.
2. Align and place the fan duct from the computer.
3. Tighten the screw that secures the fan duct to the chassis.
4. Install:
 - a. system-board shield
 - b. VESA mount bracket
 - c. back cover
 - d. VESA stand
5. Follow the procedures in *After Working Inside Your Computer*.

Removing the I/O Board Shield


1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. power supply fan
 - e. system-board shield
 - f. speaker cover
3. Remove the screws that secure the power-button board to the I/O board shield. Disconnect the cable from the power-button board and take it away from the I/O board shield.

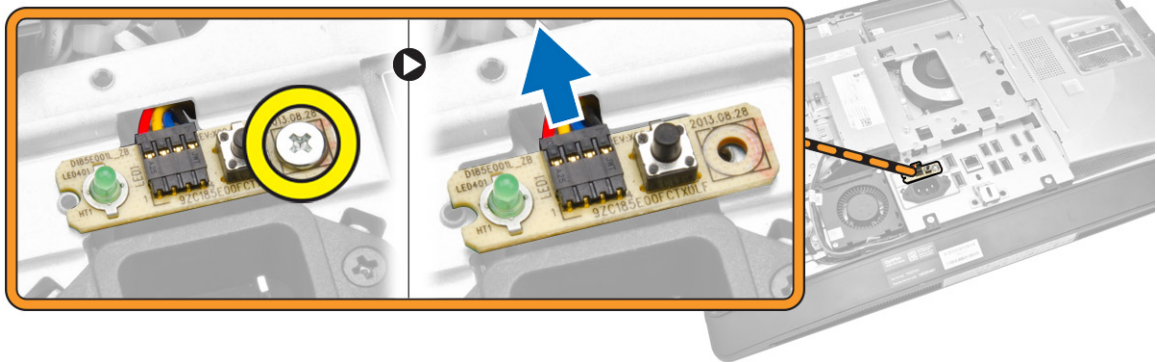

4. Remove the screws that secure the power connector to the I/O board shield.

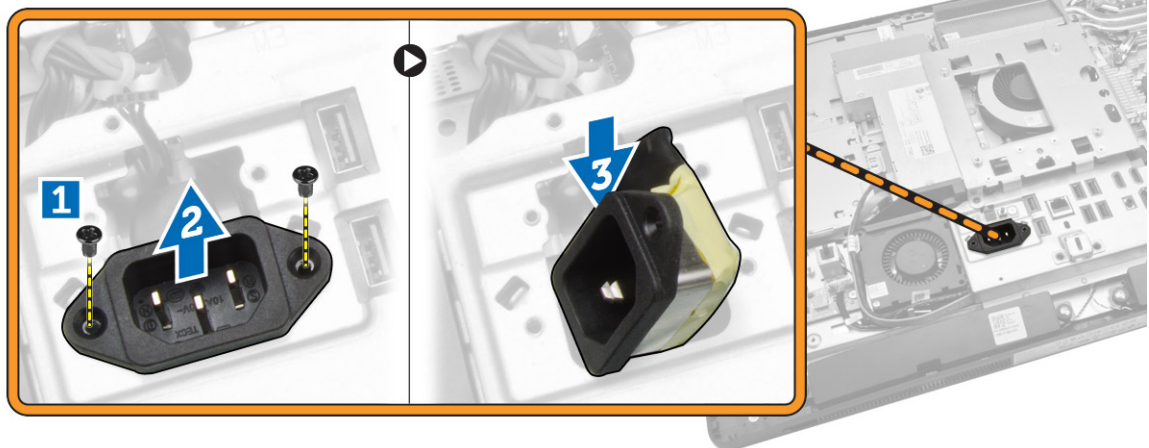

5. Remove the screws that secure the I/O board shield to the chassis. Loosen the power connector and press it down the socket. Flip the input/output (I/O) board shield and remove it from the computer.

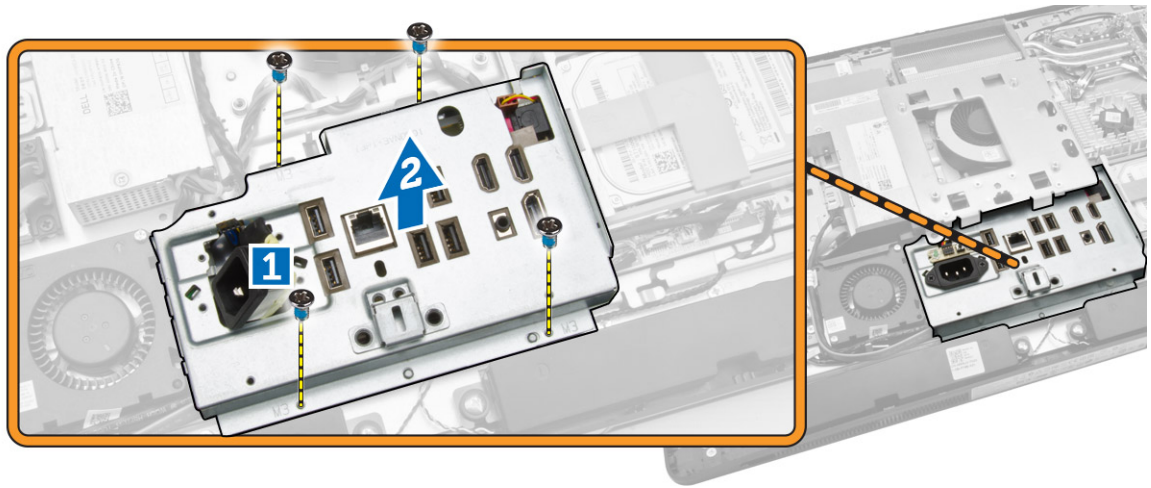


Installing the I/O Board Shield

1. Place the I/O board shield on the computer.
2. Pass the power connector and fix it to the socket. Tighten the screws that secure the I/O board shield to the chassis.
3. Tighten the screws that secure the power connector to the I/O board shield.
4. Tighten the screws that secure the power-button board to the I/O board shield.
5. Place the I/O panel on the computer.
6. Install:
 - a. power-supply fan
 - b. system-board shield
 - c. VESA mount bracket
 - d. back cover
 - e. speaker cover
 - f. VESA stand
7. Follow the procedures in *After Working Inside Your Computer*.


Removing the Power Supply Unit (PSU)

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. system-board shield
 - e. input/output (I/O) board shield
 - f. power-supply fan

3. Disconnect the power-supply cable from the connector on the system board.

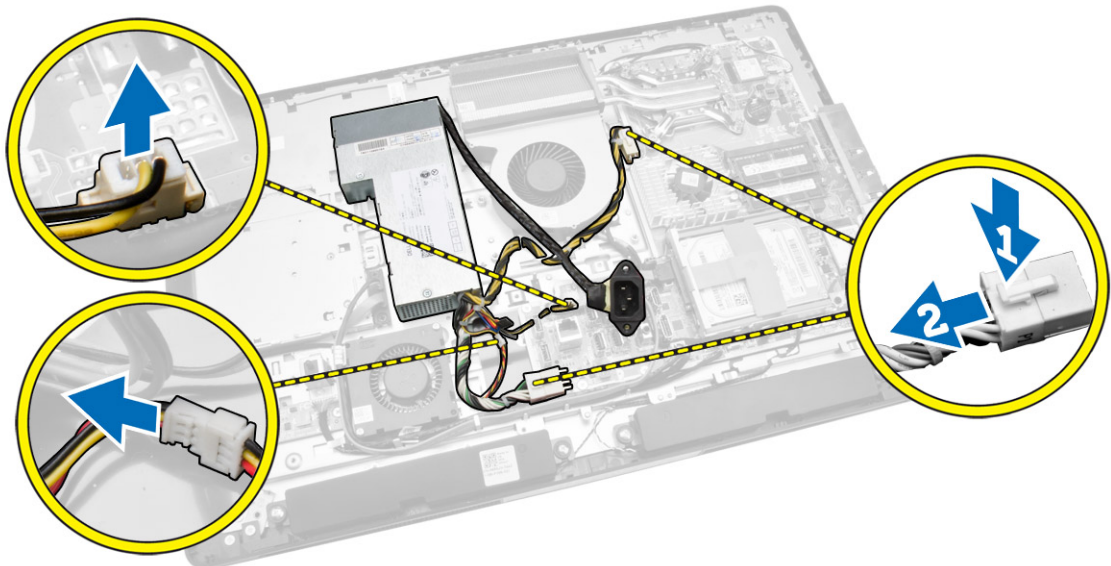

4. Perform the following steps as shown in the illustration:
 - a. Unthread the cable from the hooks in the computer [1].
 - b. Remove the screws that secure the power-supply unit to the chassis [2].
 - c. Slide upwards to release the power-supply unit from the chassis [3].
 - d. Lift the power-supply unit up and remove it from the computer [4].

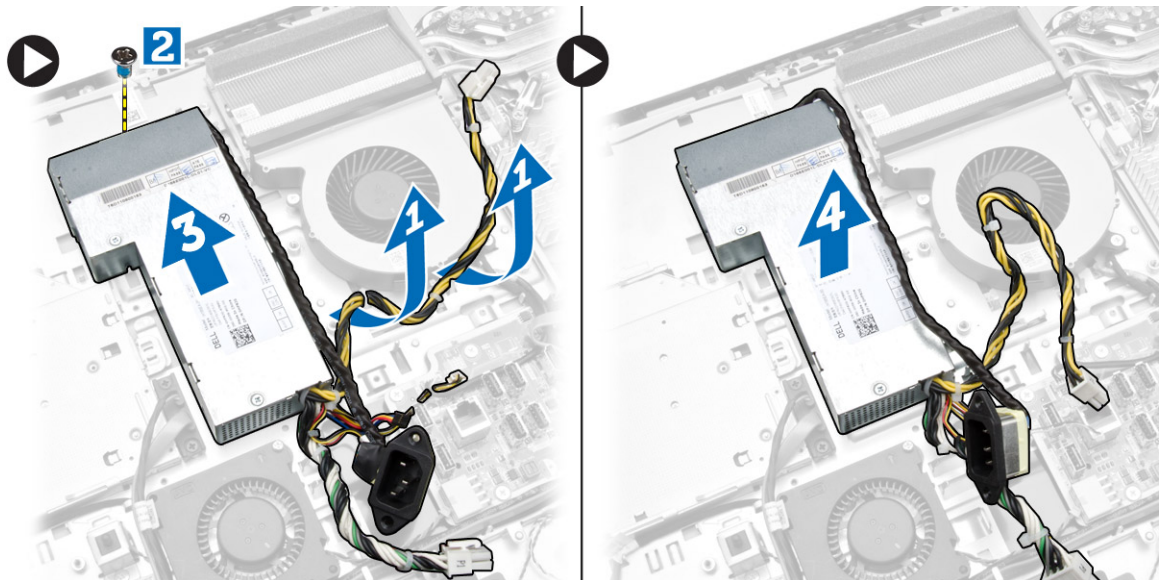

Installing the Power Supply Unit

1. Place the power supply unit on the computer.
2. Tighten the screws to secure the power supply unit to the chassis.
3. Thread the cable on the hooks in the computer.

4. Connect the power-supply cables to the connector on the system board.
5. Install:
 - a. power-supply fan
 - b. input/output (I/O) board shield
 - c. system-board shield
 - d. VESA mount bracket
 - e. back cover
 - f. VESA stand
6. Follow the procedures in *After Working Inside Your Computer*.

Removing the Processor

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. system-board shield
 - e. heatsink assembly
3. Press the release lever down and then move it outward to release it from the retention hook that secures it. Lift the processor cover and remove the processor from its socket.




Installing the Processor


1. Insert the processor into the processor socket. Ensure the processor is properly seated.
2. Press the release lever down and then move it inward to secure it with the retention hook.
3. Install:
 - a. heatsink assembly
 - b. system-board shield
 - c. VESA mount bracket
 - d. back cover
 - e. VESA stand
4. Follow the procedures in *After Working Inside Your Computer*.

Removing the Speakers

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. system-board shield
 - e. I/O board shield
 - f. speaker cover
3. Perform the following steps as shown in the illustration:
 - a. Disconnect the speaker cables from the connector on the system board [1].
 - b. Unthread the cables from the notches [2].

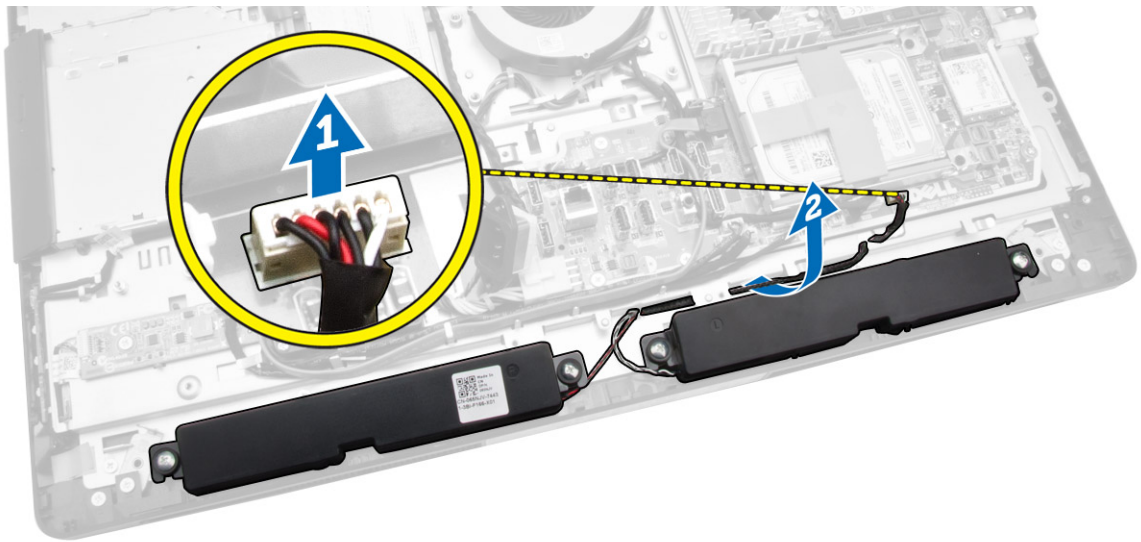

4. Remove the screws that secure the speakers to the chassis. Lift the speakers from the computer.

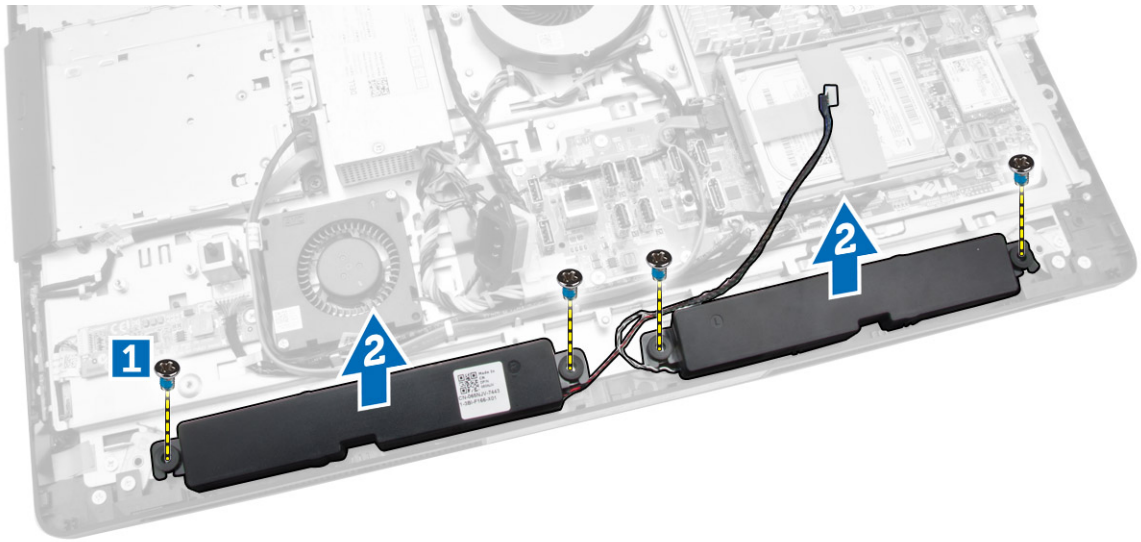


Installing the Speakers


1. Place and align the speakers on the chassis. Tighten the screws that secure the speaker to the chassis.
2. Thread the cables on the notches. Connect the speaker cables to the system board.
3. Install:
 - a. system-board shield
 - b. I/O board shield
 - c. VESA mount bracket
 - d. back cover
 - e. bottom cover
 - f. VESA stand
4. Follow the procedures in *After Working Inside Your Computer*.

Removing the System Board

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. system-board shield
 - e. memory
 - f. optical drive
 - g. hard drive
 - h. heatsink assembly
 - i. power supply unit
 - j. input/output (I/O) board shield
 - k. converter board
 - l. power-supply fan
3. Disconnect all the cables that are connected to the system board.

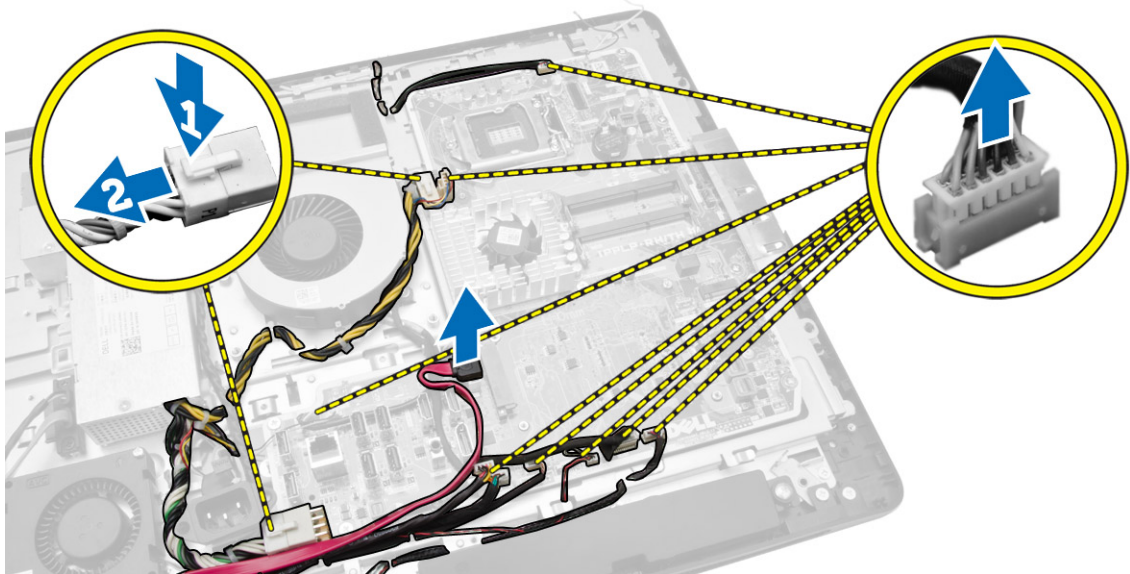


4. Perform the following steps as shown in the illustration.
 - a. Remove the screws that secure the system board to the computer [1].
 - b. Slide the system board to release it from the computer [2].
 - c. Lift the system board away from the computer [3].

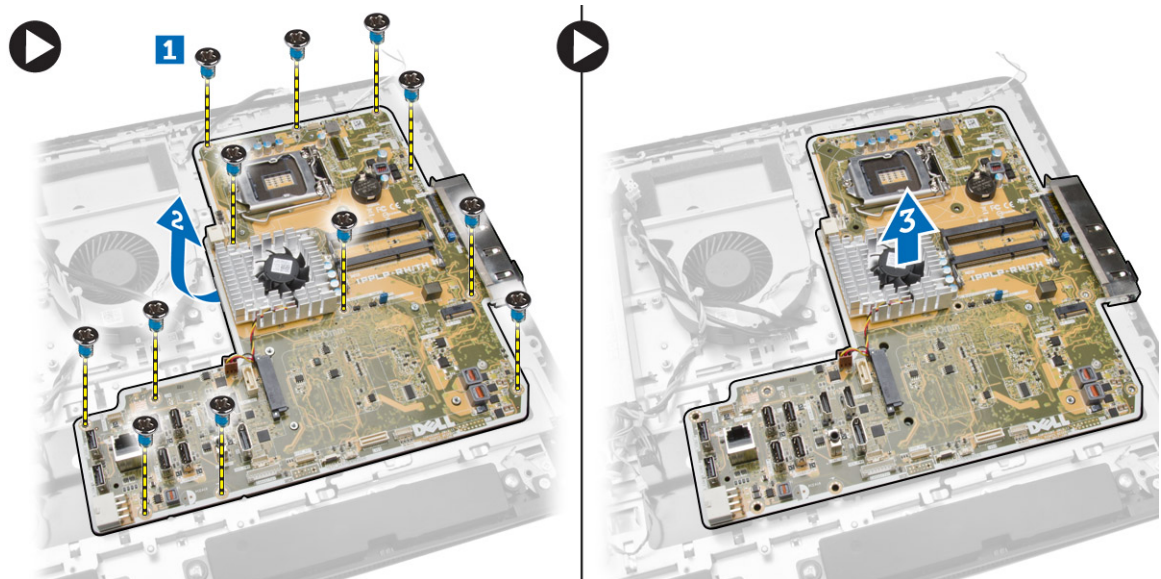

5. Lift and remove the system board from the chassis.

System Board Layout

The following image displays the system board layout of the computer.

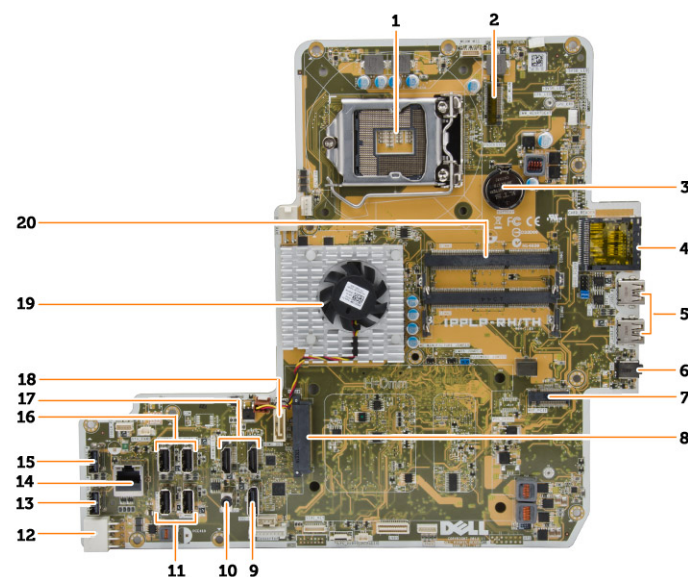

1. processor socket
2. WLAN connector
3. coin-cell battery

4. memory card reader
5. USB 3.0 connectors
6. audio connector
7. HCA card
8. SATA HDD connector
9. display port
10. Line-out connector
11. USB 3.0 connectors
12. 8-pin power connector
13. USB 2.0 connector
14. network connector
15. USB 2.0 connector
16. USB 3.0 connectors
17. HDMI connector
18. SATA ODD connector
19. heatsink
20. memory connectors (SODIMM sockets)

Installing the System Board

1. Place the system board on the computer.
2. Connect all the cables to the system board.
3. Tighten the screws to secure the system board to the base panel.
4. Install:
 - a. power-supply fan
 - b. converter board
 - c. input/output (I/O) board shield
 - d. power supply unit
 - e. heatsink assembly
 - f. hard drive
 - g. optical drive
 - h. memory
 - i. system-board shield
 - j. VESA mount bracket
 - k. back cover
 - l. VESA stand
5. Follow the procedures in *After Working Inside Your Computer*.

Removing the Display Panel

1. Follow the procedures in *Before Working Inside Your Computer*.

2. Remove the:



- a. VESA stand
- b. back cover
- c. VESA mount bracket
- d. system-board shield
- e. input/output (I/O) board shield
- f. WLAN card
- g. optical drive
- h. hard drive
- i. intrusion switch
- j. power and OSD buttons board
- k. converter board
- l. power-supply fan
- m. power supply unit
- n. heatsink assembly
- o. processor fan
- p. speakers
- q. speaker cover
- r. antenna module
- s. system board




NOTE: These instructions are valid only for non-touch computers. For touch computers, the display panel should be disassembled in a clean-room environment.

3. Perform the following steps as shown in the illustration:


- a. Remove the screws that secure the release latch holders to the display-panel base [1].
- b. Lift the release latch holders off the display-panel base [2].
- c. Remove the screws that secure the release latch brackets to the display-panel base [3].
- d. Lift the release latch brackets off the display-panel base [4].
- e. Rotate and lift the release latch lock brackets off the display-panel base [5].

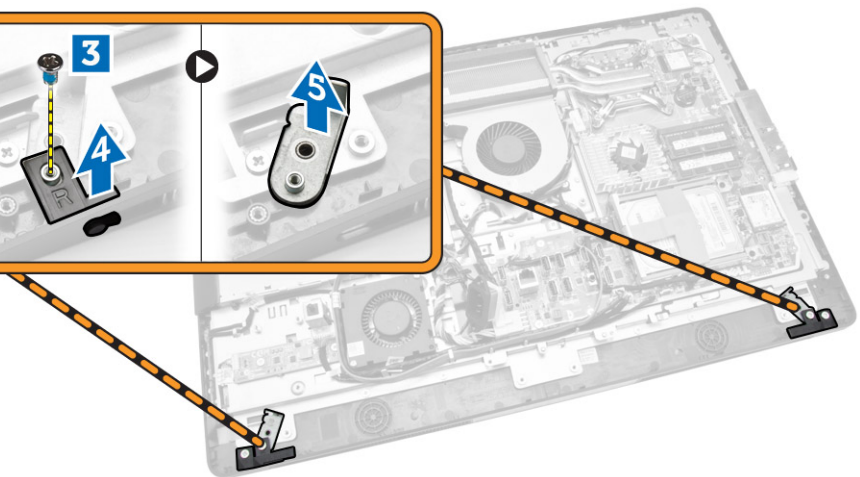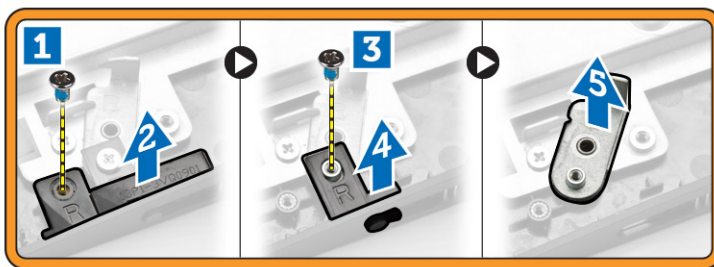


4. Unthread all the cables from their tabs on the display panel.

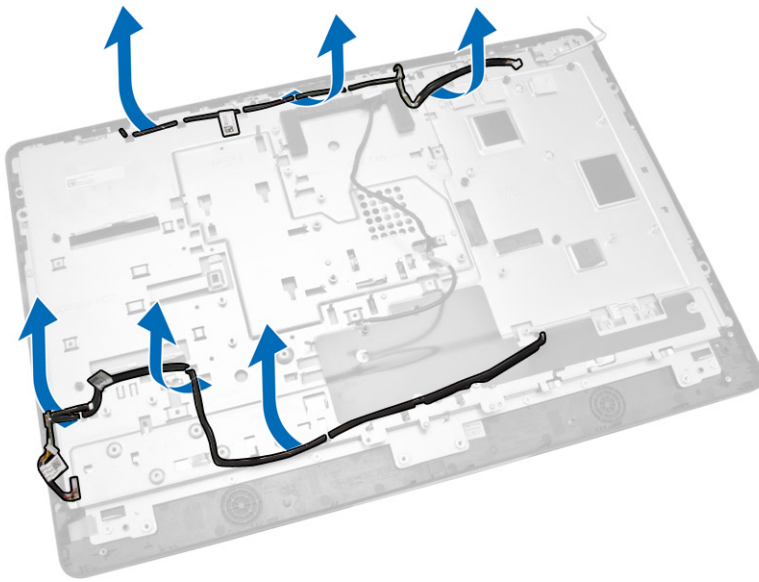

5. Remove the screw that secure WEB GND cable. Remove the tape from both sides of the display panel.

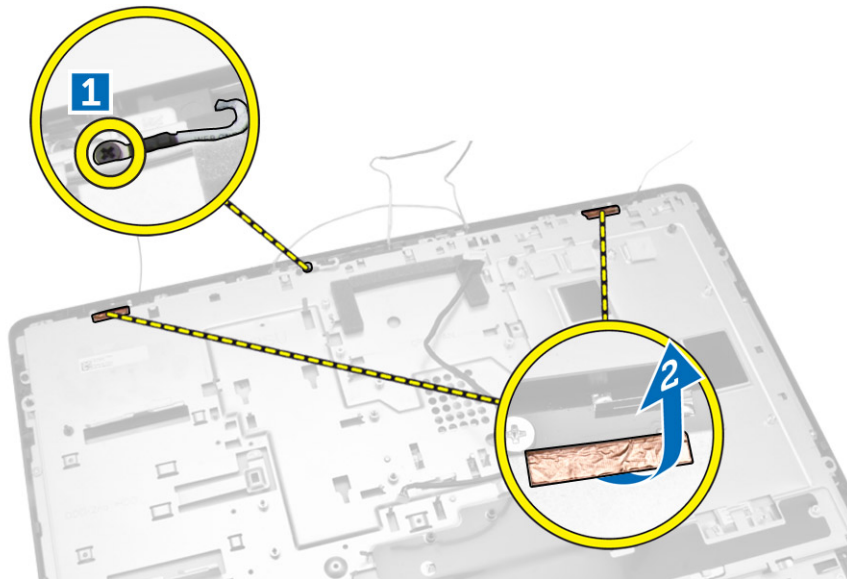

6. Remove the screws that secure the base panel to the chassis. Lift the display-panel base from the display bezel.

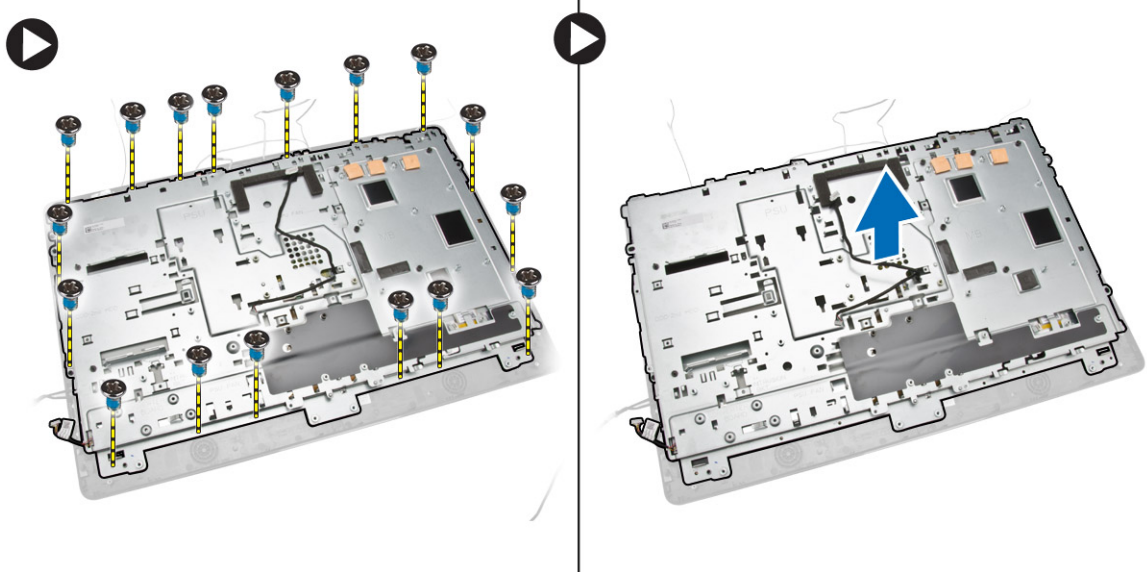

Installing the Display Panel


1. Tighten the screws to secure the display bracket to the display panel.
2. Place the display panel on the chassis.
3. Tighten the screw to secure the WEB GND cable to the chassis.
4. Fix the tape on both sides of the display panel..
5. Align all the cables through their tabs on the display panel.
6. Tighten the screws to secure the latches to the computer.

7. Install:
 - a. system board
 - b. antenna module
 - c. speakers
 - d. speaker cover
 - e. processor fan
 - f. heatsink assembly
 - g. power supply unit
 - h. power-supply fan
 - i. converter board
 - j. power and OSD buttons board
 - k. intrusion switch
 - l. hard drive
 - m. optical drive
 - n. WLAN card
 - o. input/output (I/O) board shield
 - p. system-board shield
 - q. VESA mount bracket
 - r. back cover
 - s. VESA stand
8. Follow the procedures in *After Working Inside Your Computer*.

Removing the Camera

1. Follow the procedures in *Before Working Inside Your Computer*.
2. Remove the:
 - a. VESA stand
 - b. back cover
 - c. VESA mount bracket
 - d. system-board shield
 - e. input/output (I/O) board shield
 - f. WLAN card
 - g. optical drive
 - h. hard drive
 - i. intrusion switch
 - j. power and OSD buttons board
 - k. converter board
 - l. processor fan
 - m. power supply unit
 - n. heatsink assembly
 - o. power-supply fan
 - p. system board
 - q. display panel

3. Lift the latch and release the camera from its slot to access the camera cable. Disconnect the camera cable from the camera and remove the camera from the computer.

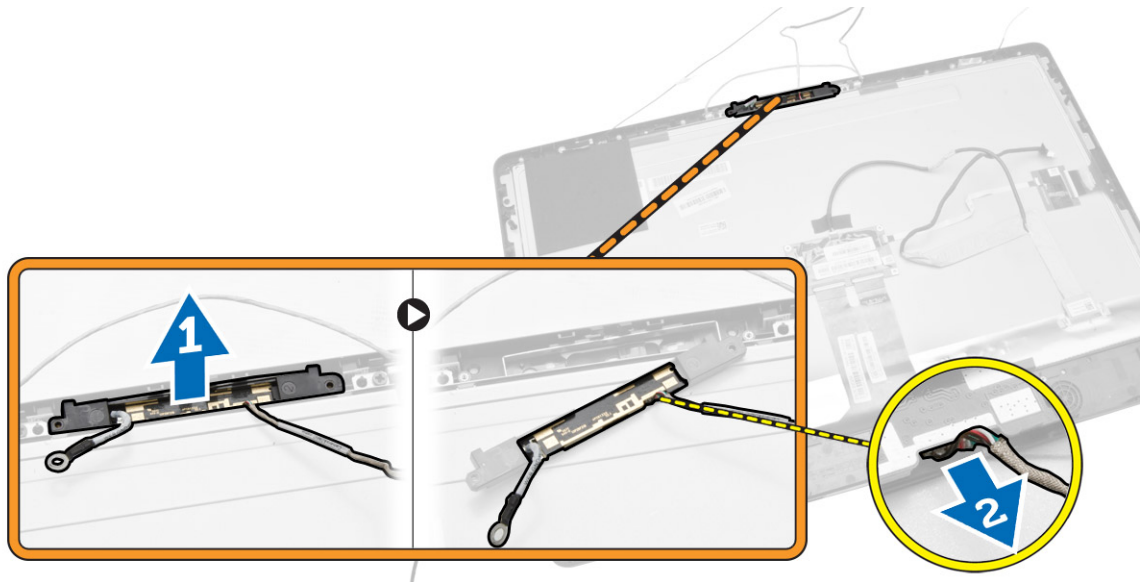

Installing the Camera

1. Align the camera into its slot.
2. Connect the camera cable and fix the latch.
3. Install:
 - a. display panel
 - b. system board
 - c. power-supply fan
 - d. heatsink assembly
 - e. power supply unit
 - f. processor fan
 - g. converter board
 - h. power and OSD buttons board
 - i. intrusion switch
 - j. hard drive
 - k. optical drive
 - l. WLAN card
 - m. input/output (I/O) board shield
 - n. system-board shield
 - o. VESA mount bracket
 - p. back cover
 - q. VESA stand
4. Follow the procedures in *After Working Inside Your Computer*.

System Setup

System Setup enables you to manage your computer hardware and specify BIOS-level options. From the System Setup, you can:

- Change the NVRAM settings after you add or remove hardware
- View the system hardware configuration
- Enable or disable integrated devices
- Set performance and power management thresholds
- Manage your computer security

Boot Sequence

Boot Sequence allows you to bypass the System Setup-defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing <F2> key
- Bring up the one-time boot menu by pressing <F12> key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot-menu options are:

- Removable Drive (if available)
- STXXXX Drive



NOTE: XXX denotes the SATA drive number.

- Optical Drive
- Diagnostics



NOTE: Choosing Diagnostics, will display the **ePSA diagnostics** screen.

The boot sequence screen also displays the option to access the System Setup screen.

Navigation Keys

The following table displays the system setup navigation keys.



NOTE: For most of the system setup options, changes that you make are recorded but do not take effect until you re-start the system.

Table 1. Navigation Keys

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
<Enter>	Allows you to select a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
<Tab>	Moves to the next focus area.
	 NOTE: For the standard graphics browser only.
<Esc>	Moves to the previous page till you view the main screen. Pressing <Esc> in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.
<F1>	Displays the System Setup help file.

System Setup Options

 **NOTE:** Depending on the computer and its installed devices, the items listed in this section may or may not appear

Table 2. General

Option	Description
System Information	Displays the following information: • System Information - Displays BIOS Version, Service Tag, Asset Tag, Ownership Tag, Ownership Date, Manufacture Date, and Express Service Code. • Memory Information - Displays Memory Installed, Memory Available, Memory Speed, Memory Channel Mode, Memory Technology, DIMM A Size, DIMM B Size. • PCI Information - Displays SLOT1 and SLOT2. • Processor Information - Displays Processor Type, Core Count, Processor ID, Current Clock Speed, Minimum Clock Speed, Maximum Clock Speed, Processor L2 Cache, Processor L3 Cache, HT Capable, and 64-Bit Technology. • Device Information - Displays SATA-0, SATA-1, LOM MAC Address, Video Controller, dGPU Video Controller, Audio Controller, Wi-Fi Device, and Bluetooth Device.
Boot Sequence	Allows you to specify the order in which the computer attempts to find an operating system. To change the boot order, select the device that you want to change in the list, which is available on the right-hand side. After you select the device, click up/down arrows or use your keyboard PgUp / PgDn keys to change the boot options order. You can also select or de-select from the list using the check-boxes available on the left hand side. You should enable the Legacy Option ROMs to setup the Legacy boot mode. This Legacy boot mode is not allowed when you enable the Secure Boot. The options are: • Boot Sequence - By default, the Windows Boot Manager check box is selected.

Option	Description
	 NOTE: The default option might differ based on the operating system of your computer. • Boot List Option - The list options are Legacy and UEFI. By default, the option UEFI is selected.  NOTE: The default option might differ based on the operating system of your computer. • Add Boot Option - Enables you to add a boot option. • Delete Boot Option - Enables you to delete an existing boot option. • View - Enables you to view the current boot option in the computer. • Load Defaults - Restores the default settings of the computer. • Apply - Enables you to apply the settings. • Exit - Exits and starts the computer.
Advanced Boot Options	The Enable Legacy Option ROMs option will allow the legacy option ROMs to load, when in UEFI boot mode. Without this option, only UEFI option ROMs will load. This option is required for Legacy boot mode. This Legacy boot mode is not allowed when you enable the Secure Boot. By default, the Enable Legacy Option ROMs check-box is not selected. The other options are: • Load Defaults - Restores the default settings of the computer. • Apply - Enables you to apply the settings. • Exit - Exits and starts the computer.
Date/Time	Allows you to set the date and time. The changes to the system date and time takes effect immediately.

Table 3. System Configuration

Option	Description
Integrated NIC	If you enable UEFI network stack, UEFI network protocols will be available. UEFI network allows pre-os and early os networking features to use NICs that are enabled. This may be used without PXE turned on. When you enable Enabled w/PXE, the type of PXE boot (Legacy PXE or UEFI PXE) depends on the current boot mode and type of option ROMs in use. The UEFI Network Stack is required in order to have UEFI PXE functionality fully enabled. • Enabled UEFI Network Stack - This option is disabled by default. Allows you to enable or disable the integrated network card. You can set the integrated NIC to: • Disabled • Enabled • Enabled w/PXE - This option is enabled by default. • Enabled w/Cloud Desktop  NOTE: Depending on the computer and its installed devices, the items listed in this section may or may not appear.
SATA Operation	Allows you to configure the operating mode of the integrated SATA hard drive controller. • Disabled - The SATA controllers are hidden.

Option	Description
	• ATA - SATA is configured for ATA mode. • AHCI - SATA is configured for AHCI mode. • RAID ON - SATA is configured to support RAID mode. This option is selected by default.
Drives	Allows you to enable or disable the various on-board drives: • SATA-0 • SATA-1
SMART Reporting	This field controls if the hard drive errors for the integrated drives are reported during system startup. This technology is part of the SMART (Self Monitoring Analysis and Reporting Technology) specification. • Enable SMART Reporting - This option is disabled by default.
USB Configuration	This field configures the integrated USB controller. If <i>Boot Support</i> is enabled, the system is allowed to boot any type of USB mass storage devices (HDD, memory key, floppy). If USB port is enabled, device attached to this port is enabled and available for operation system. If USB port is disabled, the operation system cannot see any device attached to this port. • Enable Boot Support • Rear USB Ports - Include options for 6 ports • Side USB Ports - Include options for 2 ports All of the options are enabled by default.  NOTE: USB keyboard and mouse always work in the BIOS setup irrespective of these settings.
Audio	Allows you to enable or disable the integrated audio controllers. By default, the Enable Audio option is selected. This option includes the following functions. • Enable Microphone • Enable Internal Speaker
OSD Button Management	Allows you to enable or disable the OSD (On-Screen Display) buttons on the All-In-One system. • Disable OSD buttons - This option is unchecked by default.
Miscellaneous Devices	Allows you to enable or disable various on-board devices. • Enable Camera - This option is selected by default. • Enable Media Card - This option is selected by default. • Disable Media Card

Table 4. Security

Option	Description
Admin Password	This field lets you set, change, or delete the administrator (admin) password (sometimes called the setup password). The admin password enables several security features. The drive does not have a password set by default. • Enter the old password • Enter the new password • Confirm the new password The successful changes in the password will take effect immediately.  NOTE: If you delete the admin password, the system password also gets deleted. You can also use the admin password to delete the HDD password. You cannot set an admin password if a system password or an HDD password is already set. You must set the admin password first, if you want to use the admin password with a system password and/or HDD password.
System Password	Allows you to set, change, or delete the computer password (previously called the primary password). The drive does not have a password set by default. • Enter the old password • Enter the new password • Confirm the new password The successful changes in the password will take effect immediately.
Internal HDD-0 Password	Allows you to set, change, or delete the password on the computer's internal hard disk drive (HDD). Successful changes to this password take effect immediately. The drive does not have a password set by default. • Enter the old password • Enter the new password • Confirm the new password
Strong Password	This field enforces strong passwords. Enable strong password - This option is disabled by default.
Password Configuration	This field controls the minimum and maximum number of characters allowed for the admin and system passwords. The minimum number of characters are 4 and maximum number of characters are 32 for both admin and system passwords. • Admin Password Min • Admin Password Max • System Password Min • System Password Max

Option	Description
Password Bypass	Allows you to bypass the <i>System Password</i> and the internal HDD password prompts during a system restart. - Disabled - Always prompt for the system and internal HDD password when they are set. This option is enabled by default. - Reboot Bypass - Bypass the password prompts on restarts (warm boots).  NOTE: The system will always prompt for the system and internal HDD passwords when powered on from the off state (a cold boot). Also, the system will always prompt for passwords on any module bay HDDs that may be present.
Password Change	Allows you to determine whether changes to the system and hard disk passwords are permitted when an administrator password is set. Allow Non-Admin Password Changes - This option is enabled by default.
TPM Security	This option lets you control whether the Trusted Platform Module (TPM) in the system is enabled and visible to the operating system. TPM Security - This option is disabled by default. If you enable TPM Security, following options will be displayed. - TPM ACPI support - TPM PPI Deprivation Override - Deactivate - Active - Clear - TPM PPI Provision Override are shown  NOTE: Activation, deactivation, and clear options are not affected if you load the setup program's default values. Changes to this option take effect immediately.
Computrace (R)	This field lets you activate or disable the BIOS module interface of the optional <i>Computrace Service</i> from <i>Absolute Software</i>. Deactivate - This option is enabled by default. - Disable - Activate
Chassis Intrusion	This field controls the chassis intrusion feature. The options are: - Clear intrusion warning - This option will be displayed when Enable and On-Silent options are selected. This option is disabled by default. - Disable Enable - This option is enabled by default. - On-Silent
CPU XD Support	Allows you to enable or disable the execute disable mode of the processor. Enable CPU XD Support - This option is enabled by default.

Option	Description
Dell Encryption	Allows you to permanently clear all user information from the Dell Encryption Accelerator which is used to encrypt your system. If the card has not been configured by Data Protection or Encryption , the option will be disabled. • Clear Owner- This option is disabled by default.
OROM Keyboard Access	Allows you to determine if you access the Option Read Only Memory (OROM) configuration screens via hotkeys during boot. These settings prevent access to the Intel RAID (CTRL+I) or Intel Management Engine BIOS Extension (CTRL+P/F12). • Enable - User may enter OROM configuration screens via the hotkey. This option is enabled by default. • One-Time Enable - User can enter the OROM configuration screens via the hotkeys during the next boot. After the boot, the setting will revert to disabled. • Disable - User can not enter the OROM configuration screens via the hotkey.
Admin Setup Lockout	Allows you to enable or disable the option to enter setup when an admin password is set. • Enable Admin Setup Lockout - This option is disabled by default.
HDD Protection Support	Allows you to enable or disable the HDD Protection feature. • HDD Protection Support - This option is disabled by default.

Table 5. Secure Boot

Option	Description
Secure Boot Enable	This option enables or disables the Secure Boot feature. To enable the Secure Boot, the computer has to be in UEFI boot mode and the Enable Legacy Option ROMs option needs to be turned-off. • Disabled - This option is selected by default. • Enabled
Expert Key Management	Allows you to manipulate the security key databases only if the system is in Custom Mode. The Enable Custom Mode option is disabled by default. The options of Custom Mode Key Management are: • PK - This option is selected by default. • KEK • db • dbx If you enable the Custom Mode, the relevant options for PK, KEK, db, and dbx appear. The options are: • Save to File- Saves the key to a user-selected file • Replace from File- Replaces the current key with a key from a user-selected file • Append from File- Adds a key to the current database from a user-selected file • Delete- Deletes the selected key • Reset All Keys- Resets to default setting

Option	Description
	• Delete All Keys- Deletes all the keys  NOTE: If you disable the Custom Mode, all the changes made will be erased and the keys will restore to default settings.

Table 6. Performance

Option	Description
Multi Core Support	Specifies whether the process will have one or all cores enabled. The performance of some applications will improve with the additional cores. • All - This option is enabled by default • 1 • 2
Intel SpeedStep	Allows you to enable or disable the Intel SpeedStep mode of the processor. This option is enabled by default.
C-States Control	Allows you to enable or disable the additional processor sleep states. This option is enabled by default.
Limit CPUID Value	Allows you to limit the maximum value of the Standard CPUID Fuction support. Some operation systems will not complete installation when maximum CPUID Function supported is greater than 3. • Enable CPUID Limit - This option is disabled by default.
Intel TurboBoost	Allows you to enable or disable Intel TurboBoost mode of the processor. This option is enabled by default. • Disabled - Does not allow the TurboBoost driver to increase the performance state of the processor above the standard performance. • Enabled - Allows the Intel TurboBoost driver to increase the performance of the CPU or graphics processor.
Hyper-Thread Control	Allows you to enable or disable the Hyper-Threading technology. This option is enabled by default.
Rapid Start Technology	Improves the battery life automatically by putting system into a low power state during Sleep, after a user-specified amount of time. Some increase in resume time from Sleep state may be experience, but the average resume times should be faster than the resume from Hibernate. The timer can be set starting from the value "0". By default, this option is disabled.

Table 7. Power Management

Option	Description
AC Recovery	Specifies how the computer will respond when AC power is applied after an AC power loss. You can set the AC Recovery to: • Power Off (default) • Power On • Last Power State
Auto On Time	This option sets the time of the day when you would like the system to turn on automatically. Time is kept in standard 12-hour format

Option	Description
	(hour:minutes:seconds). The startup time can be changed by typing the values in the time and A.M./P.M. fields. • Disabled - The system will not automatically power up. This option is selected by default. • Every Day - The system will power up every day at the time you specified above . • Weekdays - The system will power up Monday through Friday at the time you specified above. • Select Days - The system will power up on days selected above at the time you specified above.  NOTE: This feature does not work if you turn off your computer using the switch on a power strip or surge protector or if Auto Power is set to disabled.
Deep Sleep Control	Allows you to define the controls when Deep Sleep is enabled. • Disabled • Enabled in S5 only • Enabled in S4 and S5 - This option is enabled by default.
Fan Control Override	Controls the speed of the system fan. This option is disabled by default.  NOTE: When enabled, the fan runs at full speed.
USB Wake Support	This option allows you to enable USB devices to wake the computer from standby. • Enable USB Wake Support - This option is enabled by default.
Wake on LAN / WLAN	This option allows the computer to power up from the off state when triggered by a special LAN signal. Wake-up from the Standby state is unaffected by this setting and must be enabled in the operating system. This feature only works when the computer is connected to AC power supply. This option is disabled by default.
Block Sleep	This option lets you block entering to sleep (S3 state) in operating system environment. • Block Sleep (S3 state) - This option is disabled by default.
Intel Smart Connect Technology	This option is disabled by default. If this option is enabled, the feature will periodically sense the nearby wireless connection while the system is asleep. The Smart Connect will synchronize the email or social media applications that are open, when the computer enters the sleep state.

Table 8. POST Behavior

Option	Description
Numlock LED	Specifies if the NumLock function can be enabled when the system boots. This option is enabled by default.
Keyboard Errors	Specifies whether keyboard related errors are reported when it boots. This option is enabled by default.
Fastboot	Speeds up the boot process by bypassing some compatibility steps. The options are:

Option	Description
	- Minimal Thorough - This option is selected by default. - Auto
MEBx Hotkey	Specifies whether the MEBx Hotkey function should be enabled when the computer boots. This option is enabled by default.

Table 9. Virtualization Support

Option	Description
Virtualization	This option specifies whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel Virtualization technology. Enable Intel Virtualization Technology - This option is enabled by default.
VT for Direct I/O	Enables or disables the Virtual Machine Monitor (VMM) from utilizing the additional hardware capabilities provided by Intel® Virtualization technology for direct I/O. Enable Intel Virtualization Technology for Direct I/O - This option is enabled by default.
Trusted Execution	This option specifies whether a Measured Virtual Machine Monitor (MVMM) can utilize the additional hardware capabilities provided by Intel Trusted Execution technology. The TPM virtualization technology, and Virtualization technology for direct I/O must be enabled to use this feature. Trusted Execution- This option is disabled by default.

Table 10. Wireless

Option	Description
Wireless Device Enable	Allows enabling/disabling the internal wireless devices. The options are: WLAN/ WiGig Bluetooth Both the options are enabled by default.

Table 11. Maintenance

Option	Description
Service Tag	Displays the service tag of your computer.
Asset Tag	Allows you to create a system asset tag if an asset tag is not already set. This option is not set by default.
SERR Messages	Controls the SERR message mechanism. This option is not set by default. Some graphics cards require that the SERR message mechanism be disabled.

Table 12. Cloud Desktop

Option	Description
Server Lookup Method	This option specifies how the Cloud Desktop software will lookup the server address. The options are: - Static IP - Uses the static IP address DNS - Obtains several IP addresses using the Domain Name System (DNS) protocol. This option is selected by default  NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop.
Server Name	This option specifies the server name of the server.  NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop, and when the server look up method is set to DNS.
Server IP Address	This option specifies the primary static IP address of the Cloud Desktop Server with which the client software communicates. The default Server IP Address is 255.255.255.255  NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop.
Server Port	This option specifies the primary IP port of the Cloud Desktop with which the client software communicates. The default Server Port value is 06910.  NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop.
Client Address Method	This option specifies how the client obtains its IP address. The options are: - Static IP - Uses the static IP address DHCP - Obtains IP address using Dynamic Host Configuration Protocol(DHCP). This option is selected by default.  NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop.
Client IP Address	This option specifies the static IP address of the client. The default IP Address is 255.255.255.255  NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop.
Client Subnet Mask	This option specifies the subnet mask IP address of the client. The default IP Address is 255.255.255.255  NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop.
Client Gateway	This option specifies the gateway IP address of the client. The default IP Address is 255.255.255.255  NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop.
DNS IP address	This option specifies the DNS IP address of the client. The default IP Address is 255.255.255.255

Option	Description
	 NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop.
Domain Name	This option specifies the domain name of the client.
	 NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop, and when the client address method is set to static IP.
Advanced	This option turns on the Verbose Mode for advanced debugging. By default, this option is disabled.
	 NOTE: This option is relevant only when the Integrated NIC control in the System Configuration group is set to Enable with Cloud Desktop.

Table 13. System Logs

Option	Description
BIOS events	Displays the system event log and allows you to clear the log. Clear Log

Updating the BIOS

It is recommended to update your BIOS (system setup), on replacing the system board or if an update is available.

1. Re-start the computer.
2. Go to **dell.com/support**.
3. Enter the **Service Tag** or **Express Service Code** and click **Submit**.
 -  **NOTE:** To locate the Service Tag, click **Where is my Service Tag?**
 -  **NOTE:** If you cannot find your Service Tag, click **Detect My Product**. Proceed with the instructions on screen.
4. If you are unable to locate or find the Service Tag, click the Product Category of your computer.
5. Choose the **Product Type** from the list.
6. Select your computer model and the **Product Support** page of your computer appears.
7. Click **Get drivers** and click **View All Drivers**.
The Drivers and Downloads page opens.
8. On the Drivers and Downloads screen, under the **Operating System** drop-down list, select **BIOS**.
9. Identify the latest BIOS file and click **Download File**.
You can also analyze which drivers need an update. To do this for your product, click **Analyze System for Updates** and follow the instructions on the screen.
10. Select your preferred download method in the **Please select your download method below window**; click **Download File**.
The **File Download** window appears.
11. Click **Save** to save the file on your computer.
12. Click **Run** to install the updated BIOS settings on your computer.
Follow the instructions on the screen.

System and Setup Password

You can create a system password and a setup password to secure your computer.

Password Type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data stored on your computer if it is not locked and left unattended.

 **NOTE:** Your computer is shipped with the system and setup password feature disabled.

Assigning a System Password and Setup Password

You can assign a new **System Password** and/or **Setup Password** or change an existing **System Password** and/or **Setup Password** only when **Password Status** is **Unlocked**. If the Password Status is **Locked**, you cannot change the System Password.

 **NOTE:** If the password jumper is disabled, the existing System Password and Setup Password is deleted and you need not provide the system password to log on to the computer.

To enter a system setup, press <F2> immediately after a power-on or re-boot.

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press <Enter>. The **System Security** screen appears.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, enter your system password, and press <Enter> or <Tab>. Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 - The password can contain the numbers 0 through 9.
 - Only lower case letters are valid, upper case letters are not allowed.
 - Only the following special characters are allowed: space, ("), (+), (.), (-), (.), (/), (:), (|), (\), (|), (').

Re-enter the system password when prompted.

4. Type the system password that you entered earlier and click **OK**.
5. Select **Setup Password**, type your system password and press <Enter> or <Tab>. A message prompts you to re-type the setup password.
6. Type the setup password that you entered earlier and click **OK**.
7. Press <Esc> and a message prompts you to save the changes.
8. Press <Y> to save the changes. The computer reboots.

Deleting or Changing an Existing System and/or Setup Password

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

To enter the System Setup, press <F2> immediately after a power-on or reboot.

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press <Enter>. The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, alter or delete the existing system password and press <Enter> or <Tab>.
4. Select **Setup Password**, alter or delete the existing setup password and press <Enter> or <Tab>.



NOTE: If you change the System and/or Setup password, re-enter the new password when promoted. If you delete the System and/or Setup password, confirm the deletion when promoted.

5. Press <Esc> and a message prompts you to save the changes.
6. Press <Y> to save the changes and exit from the System Setup. The computer reboots.

Technical Specifications



NOTE: Offerings may vary by region. For more information regarding the configuration of your computer, click Start  (**Start icon**) → **Help and Support**, and then select the option to view information about your computer.

Table 14. System Information

Feature	Specification
Processor type	- Intel Dual / Quad Core - Intel Core i3 / i5 / i7 series
Total cache	Up to 8 MB cache depending on processor type
Chipset	Intel Q87 Express chipset

Table 15. Memory

Feature	Specification
Type	up to 1600 MHz, unbuffered non-ECC, dual-channel DDR3L configuration
Connectors	two internally-accessible DDR3L SODIMM sockets
Capacity	4 GB and 8 GB
Minimum Memory	4 GB
Maximum Memory	16 GB

Table 16. Video

Feature	Specification
Video Controller (Integrated)	Integrated Intel HD Graphics 4600 (4th generation Core i5/i7 DC/QC CPUs), 2GB AMD Radeon™ R7 A265 (optional discrete video solution)
Video Memory	shared memory
External Display Support	Display port, HDMI out, and Wi-Fi display



NOTE: Wi-Fi display requires a wireless card which must be purchased separately.

Table 17. Audio

Feature	Specification
Controller	Intel High Definition Audio with Waves MaxxVoice Pro
Speaker	single 4-ohms speakers in both the left and right speaker assembly (4 W average per channel)
Internal speaker amplifier	up to 7.6 W at 4-ohm per channel
Internal microphone support	dual digital microphone
Volume controls	Volume up/down buttons (Windows 7 only), program menus, and keyboard media-control keys
	 WARNING: Excessive sound pressure from earphones or headphones can cause hearing damage or loss. Adjustment of the volume control as well as the equalizer to settings other than the center position may increase the earphones or headphones output voltage, and therefore the sound pressure level. The use of factors influencing the earphones or headphones output other than those specified by the manufacturer(e.g. operating system, equalizer software, firmware, driver, etc.) may increase the earphones or headphones output voltage and therefore the sound pressure level. The use of earphones or headphones other than those specified by the manufacturer may lead to heightened sound pressure level.

Table 18. Communications

Feature	Specification
Network adapter	Intel 10/100/1000 Mbps Ethernet LAN on system board
Wireless	• M.2 2230 card • combo M.2 card (Intel Wireless 7260 M.2 PCIe WLAN card (802.11n/ac) with Bluetooth)

Table 19. Cards

Feature	Specification
M.2 slots	Two • 3030 Socket 1 • 3042 Socket 2

Table 20. Displays

Feature	Specification
Type	23-inch full-HD WLED
Maximum resolution	1920 x 1080
Refresh rate	60 Hz
Brightness	Brightness up/down buttons
Operating angle	178 horizontal / 178 vertical
Pixel pitch	0.2652 mm
Controls	on-screen controls

Table 21. Drives

Feature	Specification
Hard drive	one 2.5-inch SATA hard drive or one 2.5-inch SATA drive with an adapter bracket  NOTE: It supports dual hard drive.
Optical drive (optional)	one DVD-ROM SATA drive or DVD+/- RW SATA drive

Table 22. Ports and Connectors

Feature	Specification
Audio:	- one line-out connector at rear - one global headset port at side
Network adapter	one RJ-45 connector
USB 2.0 (Front/Rear/Internal)	0(side)/2/3
USB 3.0 (Front/Rear/Internal)	2(side)/4/0
Video	one display port
HDMI	- one 19-pin output port - one 19-pin input port
Media card reader	one 4-in-1 slot

Table 23. Power

Feature	Specification
185 Watt PSU	
Frequency	47 Hz — 63 Hz
Voltage	90 VAC — 264 VAC
Input current	Maximum 2.6 A (Low AC range)

Feature	Specification
	Maximum 1.3 A (High AC range)

Table 24. Camera (optional)

Feature	Specification
Image resolution	2.0 megapixel
Video resolution	FHD (1080p)
Diagonal viewing angle	74 degrees

Table 25. Stand

Feature	Specification
Tilt	–5 degrees to 30 degrees

Table 26. Physical Dimensions

Feature	Specification
Width	567.50 mm (22.34 inches) - Without stand
Height	380.70 mm (14.99 inches) - Without stand
Depth:	
non-touch	60.00 mm (2.36 inches) - Without stand
touch	58.60 mm (2.31 inches) - Without stand
Weight:	
non-touch	12.5 kg (27.56 pounds) - With stand
touch	14.1 kg (30.89 pounds) - With stand



NOTE: The weight of your computer may vary depending on the configuration ordered and the manufacturing variability.

Table 27. Controls and Lights

Feature	Specification
Power button light	White light — Solid white light indicates power-on state; blinking white light indicates sleep state of the computer.
Hard Drive activity light	White light — Blinking white light indicates that the computer is reading data from or writing data to the hard drive.
Camera LED	White light — solid while light indicates that the camera is on.
Back panel:	
Link integrity light on integrated network adapter :	Green — a good 10 Mbps connection exists between the network and the computer.

Feature	Specification
	Green— a good 100 Mbps connection exists between the network and the computer.
	Orange — a good 1000 Mbps connection exists between the network and the computer.
	Off (no light) — the computer is not detecting a physical connection to the network.
Network activity light on integrated network adapter	Yellow light — A blinking yellow light indicates that network activity is present.
Power supply diagnostic light	Green light — The power supply is turned on and is functional. The power cable must be connected to the power connector (at the back of the computer) and the electrical outlet.

Table 28. Environmental

Feature	Specification
Temperature range:	
Operating	0°C to 35 °C (50 °F to 95 °F)
Storage	–40 °C to 65 °C (–40 °F to 149 °F)
Relative humidity (maximum):	
Operating	20% to 80% (non-condensing)
Storage	20% to 80% (non-condensing)
Maximum vibration:	
Operating	0.26 GRMS at 5 to 350 Hz
Storage	2.2 GRMS at 5 to 500 Hz
Maximum shock:	
Operating	40 G
Storage	45 G
Altitude:	
Operating	0 to 5000 m (0 to 16,404 ft)
Storage	0 to 5000 m (0 to 16,404 ft)
Airborne contaminant level	G2 or lower as defined by ANSI/ISA-S71.04-1985

Contacting Dell

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Visit **dell.com/support**
2. Select your support category.
3. Verify your country or region in the Choose a Country/Region drop-down menu at the top of page.
4. Select the appropriate service or support link based on your need.