

ES1100 Series

8/16/24 Port Unmanaged Fast Ethernet Switch

User's Guide

Version 1.00
Edition 2, 4/2011

www.zyxel.com

ZyXEL

About This User's Guide

Intended Audience

This manual is intended for people who want to use and install the Switch.

Documentation Feedback


Send your comments, questions or suggestions to: techwriters@zyxel.com.tw

Thank you!

The Technical Writing Team, ZyXEL Communications Corp.,
6 Innovation Road II, Science-Based Industrial Park, Hsinchu, 30099, Taiwan.

Need More Help?

More help is available at www.zyxel.com.

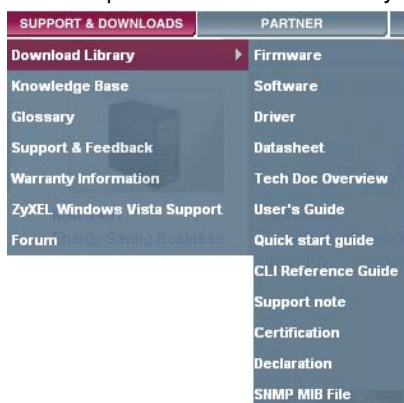

- Download Library

Search for the latest product updates and documentation from this link. Read the Tech Doc Overview to find out how to efficiently use the User Guide, Quick Start Guide and Command Line Interface Reference Guide in order to better understand how to use your product.

- Knowledge Base

If you have a specific question about your product, the answer may be here. This is a collection of answers to previously asked questions about ZyXEL products.

- Forum

This contains discussions on ZyXEL products. Learn from others who use ZyXEL products and share your experiences as well.

Customer Support

Should problems arise that cannot be solved by the methods listed above, you should contact your vendor. If you cannot contact your vendor, then contact a ZyXEL office for the region in which you bought the device.

See http://www.zyxel.com/web/contact_us.php for contact information. Please have the following information ready when you contact an office.

- Product model and serial number.
- Warranty Information.
- Date that you received your device.
- Brief description of the problem and the steps you took to solve it.

Document Conventions

Warnings and Notes

These are how warnings and notes are shown in this User's Guide.

Warnings tell you about things that could harm you or your device.

Note: Notes tell you other important information (for example, other things you may need to configure or helpful tips) or recommendations.

Syntax Conventions

- The ES1100-8P, ES1100-16, ES1100-16P, ES1100-24, and ES1100-24E may be referred to as the “Switch”, the “device”, the “system” or the “product” in this User's Guide. Differentiation is made where needed.
- Product labels, screen names, field labels and field choices are all in bold font.
- A key stroke is denoted by square brackets and uppercase text, for example, [ENTER] means the “enter” or “return” key on your keyboard.
- “Enter” means for you to type one or more characters and then press the [ENTER] key. “Select” or “choose” means for you to use one of the predefined choices.
- Units of measurement may denote the “metric” value or the “scientific” value. For example, “k” for kilo may denote “1000” or “1024”, “M” for mega may denote “1000000” or “1048576” and so on.
- “e.g.,” is a shorthand for “for instance”, and “i.e.,” means “that is” or “in other words”.

Icons Used in Figures

Figures in this User's Guide may use the following generic icons. The Switch icon is not an exact representation of your device.

The Switch 	Computer 	Notebook computer 
Server 		

Safety Warnings

- Do NOT use this product near water, for example, in a wet basement or near a swimming pool.
- Do NOT expose your device to dampness, dust or corrosive liquids.
- Do NOT store things on the device.
- Do NOT install, use, or service this device during a thunderstorm. There is a remote risk of electric shock from lightning.
- Do not obstruct the device ventilation slots as insufficient airflow may harm your device.
- Connect ONLY suitable accessories to the device.
- Do NOT open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel should service or disassemble this device. Please contact your vendor for further information.
- Make sure to connect the cables to the correct ports.
- Place connecting cables carefully so that no one will step on them or stumble over them.
- Always disconnect all cables from this device before servicing or disassembling.
- Use ONLY an appropriate power adaptor or cord for your device. Connect it to the right supply voltage (for example, 110V AC in North America or 230V AC in Europe).
- Use ONLY power wires of the appropriate wire gauge for your device. Connect it to a power supply of the correct voltage.
- Do NOT allow anything to rest on the power adaptor or cord and do NOT place the product where anyone can walk on the power adaptor or cord.
- Do NOT use the device if the power adaptor or cord is damaged as it might cause electrocution.
- If the power adaptor or cord is damaged, remove it from the device and the power source.
- Do NOT attempt to repair the power adaptor or cord. Contact your local vendor to order a new one.

Your product is marked with this symbol, which is known as the WEEE mark. WEEE stands for Waste Electronics and Electrical Equipment. It means that used electrical and electronic products should not be mixed with general waste. Used electrical and electronic equipment should be treated separately.



Table of Contents

About This User's Guide	3
Document Conventions	5
Safety Warnings.....	6
Table of Contents	7
Chapter 1	
Getting to Know Your Switch.....	9
1.1 Overview	9
1.2 Features	10
1.3 Applications	11
1.3.1 Standalone Workgroup	11
1.3.2 Bridging	11
1.4 Power Over Ethernet (PoE)	12
Chapter 2	
Hardware Description and Connection	13
2.1 Rear Panel	13
2.1.1 Rear Panel Power Connection	13
2.2 Front Panel	14
2.2.1 RJ-45 Auto-negotiating Ports	14
2.2.2 Front Panel Connections	14
2.2.3 Front Panel LEDs	15
2.3 Hardware Installation	16
2.3.1 Wall Mounting (for ES1100-8P/16/16P/24E)	16
2.3.2 Rack Mounting	17
2.3.3 Mounting the Switch on a Rack	19
Chapter 3	
Troubleshooting.....	20
3.1 Improper Network Cabling and Topology	21
Chapter 4	
Product Specifications.....	23
Appendix A Legal Information.....	25
Index	27

Getting to Know Your Switch

1.1 Overview

This User's Guide covers the following models: ES1100-16, ES1100-24, ES1100-24E, ES1100-8P, and ES1100-16P. The Switch can be used to build high-performance switched workgroup networks. The following table lists features that are specific to individual models:


Table 1 ES1100 Series Comparison Table

MODEL FEATURE	ES1100-8P	ES1100-16	ES1100-16P	ES1100-24	ES1100-24E
16x10/100Base-TX Ethernet Ports		✓			
24x10/100Base-TX Ethernet Ports				✓	✓
8x10/100Base-TX (including 4 FE PoE ports)	✓				
16x10/100Base-TX (including 8 FE PoE ports)			✓		

Figure 1 Front Panel
ES1100-8P



ES1100-16

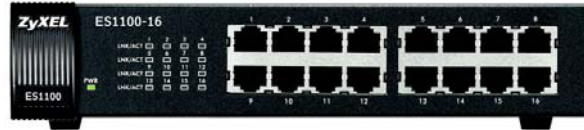

ES1100-16P



ES1100-24E



ES1100-24



The Switch has a built-in algorithm that automatically assigns priority to received packets.

1.2 Features

The following are the essential features of the Switch.

- Conforms to IEEE 802.3, 802.3u, and 802.3x standards.
- ES1000-8P and ES1100-16P support IEEE 802.3af PoE standard.
- Auto-negotiating 10/100 Mbps Ethernet RJ-45 ports (ES1000-8P and ES1100-16P include FE PoE ports).
- Auto-sensing crossover for all 10/100 Mbps Ethernet RJ-45 ports.
- Supports N-Way protocol for speed (10/100 Mbps) and duplex mode (Half/Full) auto-detection.
- Supports store-and-forward switching.
- Supports automatic address learning.
- Full wire speed forwarding rate.
- 802.1p CoS support.

- Link-on cable length power saving and link-down power saving.
- IEEE 802.3az (only ES1100-16/24E/24)
- Loop detection (only ES1100-16/24E/24)
- Jumbo frame (only ES1100-16/24E/24)
- Embedded MAC address table providing MAC addresses entries (ES1100-16, ES1100-16P, ES1100-24 and ES1100-24E provide 8K; ES1100-8P provides 1K).

Refer to [Chapter 4 on page 23](#) for the product specifications.

1.3 Applications

This section provides two network topology examples in which the Switch is used.


1.3.1 Standalone Workgroup

In this application, the Switch is an ideal solution for small networks where rapid growth can be expected in the near future.

The Switch can be used standalone for a group of heavy traffic users. You can connect computers directly to the Switch's port or connect other switches to the Switch.

In this example, all computers can share high-speed applications on the server. To expand the network, simply add more networking devices such as switches, routers, computers, print servers etc.

Figure 2 Standalone Workgroup Example

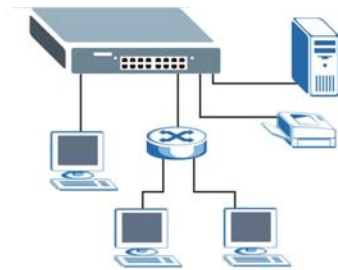


1.3.2 Bridging

With its large address table and high performance, the Switch is an ideal solution for department networks to connect to the corporate backbone or for connecting network segments.

The following figure depicts a typical segment bridge application of the Switch in an enterprise environment. The two networks (RD and Sales), the standalone server and the computers can all communicate with each other and share all network resources.

Figure 3 Bridging Example

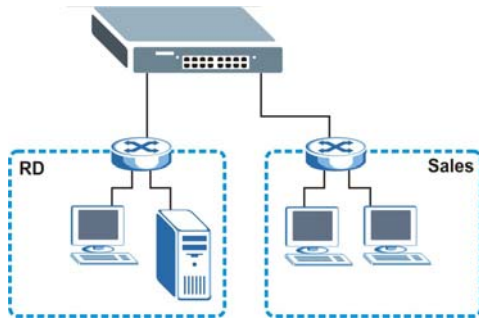

1.4 Power Over Ethernet (PoE)


The PoE function is available for ES1100-8P and ES1100-16P only.

ES1000-8P and ES1100-16P has FE PoE ports and supports IEEE 802.3af Power over Ethernet (PoE).

A powered device (PD) is a device such as an access point or a switch, that supports PoE (Power over Ethernet) so that it can receive power from another device through a 10/100Mbps Ethernet port.

In the figure below, the IP camera and IP phone get their power directly from the Switch. Aside from minimizing the need for cables and wires, PoE removes the hassle of trying to find a nearby electric outlet to power up devices.

Figure 4 Powered Device Examples

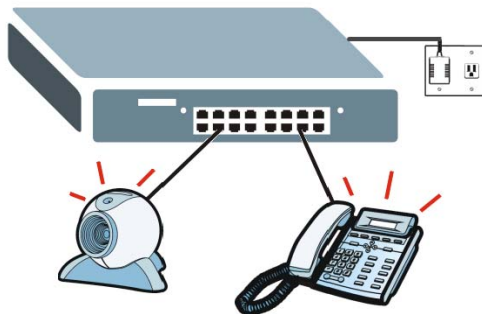

Hardware Description and Connection

2.1 Rear Panel

The three-pronged power receptacle is located on the rear panel of the Switch. Refer to the [Product Specifications on page 23](#) for power specification.


Figure 5 Rear Panel
ES1100-8P



ES1100-16




ES1100-16P

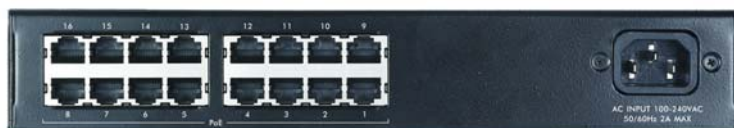

ES1100-24E



ES1100-24



2.1.1 Rear Panel Power Connection

Connect one end of the supplied power cord to the power receptacle on the back of the Switch and the other end to the appropriate power source.

For ES1100-16/24E, use the ON/ OFF switch to have the Switch power on or off.

2.2 Front Panel

The front panel of the Switch includes the auto-negotiating 10 Base-T/100 Base-TX RJ-45 ports and the LEDs.

2.2.1 RJ-45 Auto-negotiating Ports

The 10 Base-T/100 Base-TX RJ-45 ports are auto-negotiating and auto-crossover.

An auto-negotiating port can detect and adjust to the optimum Ethernet speed (10/100 Mbps) and duplex mode (full duplex or half duplex) of the connected device.

An auto-crossover (auto-MDI/MDI-X) port automatically works with a straight-through or crossover Ethernet cable.

2.2.2 Front Panel Connections

You can use unshielded twisted pair (UTP) or shielded twisted-pair (STP) Ethernet cables for RJ-45 ports. The following table describes the types of network cable used for the different connection speeds.

Table 2 Network Cable Types

SPEED	NETWORK CABLE TYPE
10 Mbps	Category 3, 4 or 5 UTP/STP
100 Mbps	Category 5 UTP/STP

You can use either crossover or straight-through cables for all the ports.

2.2.3 Front Panel LEDs

The LED Indicators give real-time information about the status of the Switch. The following tables provide descriptions of the LEDs.


Figure 6 LEDs for ES1100-16/24/24E



Table 3 LED Descriptions for ES1100-16/24/24E

LED	COLOR	STATUS	DESCRIPTION
PWR	Green	On	The Switch is on and receiving power.
		Off	The Switch is not receiving power.
LINK/ACT	Green	On	The port is connected to an Ethernet network at 10M or 100M speed.
		Blinking (Normal)	The port is receiving or transmitting data.
		Blinking (Slow)	The Ethernet network link is down due to loop detection.
		Off	The port is not connected to an Ethernet network.

Figure 7 LEDs for ES1100-8P/16P

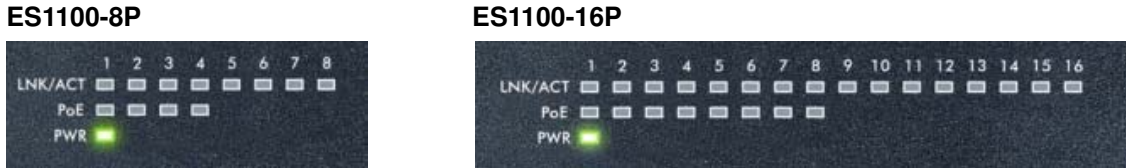

The following table describes the LEDs.

Table 4 LED Descriptions for ES1100-8P/16P

LED	COLOR	STATUS	DESCRIPTION
PWR	Green	On	The Switch is on and receiving power.
		Off	The Switch is not receiving power.
LINK/ACT	Green	On	The port is connected to an Ethernet network at 10M or 100M speed.
		Off	The port is not connected to an Ethernet network.
PoE	Green	On	Power is supplied to the FE PoE port.
		Off	Power is not supplied to the FE PoE port.

2.3 Hardware Installation

See the following table for a comparison of the hardware installation methods of each ES1100 model:

Table 5 ES1100 Series Installation Comparison Table

MODEL FEATURE	ES1100-8P	ES1100-16	ES1100-16P	ES1100-24	ES1100-24E
Desktop Device	✓	✓	✓		✓
Wall-mountable	✓	✓	✓		✓
Rack-mountable	✓	✓	✓	✓	✓

Note: Ask an authorized technician to attach the Switch to the rack/wall.

For ES1100-8P/16/16P/24E, you can place the Switch directly on top of your desk or have it rack-mounted. For ES1100-24, the size is suitable for rack-mounting and you can refer to [Section 2.3.2 on page 17](#) for instruction. Take note of the following:

- The Switch should have a minimum 25 mm space around it for ventilation.
- The Switch should be placed in a desk that has a level surface and that is able to support the weight of the Switch.

To start using it, simply connect the power cables and turn on the Switch.

2.3.1 Wall Mounting (for ES1100-8P/16/16P/24E)


Do the following to attach your Switch to a wall.

- 1 Screw the two screws provided with your Switch into the wall 150 mm apart (see the figure in step 2). Use screws with 6 mm ~ 8 mm (0.24" ~ 0.31") wide heads. Do not screw the screws all the way in to the wall; leave a small gap between the head of the screw and the wall.

The gap must be big enough for the screw heads to slide into the screw slots and the connection cables to run down the back of the Switch.

Note: Make sure the screws are securely fixed to the wall and strong enough to hold the weight of the Switch with the connection cables.

- 2 Align the holes on the back of the Switch with the screws on the wall. Hang the Switch on the screws.

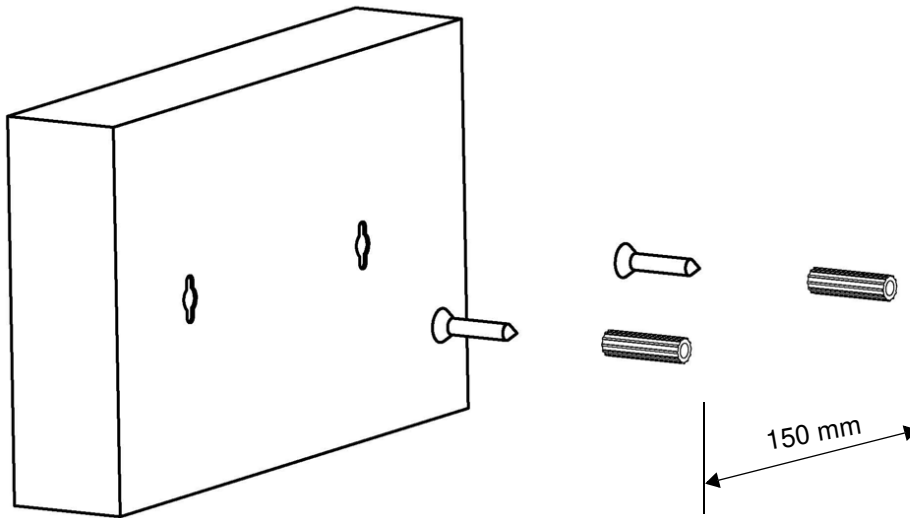

The Switch should be wall-mounted horizontally. The Switch's side panels with ventilation slots should not be facing up or down as this position is less safe.

2.3.2 Rack Mounting

The Switch can be mounted on an EIA standard size, 19-inch rack or in a wiring closet with other equipment. Follow the steps below to mount your Switch on a standard EIA rack using a rack-mounting kit.

Rack-mounted Installation Requirements

- Two mounting brackets.
- Eight M3 flat head screws and a # 2 Philips screwdriver.
- Four M5 flat head screws and a # 2 Philips screwdriver.

Failure to use the proper screws may damage the unit.

Precautions

- Make sure the rack will safely support the combined weight of all the equipment it contains.
- Make sure the position of the Switch does not make the rack unstable or top-heavy. Take all necessary precautions to anchor the rack securely before installing the unit.

Attaching the Mounting Brackets to the Switch

- 1 Position a mounting bracket on one side of the Switch, lining up the four screw holes on the bracket with the screw holes on the side of the Switch.

Figure 8 Attaching the Mounting Brackets (ES1100-8P/16/16P/24E)


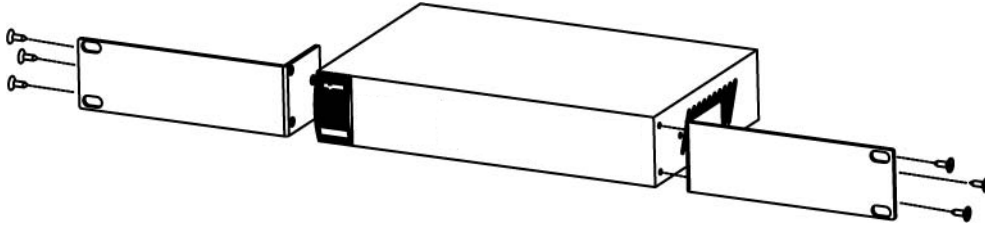


Figure 9 Attaching the Mounting Brackets (ES1100-24)

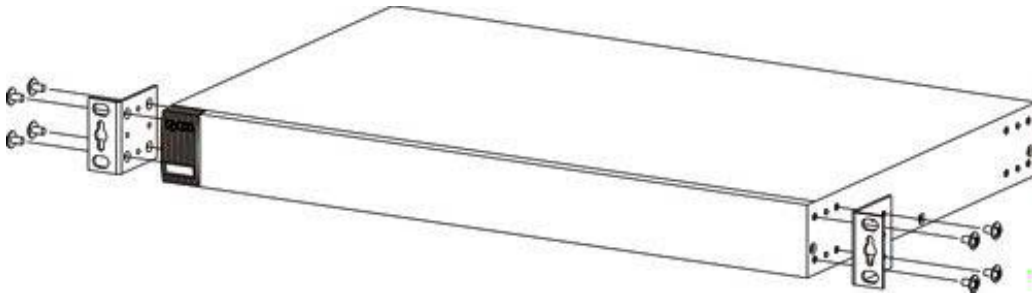

- 2 Using a #2 Philips screwdriver, install the M3 flat head screws through the mounting bracket holes into the Switch.
- 3 Repeat steps 1 and 2 to install the second mounting bracket on the other side of the Switch.
- 4 You may now mount the Switch on a rack. Proceed to the next section.

2.3.3 Mounting the Switch on a Rack

- 1 Position a mounting bracket (that is already attached to the Switch) on one side of the rack, lining up the two screw holes on the bracket with the screw holes on the side of the rack.

Figure 10 Mounting the Switch on a Rack (ES1100-8P/16/16P/24E)


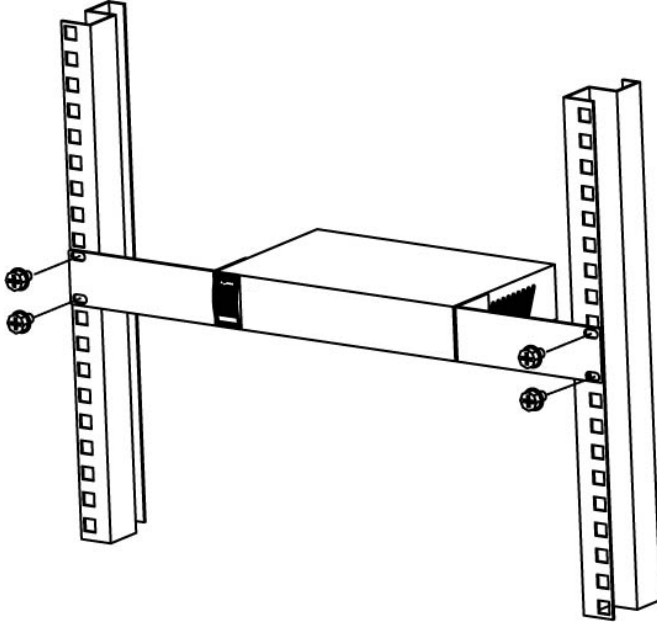


Figure 11 Mounting the Switch on a Rack (ES1100-24)

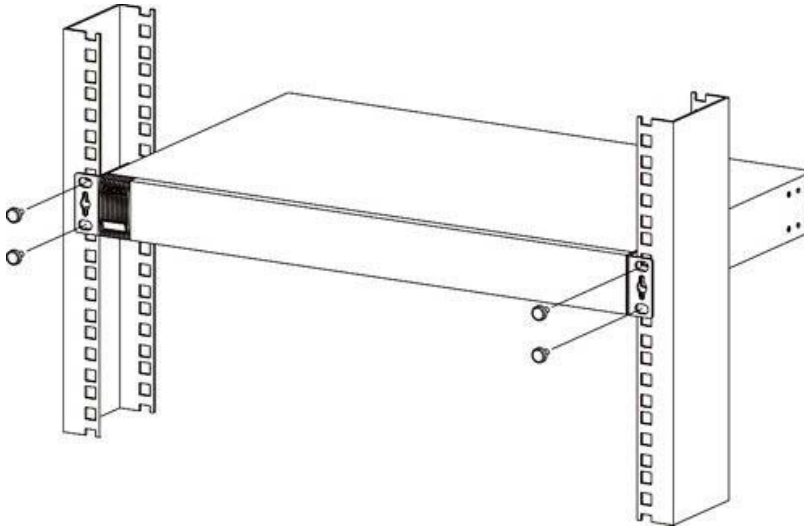

- 2 Using a #2 Philips screwdriver, install the M5 flat head screws through the mounting bracket holes into the rack.
- 3 Repeat steps 1 and 2 to attach the second mounting bracket on the other side of the rack.

Troubleshooting

This section describes common problems you may encounter with the Switch and possible solutions.

Troubleshoot the Switch using the LEDs to detect problems.

The PWR LED on the front panel does not light up.

- Check the connections from your Switch to the power source. Make sure you are using the supplied power cord and that you are using an appropriate power source. Refer to the product specifications.
- Make sure the power source is turned on and that the Switch is receiving sufficient power.
- If these steps fail to correct the problem, contact your local distributor for assistance.

The LINK/ ACT LED does not light up when a device is connected.

- Verify that the attached device(s) is turned on and properly connected to your Switch.
- Make sure the network adapters are working on the attached devices.
- Verify that proper network cable type is used and its length does not exceed 100 meters. For more information on network cable types, see [Section 3.1 on page 21](#).

The PWR LED is off and/or power is not being supplied to my PoE-enabled device. (For ES1100-8P and ES1100-16P)

- Check to see that the power cord is securely connected to the ES1100-8P/16P and an appropriate power source. Make sure the power source is on and functioning properly.
- Check that the Ethernet cables are connected properly and that you are using the correct type of Ethernet cable. Contact your local distributor if the problem persists.

3.1 Improper Network Cabling and Topology

Improper network cabling or topology setup is a common cause of poor network performance or even network failure.

Figure 12 Troubleshooting Improper Network Cabling and Topology

PROBLEM	CORRECTIVE ACTION
Faulty cables	Using faulty network cables may affect data rates and have an impact on your network performance. Replace with new standard network cables.
Non-standard network cables	Non-standard cables may increase the number of network collisions and cause other network problems that affect your network performance. Refer to Section 2.2.2 on page 14 for more information on network cable types.
Cabling Length	If you use longer cables than are needed, transmission quality may be affected. The network cables should not be longer than the limit of 100 meters.
Too many hubs between the computers in the network	Too many hubs (or repeaters) between the connected computers in the network may increase the number of network collision or other network problems. Remove unnecessary hubs from the network.
A loop in the data path	A data path loop forms when there is more than one path or route between two networked computers. This results in broadcast storms that will severely affect your network performance. Make sure there are no loops in your network topology.

Product Specifications

These are the product specifications.

Table 6 Product Specifications

Dimension	ES1100-8P/16P: 262mm(W) x 184mm(D) x 41mm(H) ES1100-16: 216 mm (W) x 133 mm (D) x 42 mm (H) ES1100-24: 441 mm (W) x 131 mm (D) x 44 mm (H) ES1100-24E: 267 mm (W) x 162 mm (D) x 42 mm (H)
Weight	ES1100-8P: 1.4 kg ES1100-16: 0.8 kg ES1100-16P: 1.7 kg ES1100-24: 1.5 kg ES1100-24E: 1.3 kg
Standard	IEEE802.3 10 BASE-T IEEE802.3u 100 BASE-TX IEEE802.3x full-duplex flow control IEEE802.3az (EEE) (ES1100-16/24/24E only) IEEE 802.1p Class of Service IEEE 802.3af PoE standard (ES1000-8P and ES1100-16P)
Interface	ES1100-8P: 8 x 10/100 Mbps auto MDI/MDI-X RJ-45 switching port (including 4 FE PoE ports) ES1100-16P: 16 x 10/100 Mbps auto MDI/MDI-X RJ-45 switch port (including 8 FE PoE ports) ES1100-16: 16 x 10/100 Mbps auto MDI/MDI-X RJ-45 switching ports ES1100-24/24E: 24 x 10/100 Mbps auto MDI/MDI-X RJ-45 switching ports
Cable Connections	RJ-45 (10 BASE-T): Category 3,4,5 UTP/STP RJ-45 (100 BASE-TX): Category 5 UTP/STP
Network Data Rate	10/100 Mbps Auto-negotiation
Transmission Mode	10/100 Mbps: Full-duplex, Half-duplex
Data Forwarding Rate	14880 pps for 10 Base-T 148800 pps for 100 Base-Tx
LED Indications	System: PWR Ports: LINK/ACT PoE ports: PoE (for ES1100-8P/16P)

Table 6 Product Specifications (continued)

Memory	ES1100-8P: 1K MAC entries, 96 K bytes buffer Memory ES1100-16/24/24E: 8K MAC entries, 256 K bytes buffer Memory ES1100-16P: 8K MAC entries, 160 K bytes buffer Memory
Jumbo Frame	Up to 2048 bytes (for ES1100-16/24/24E)
Operating Temperature	0 ~ 50 °C
Storage Temperature	-40 ~ 70 °C
Operating Humidity	10 % - 95 % (non-condensing)
PoE Power Budget	ES1100-8P: 64W ES1100-16P: 130W
Power Supply	Power rating: 100-240 V ~ 50/60 Hz 0.5 A Max Power consumption: • ES1100-8P: 74.9W max. • ES1100-16: 2.65W max. • ES1100-16P: 161.6 W max. • ES1100-24: 4.05W max. • ES1100-24E: 4.05W max.
Safety	EN 60950-1
EMC	FCC Part15 (Class A) CE EMC (Class A)

Legal Information

Copyright

Copyright © 2011 by ZyXEL Communications Corporation.

The contents of this publication may not be reproduced in any part or as a whole, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without the prior written permission of ZyXEL Communications Corporation.

Published by ZyXEL Communications Corporation. All rights reserved.

Disclaimer

ZyXEL does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent rights nor the patent rights of others. ZyXEL further reserves the right to make changes in any products described herein without notice. This publication is subject to change without notice.

Certifications

Federal Communications Commission (FCC) Interference Statement

This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operations.

FCC Warning

This device has been tested and found to comply with the limits for a Class A digital switch, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial environment. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this device in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning:

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Notices

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Viewing Certifications

- 1 Go to <http://www.zyxel.com>.
- 2 Select your product on the ZyXEL home page to go to that product's page.
- 3 Select the certification you wish to view from this page.

ZyXEL Limited Warranty

ZyXEL warrants to the original end user (purchaser) that this product is free from any defects in materials or workmanship for a period of up to two years from the date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, ZyXEL will, at its discretion, repair or replace the defective products or components without charge for either parts or labor, and to whatever extent it shall deem necessary to restore the product or components to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal or higher value, and will be solely at the discretion of ZyXEL. This warranty shall not apply if the product has been modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.

Note

Repair or replacement, as provided under this warranty, is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular use or purpose. ZyXEL shall in no event be held liable for indirect or consequential damages of any kind to the purchaser.

To obtain the services of this warranty, contact your vendor. You may also refer to the warranty policy for the region in which you bought the device at http://www.zyxel.com/web/support_warranty_info.php.

Registration

Register your product online to receive e-mail notices of firmware upgrades and information at www.zyxel.com for global products, or at www.us.zyxel.com for North American products.

Index

A

Applications [11](#)
 Segment Bridge [11](#)
auto-negotiating ports [14](#)

C

Cabling Length [21](#)
certifications [25](#)
 notices [26](#)
 viewing [26](#)
copyright [25](#)

D

Data path loop [21](#)
disclaimer [25](#)

F

Faulty cables [21](#)
FCC interference statement [25](#)
Front Panel [14](#)
Front Panel Connections [14](#)

I

installation
 precautions [17](#)

L

LED Descriptions
 LK/ACT [15](#)
 PWR [15](#)

M

mounting brackets [18](#)

N

network cable
 crossover [14](#)
 straight-through [14](#)
Network Cable Types [14](#)
Non-standard network cables [21](#)

P

product registration [26](#)
Product specification [23](#)

R

rack mounting [17](#)
Rear Panel [13](#)
Rear Panel Power Connection [13](#)
registration
 product [26](#)

S

safety warnings [6](#)

Standalone Workgroup [11](#)
syntax conventions [5](#)

T

Troubleshooting
Improper Network Cabling and Topology [21](#)

W

wall mounting [16](#)
warranty [26](#)
note [26](#)

