




Installation and Assembly: **Universal Tablet Mount**

Models: PTM400, PTM400S
PTM400-W, PTM400S-W

Max Load Capacity:
5 lbs (2.2 kg)

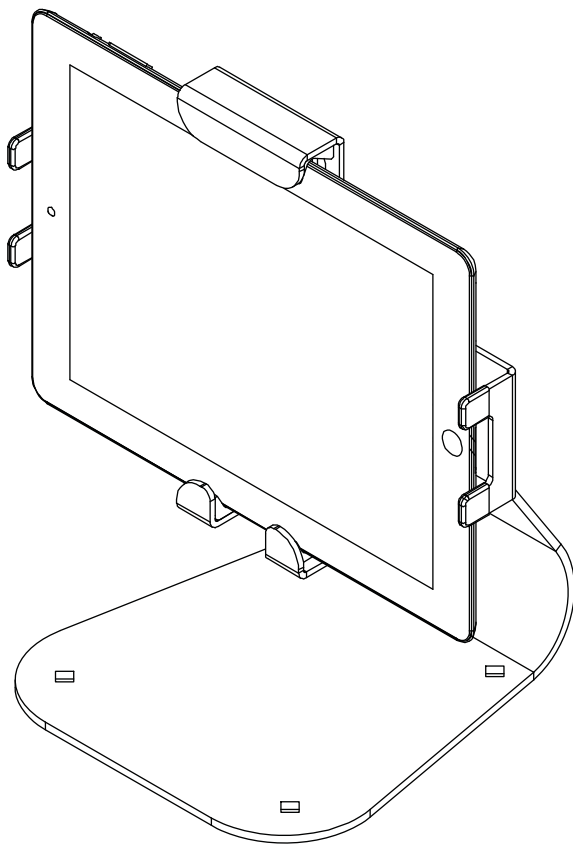

Features:

- Adjustable height and width allows mount to fit virtually any tablet
- Quick and easy installation onto desktop
- 30° of tilt and 360° of roll allows for a variety of positions in order to achieve the perfect viewing angle
- Theft resistant security kit available
- Allows for cable management

NOTE: Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Do not begin to install your Peerless product until you have read and understood the instructions and warnings contained in this Installation Sheet. If you have any questions regarding any of the instructions or warnings, for US customers please call Peerless customer care at 1-800-865-2112, for all international customers, please contact your local distributor.
- This product should only be installed by someone of good mechanical aptitude, has experience with basic building construction, and fully understands these instructions.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- Never exceed the Maximum Load Capacity. See page one.
- Tighten screws firmly, but do not overtighten. Overtightening can damage the items, greatly reducing their holding power.
- This product is intended for indoor use only. Use of this product outdoors could lead to product failure and personal injury.

Tools Needed for Assembly

- phillips screwdriver

Accessories

- ACC954 (security fasteners kit)


Table of Contents

Parts List.....	3
Cradle Assembly.....	4-5
Attaching Cradle Assembly to Mount.....	6

Before you begin, make sure all parts shown are included with your product.

Parts List	PTM400		PTM400-W		PTM400S		PTM400S-W	
	Qty.	Part #	Qty.	Part #	Qty.	Part #	Qty.	Part #
A stand	1	021-P1050		021-2050	1	021-P1050		021-2050
B side clamp	2	021-P1052		021-2052	2	021-P1052		021-2052
C top clamp	1	021-P1054		021-2054	1	021-P1054		021-2054
D bottom clamp	1	021-P1069		021-2069	1	021-P1069		021-2069
E plastic cover	2	590-1347		590-2347	2	590-1347		590-2347
F washer	7	540-2003		540-2003	7	540-2003		540-2003
G M5 x 8mm self tapping phillips screw	11	520-1167		520-2167	7	520-1167		520-2167
H 1/4" spacer	3	600-1215		600-1215	3	600-1215		600-1215
I adhesive foam pad	4	570-0045		570-0045	4	570-0045		570-0045
J M5 x 8mm socket pin screws	-	-		-	4	520-1062		520-2038
K security allen wrench	-	-		-	1	560-9646		560-9646

Parts may appear slightly different than illustrated.

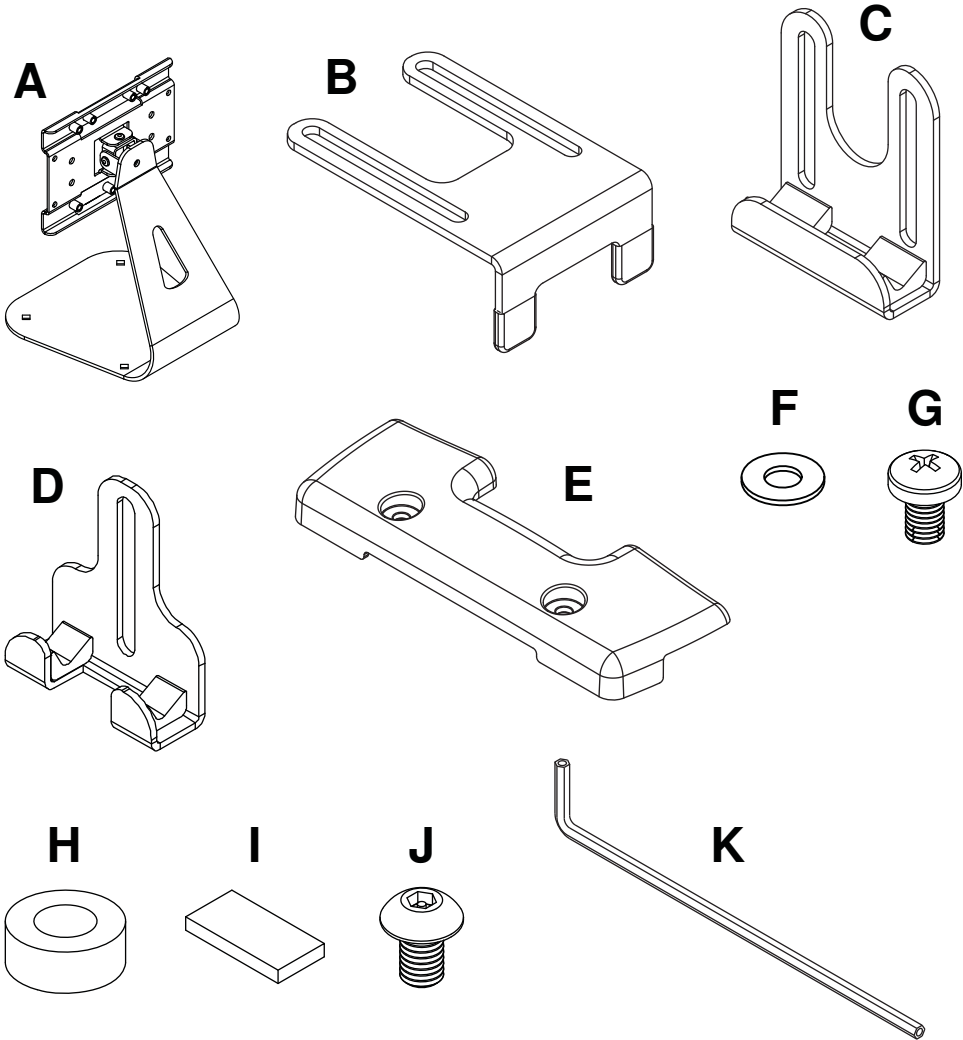

- 1** Fit top clamp (C) and bottom clamp (D) into stand (A) and over pins as shown in figures 1.1 and 1.2.

fig. 1.1



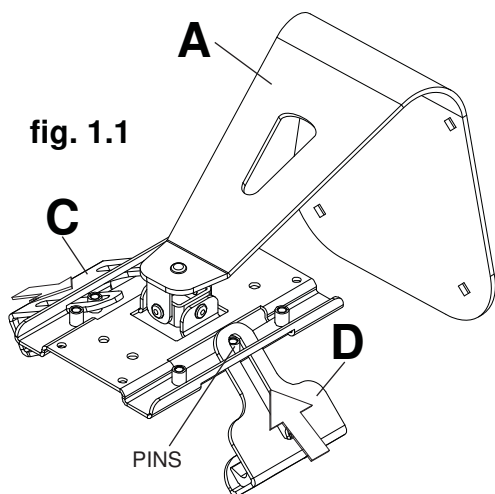



fig. 1.2

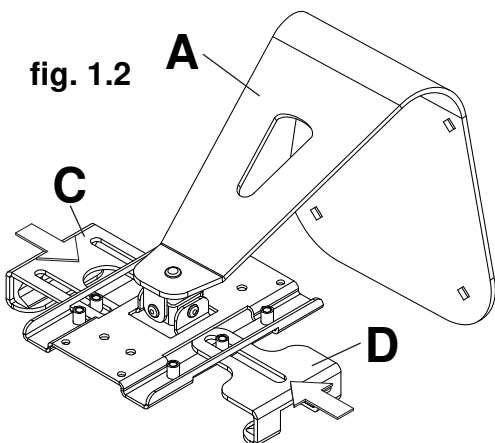


- 2** Secure with three 1/4" spacers (H), four washers (F) and three M5 x 8 mm self tapping phillips screws (G). Do not tighten screws.

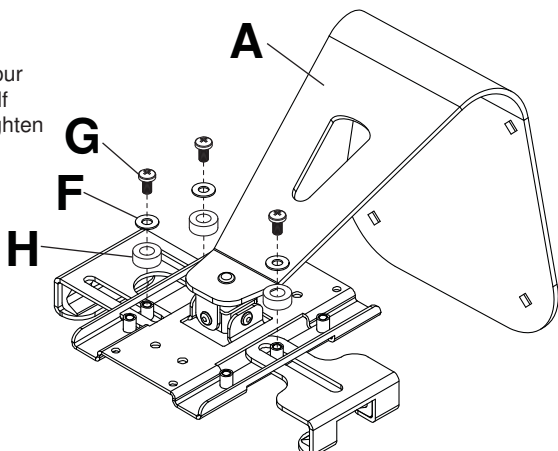


- 3** Secure two side clamps (**B**) to back of stand with four washers (**F**) and four M5 x 8 mm self tapping phillips screws (**G**). Do not tighten screws.

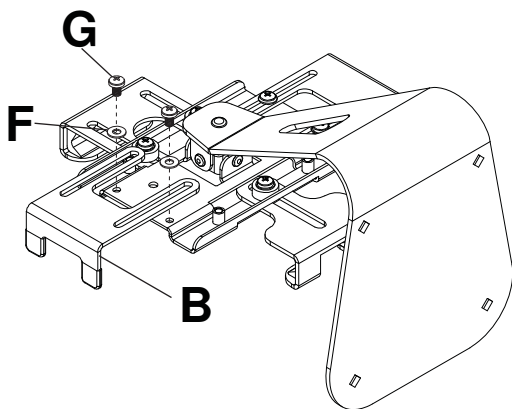

- 4** Apply four adhesive foam pads (**I**) to front of stand as shown.

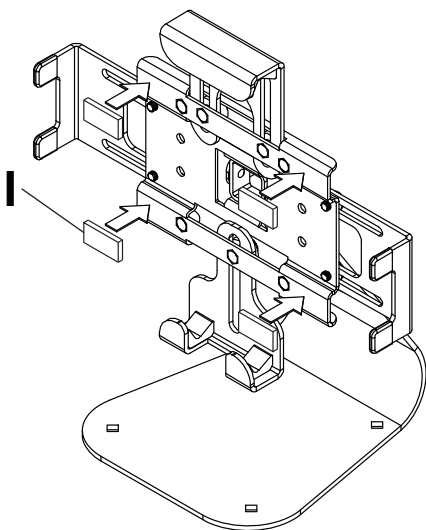


- 5** To prevent scratching the tablet, set a cloth on a flat, level surface. Place tablet face side down, adjust clamps around tablet, then tighten all seven screws.

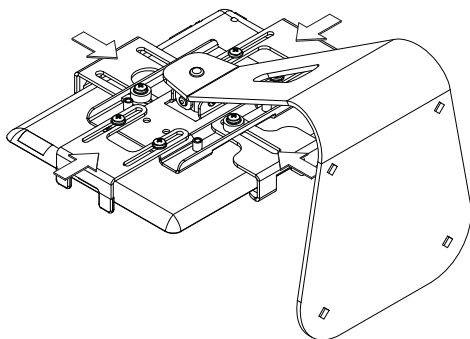

- 6** Install two plastic covers (**E**) to back of stand (**A**) with four M5 x 8mm screws (**G**).

For security installation tighten M5 x 8mm socket pin screw (**J**) using security allen wrench (**K**) to lock display to tilt assembly.

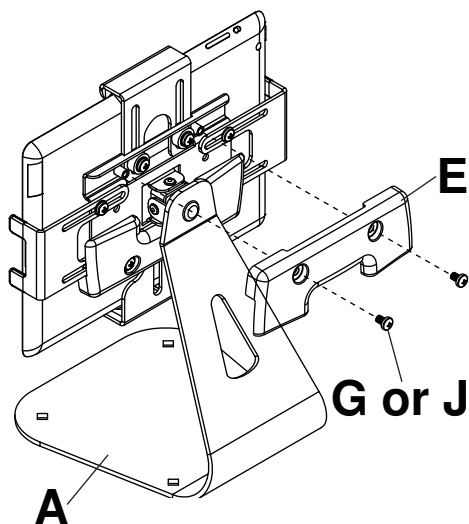

THIS PAGE INTENTIONALLY LEFT BLANK

LIMITED FIVE-YEAR WARRANTY

Peerless Industries, Inc. ("Peerless") warrants to original end-users of Peerless® products will be free from defects in material and workmanship, under normal use, for a period of five years from the date of purchase by the original end-user (but in no case longer than six years after the date of the product's manufacture).

At its option, Peerless will repair or replace, or refund the purchase price of, any product which fails to conform with this warranty.

In no event shall the duration of any implied warranty of merchantability or fitness for a particular purpose be longer than the period of the applicable express warranty set forth above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty does not cover damage caused by (a) service or repairs by the customer or a person who is not authorized for such service or repairs by Peerless, (b) the failure to utilize proper packing when returning the product, (c) incorrect installation or the failure to follow Peerless' instructions or warnings when installing, using or storing the product, or (d) misuse or accident, in transit or otherwise, including in cases of third party actions and force majeure.

In no event shall Peerless be liable for incidental or consequential damages or damages arising from the theft of any product, whether or not secured by a security device which may be included with the Peerless® product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty is in lieu of all other warranties, expressed or implied, and is the sole remedy with respect to product defects. No dealer, distributor, installer or other person is authorized to modify or extend this Limited Warranty or impose any obligation on Peerless in connection with the sale of any Peerless® product.

This warranty gives specific legal rights, and you may also have other rights which vary from state to state.


www.peerless-av.com

© 2012 Peerless Industries, Inc.